

Hanging Screen Installation Guide

Hanging Screens:

Canopy, Cell, Vine, Form, Bloom, Pulse, Rain. All patterns are available in 12mm or 24mm board thickness



Mounting Hardware Types:

Ceiling Grid Clip (AH-CGSAD12SL + AH-CGSAD24SL) or Self Tapping Screw Plug Fixing (AH-STASAD12SL + AH-CGSAD24SL)



AH-CGSAD12SL For 12mm Thickness



AH-CGSAD24SL For 24mm Thickness




AH-STASAD12SL For 12mm Thickness



AH-STASAD24SL For 24mm Thickness

Tools & Materials Required:

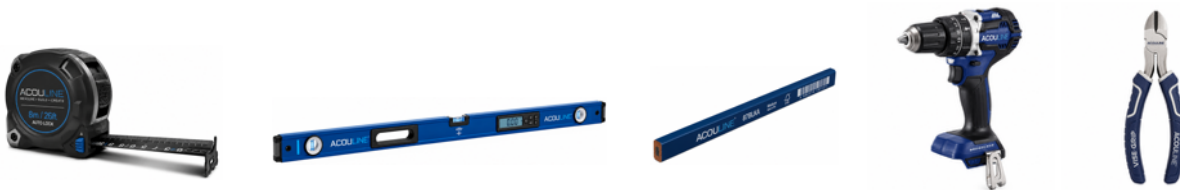

Tape measure, spirit level or laser level, pencil, drill, wire cutters, and 5mm drill bit

Hanging Screen Installation Guide

Ceiling Grid Installation Process:



1.



2.



3.



4.




1. Using a tape measure and/or laser level, mark the ceiling locations where the centres of each suspension wire (**B**) will be installed, based on the desired position of your Acouline Hanging Screen.
2. Attach wire gripper (**D**) to ceiling grid clip (**A**). Using a twisting motion, secure the ceiling grid clip to a standard suspended T-grid ceiling.
3. Attach saddle clip (**C**) through the pre-drilled holes at the top of the hanging screen.
4. Feed wire (**B**) through the wire gripper until the desired height is achieved. Adjust each wire gradually and use a spirit level to ensure the hanging screen is level. Trim any excess wire using cutting pliers.

Note: If using a ceiling grid clip, always confirm that the suspended ceiling grid has sufficient load capacity to support the total hanging weight. If the grid's load capacity is insufficient, use the self-tapping hanging kit and secure it to a suitable structural support within the ceiling

Hanging Screen Installation Guide

Self Tapping Screw Plug Fix Installation Process:

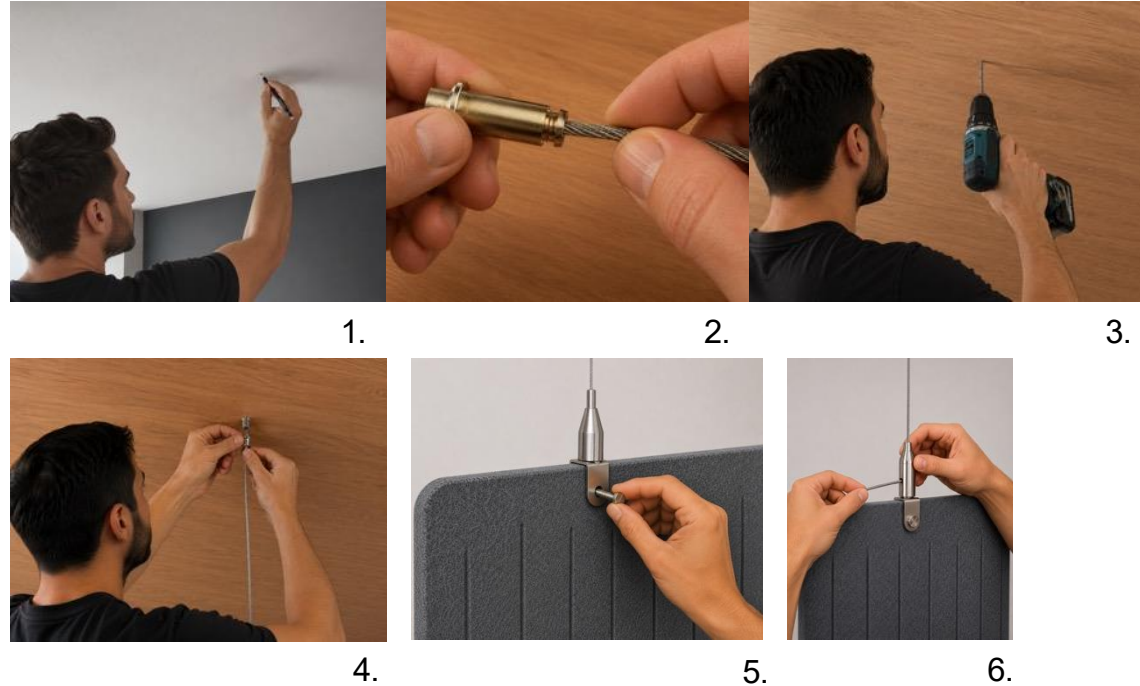

1. Using a tape measure and/or laser level, mark the ceiling locations where the centres of each self-tapping fixing (**B**) will be installed, based on the desired position of your Acouline Hanging Screen.
2. Unscrew the plug fixing from the top of part (**B**).
3. Drill a **5mm** hole and insert anchor (**D**) (or another suitable ceiling anchor appropriate for the substrate). Secure it using screw (**C**) into top piece of (**B**) and attach it to the ceiling.
4. Reattach the top section of part (**B**)
5. Attach saddle clip (**A**) through the pre-drilled holes at the top of the hanging screen.
6. Feed wire (**B**) through the wire gripper attached to (**A**) until the desired height is achieved. Adjust each wire gradually and use a spirit level to ensure the hanging screen is level. Trim any excess wire using cutting pliers.

Hanging Screen Installation Guide

Notes:

All hanging hardware kits are sold separately and supplied as individual units.
Each hanging screen requires **2 hanging kits**.