

# Boost Light Single Sided Height Adjustable Workstation Frame

## Instruction Manual

### Table of Contents

Component parts ..... 2


Assembly Instructions ..... 3

Use Instructions ..... 10


Troubleshooting ..... 12

Important Safety Instructions ..... 13

Advanced Programming ..... 14

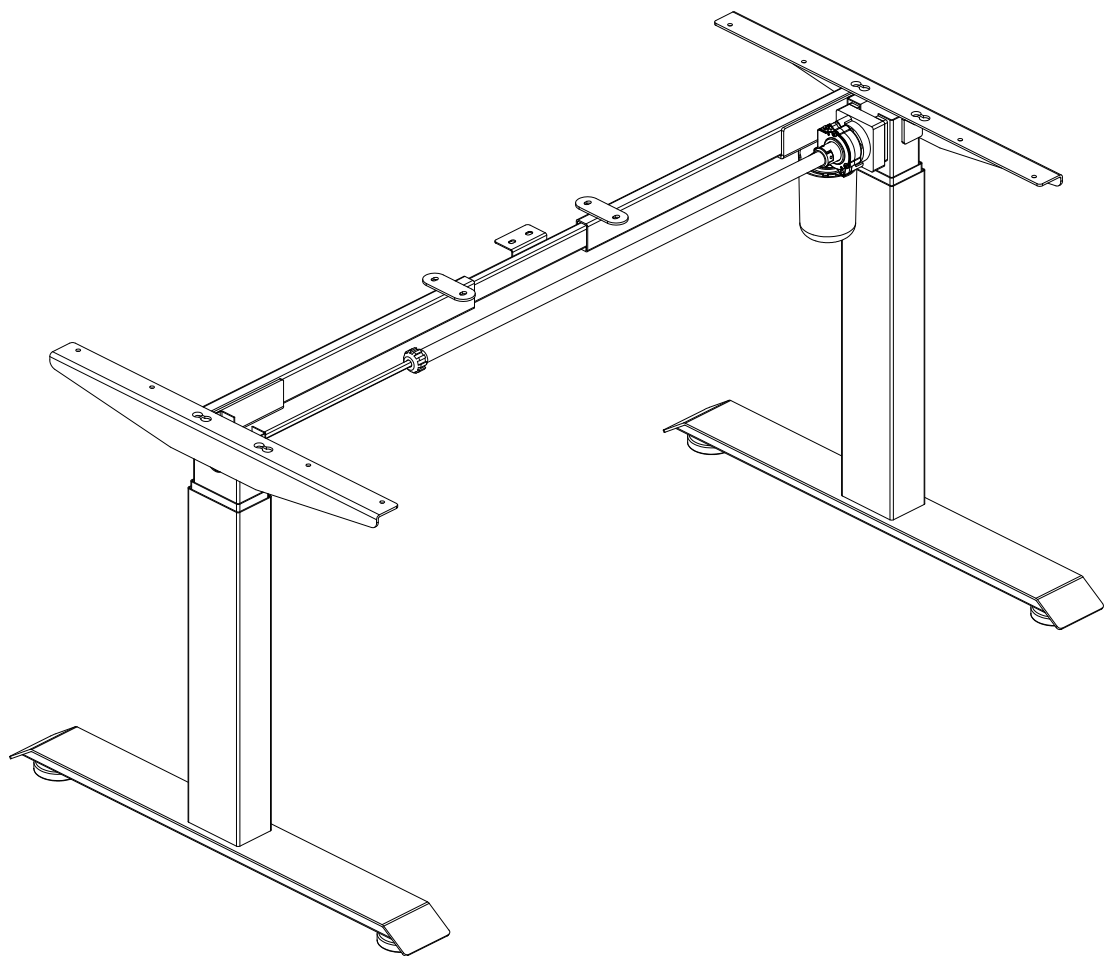

## Component parts

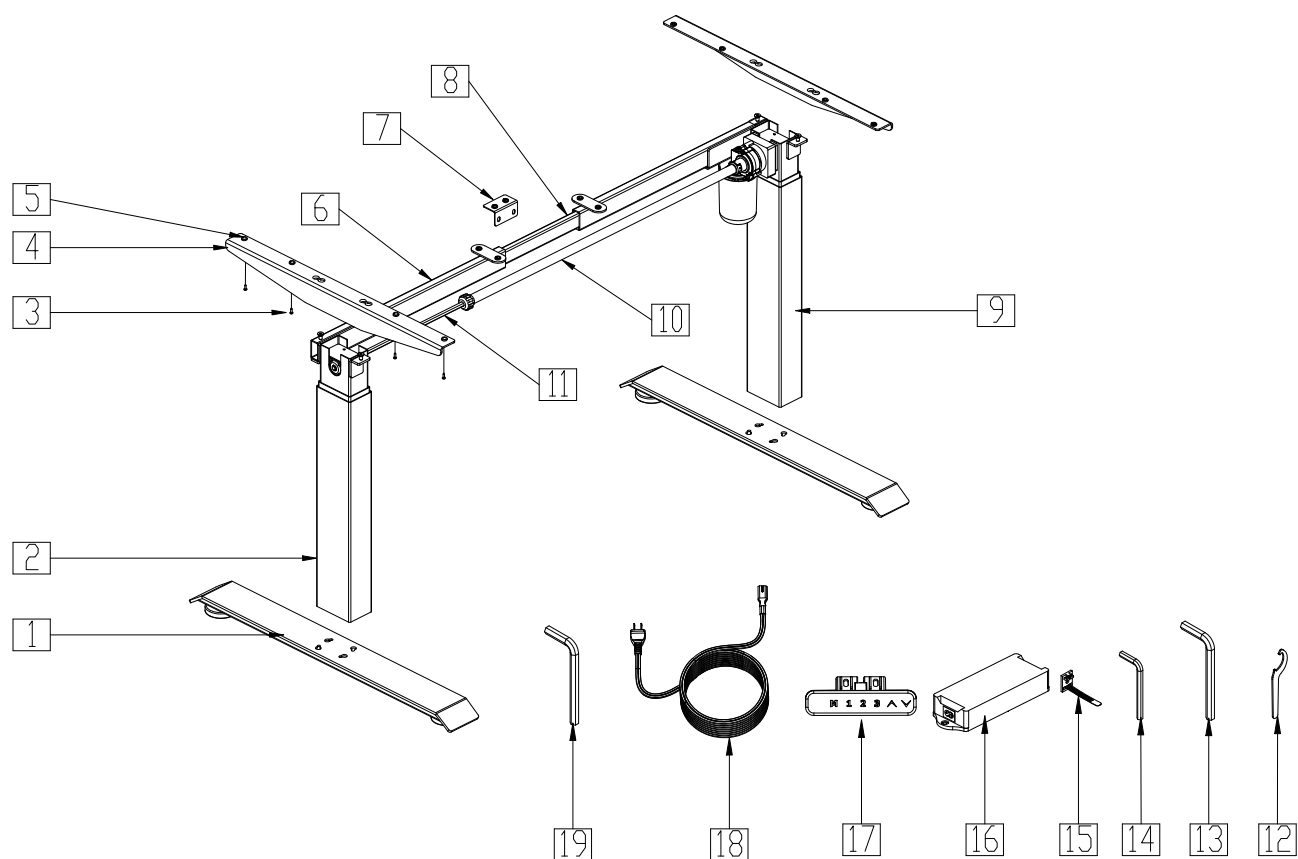


| NO. | Component Name         | PCS | NO. | Component Name    | PCS |
|-----|------------------------|-----|-----|-------------------|-----|
| 1   | Table feet             | 2   | 11  | Hexagon steel rod | 1   |
| 2   | Lifting column( right) | 1   | 12  | Hook spanner      |     |
| 3   | Screw:ST5x18           | 24  | 13  | Hex wrench(4mm)   | 1   |
| 4   | Side bracket           | 2   | 14  | Hex wrench(2.5mm) | 1   |
| 5   | Rubber pad             | 14  | 15  | Cable Tie         | 5   |
| 6   | Top frame              | 2   | 16  | Control Box       | 1   |
| 7   | Centre bracket         | 1   | 17  | Handset           | 1   |
| 8   | Center rails           | 1   | 18  | power cord        | 1   |
| 9   | Lifting column(left)   | 1   | 19  | Hex wrench(5mm)   | 1   |
| 10  | Transmission AL tube   | 1   |     |                   |     |

## Assembly Instructions


### Step 1

Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.  
Fix the centre bracket with 2 pcs screws M6x10

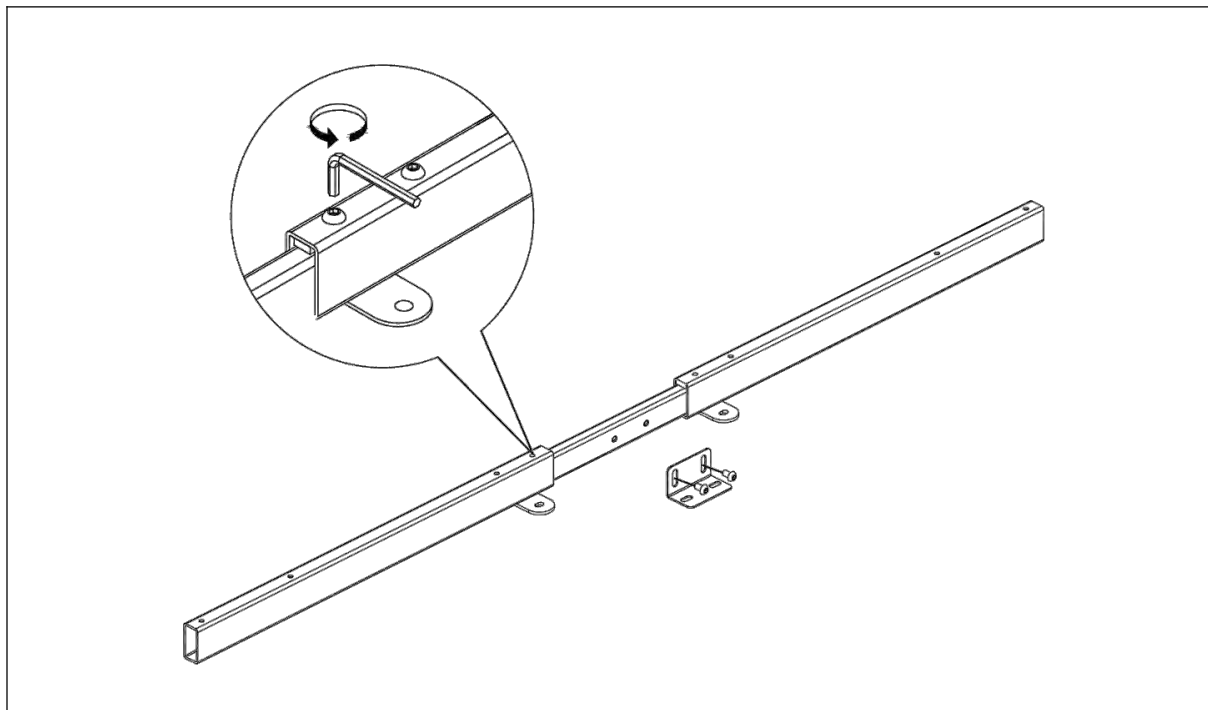


### Step 2

Inset the lifting column to the top frame, then tighten the pre-installed bolts

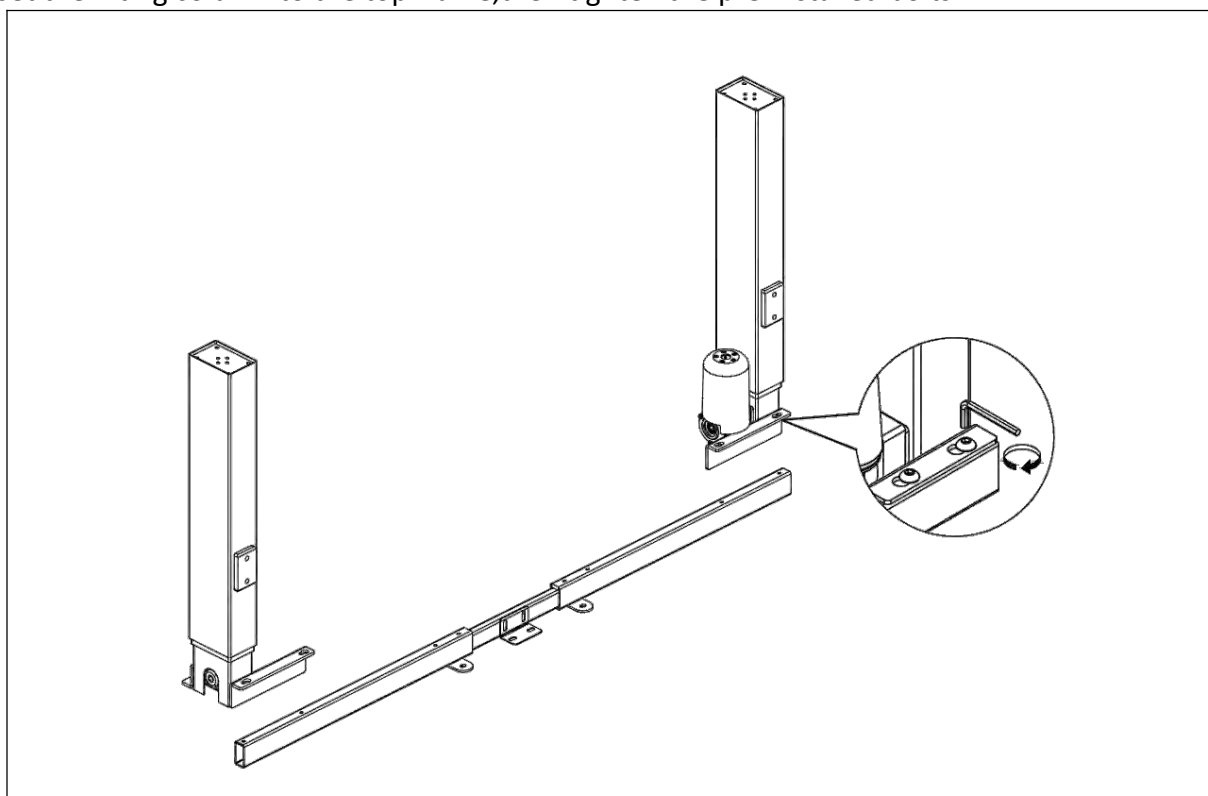


### Step 3

Place the table feet on the lifting column and rotate it and make it align, then tighten the pre-installed bolt.

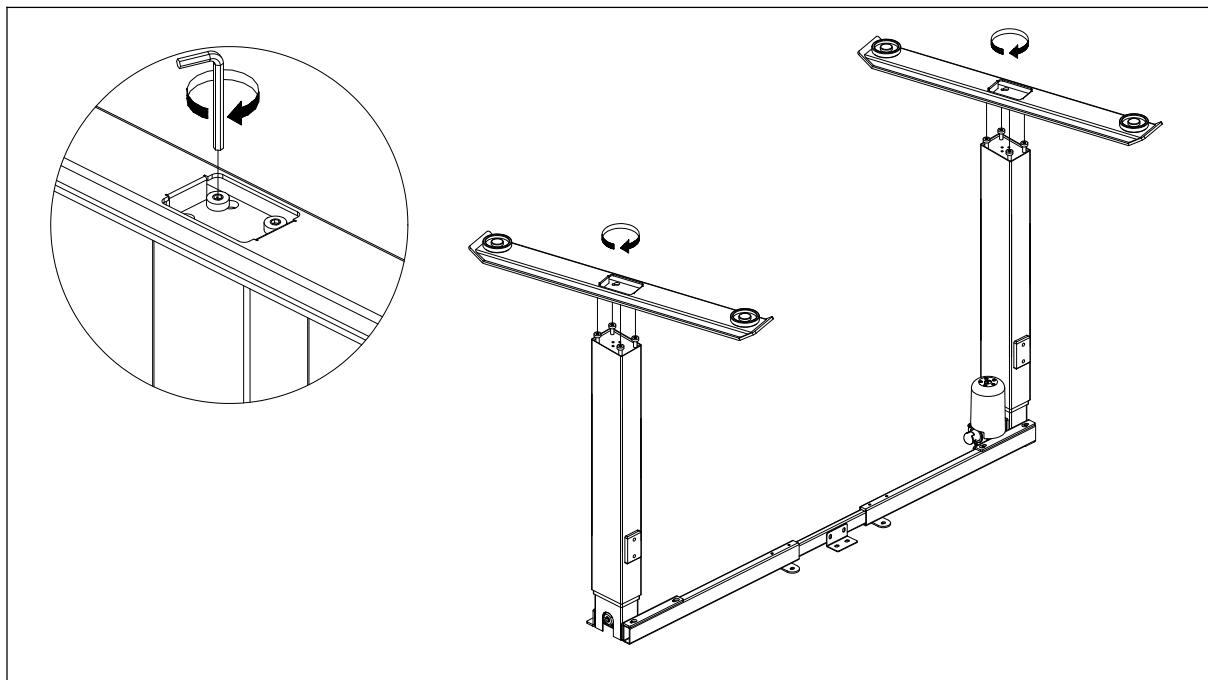

### Step 4


Place the side bracket on the top frame and tighten the bolts.

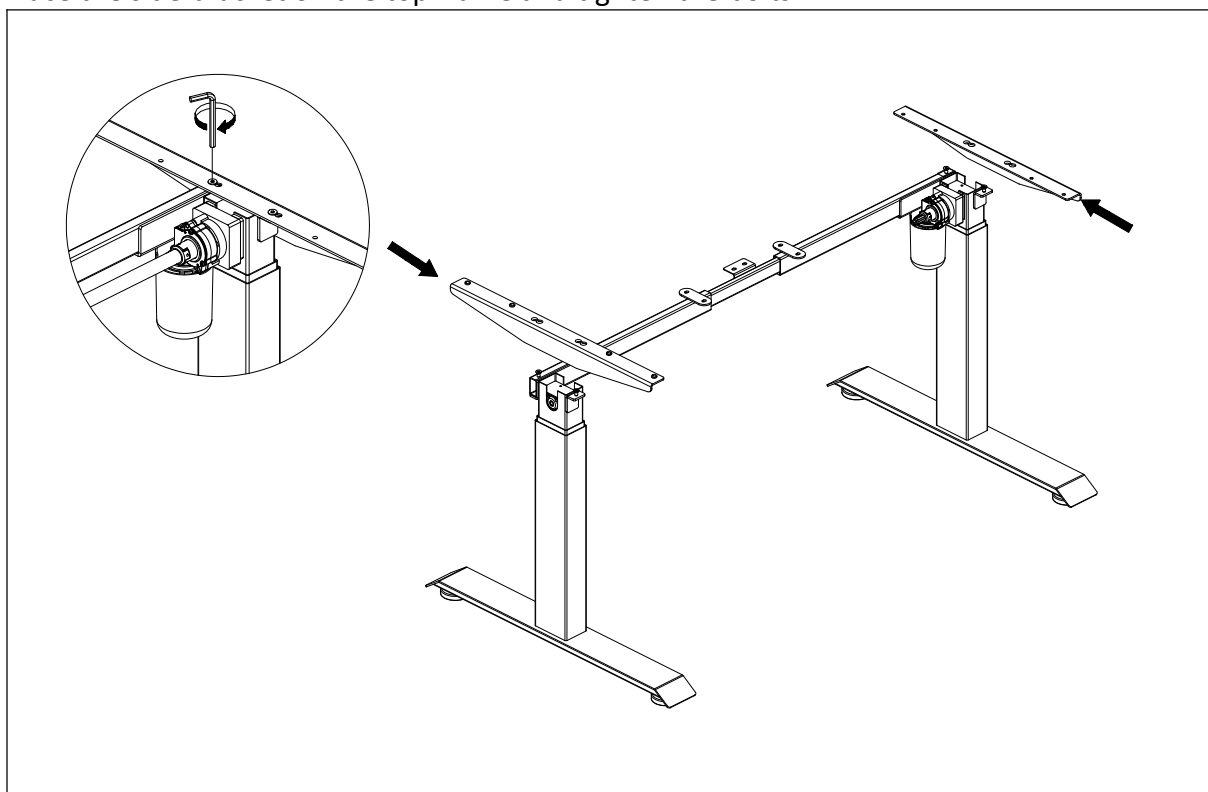

### Step 5

Mount the tabletop and fix it with 18 pcs screws ST5x18;


Insert the hexagon steel rod to one lifting column, Tighten the nut of the transmission AL tube. Fix the control box and handset with 2 pcs ST5x18 screws

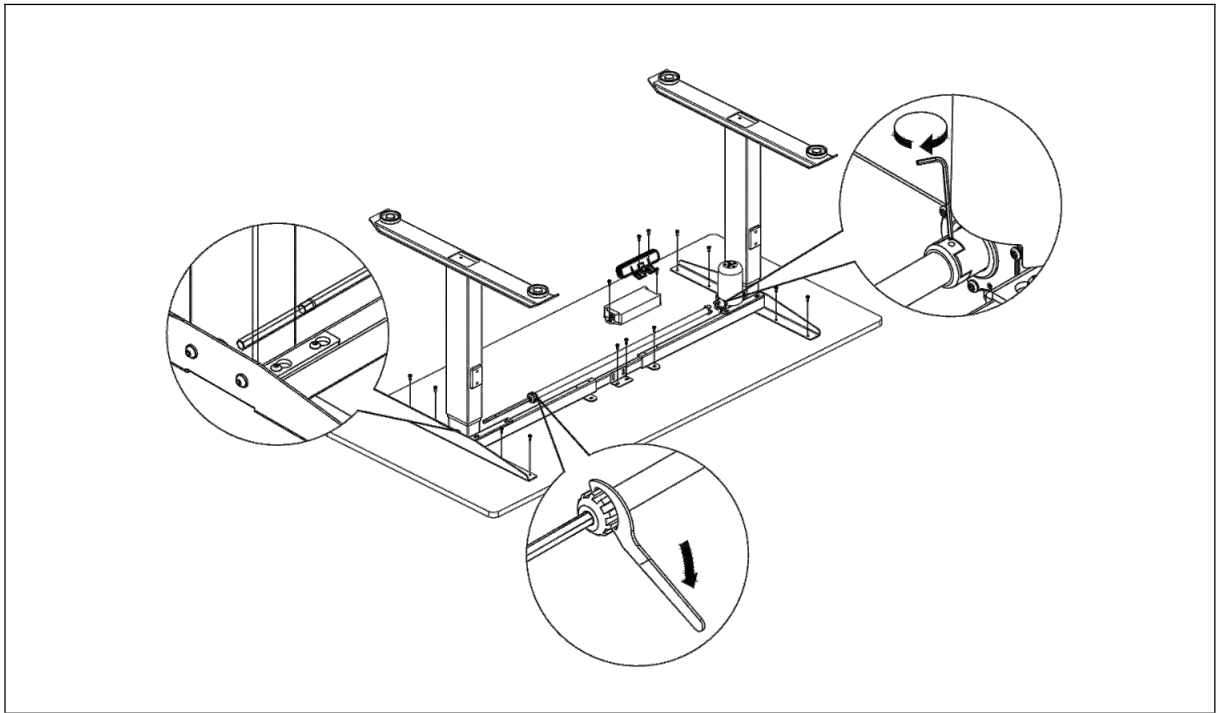

### Step 6

Connect all the cables, then tighten the bolts on the frame


Zip the cables with cable tie.

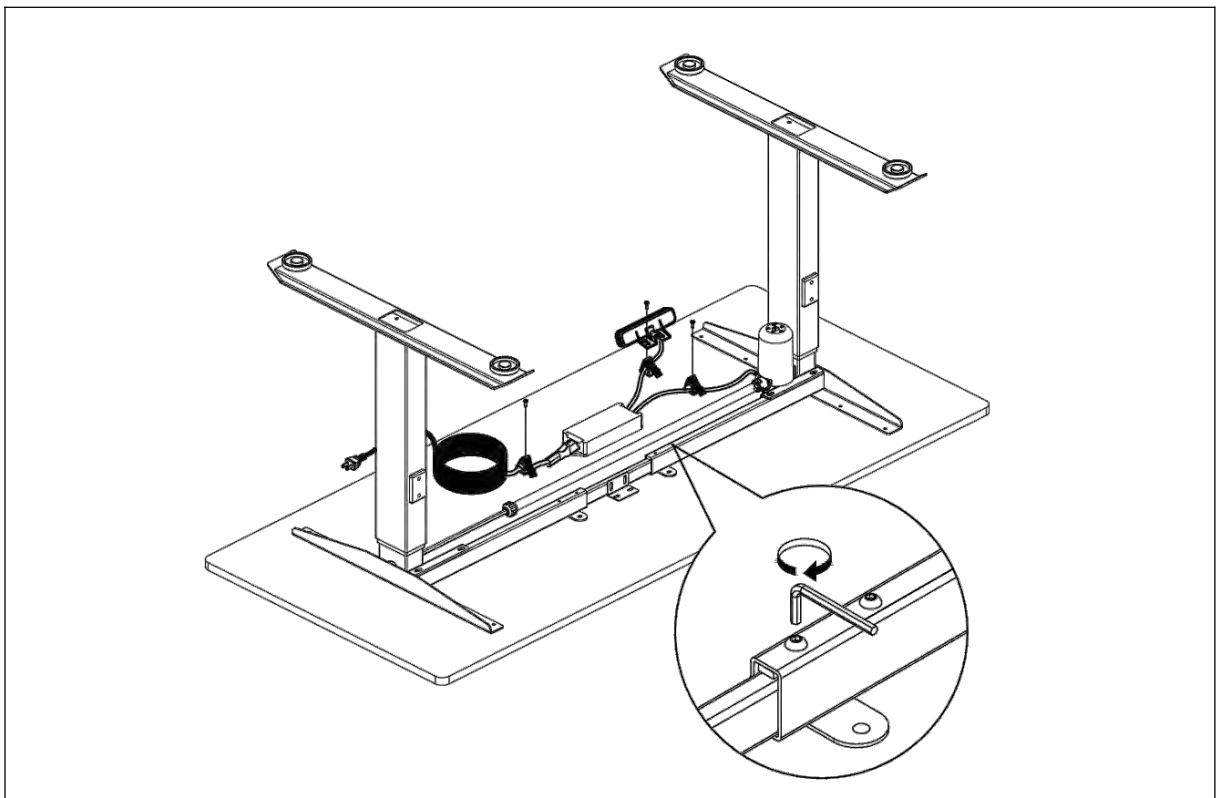

## Cable tray installation


### Step 1

- Fix the cable tray(B2-SSCT ) to the cable tray arms(B2-SSARM) with 8 pcs M6x10 screws.

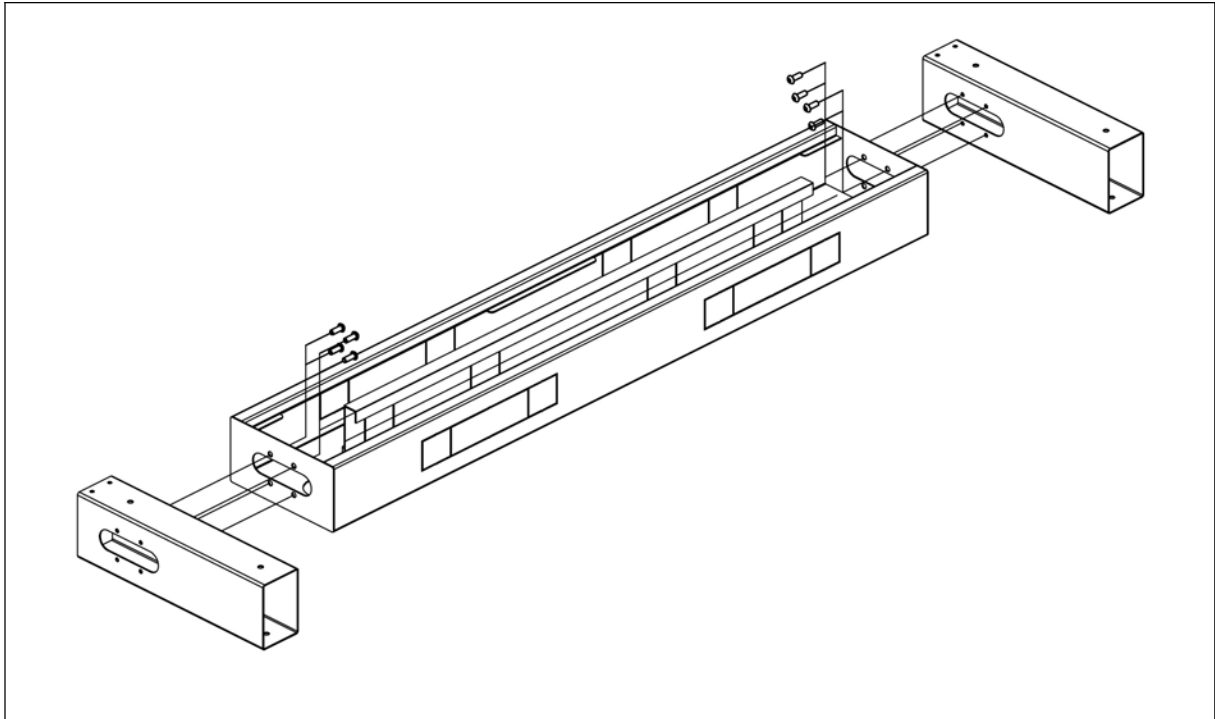

### Step 2


- Install the U brackets to the desk frame with 4 pcs M8x10 screws.
- Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

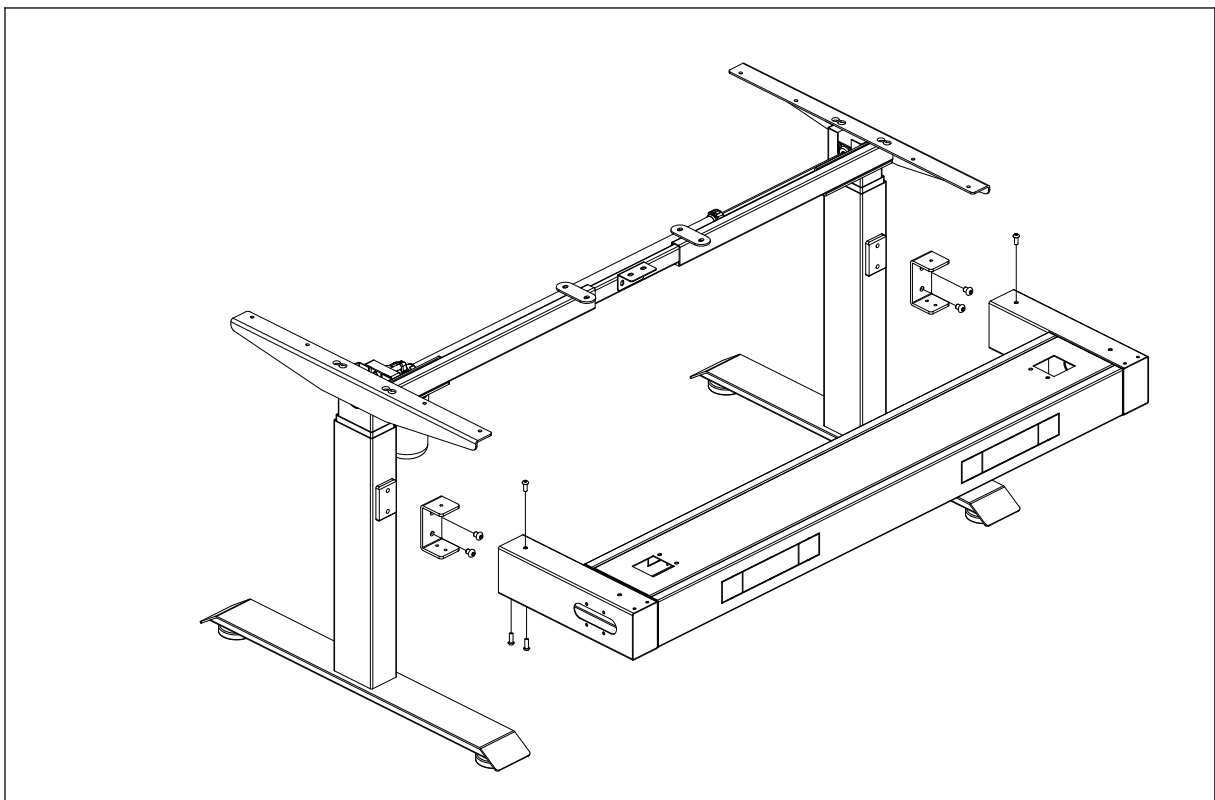

## Screen panel installation ( Shush30 Privacy Screen )


### Step 1

- Insert the tapped plates to the screen panel ( plates can be found in B2-SBRAC carton )

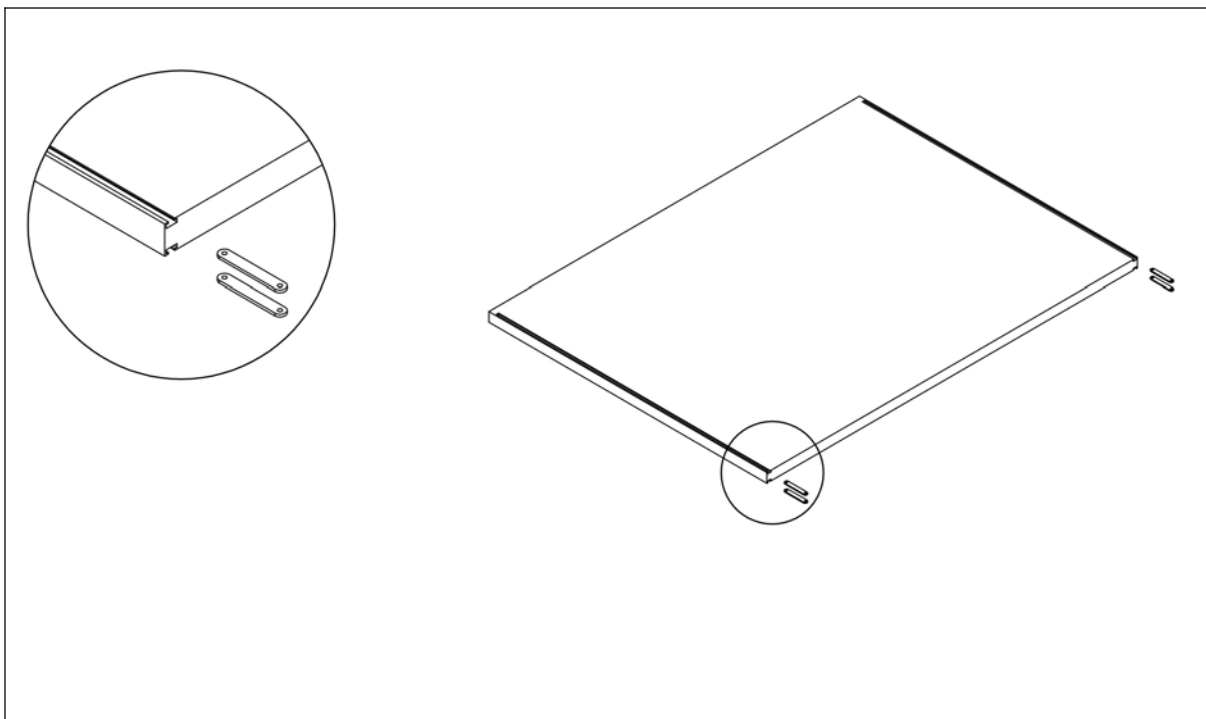


### Step 2

- Install the screen brackets ( B2-SBRAC )to the Shush30 Extrusion with 8 pcs M5x6 screws.

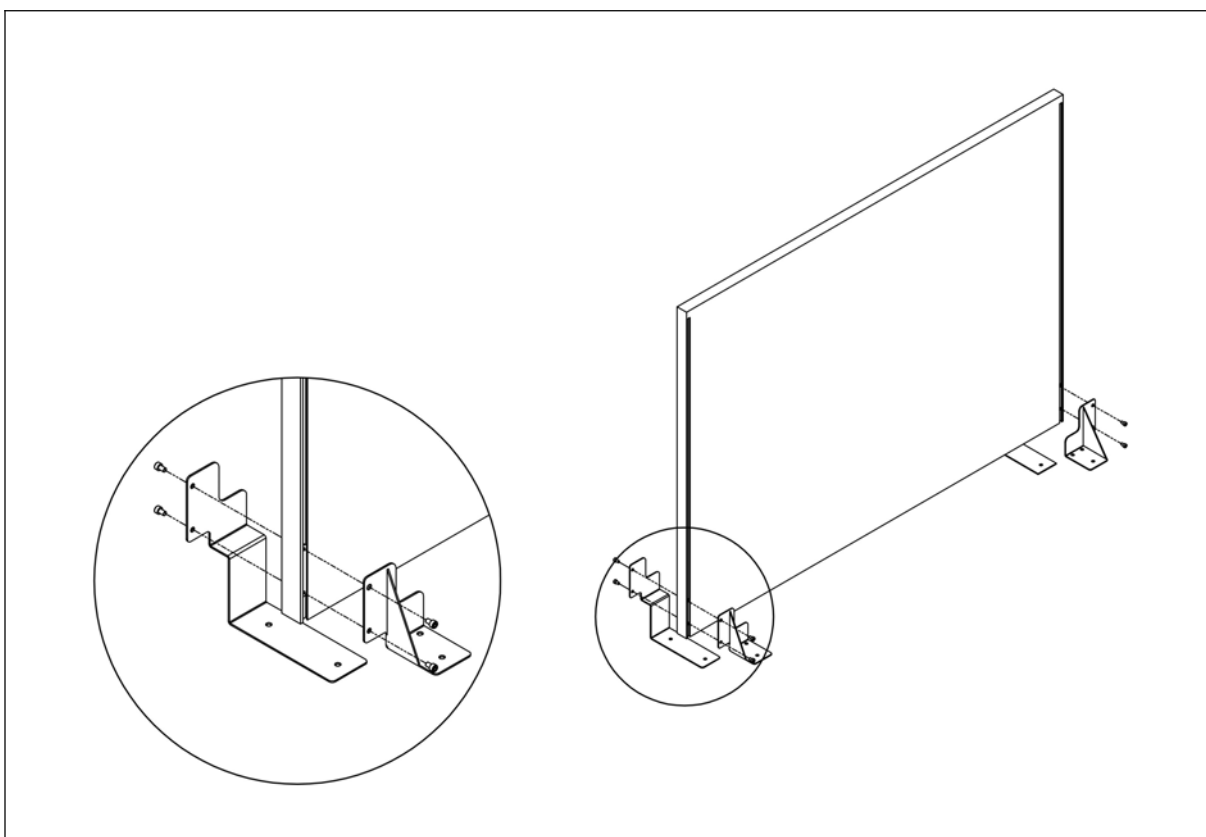

### Step 3


- Fix the screen brackets ( B2-SBRAC ) to the desk frame with 10 pcs M6x10 screws.

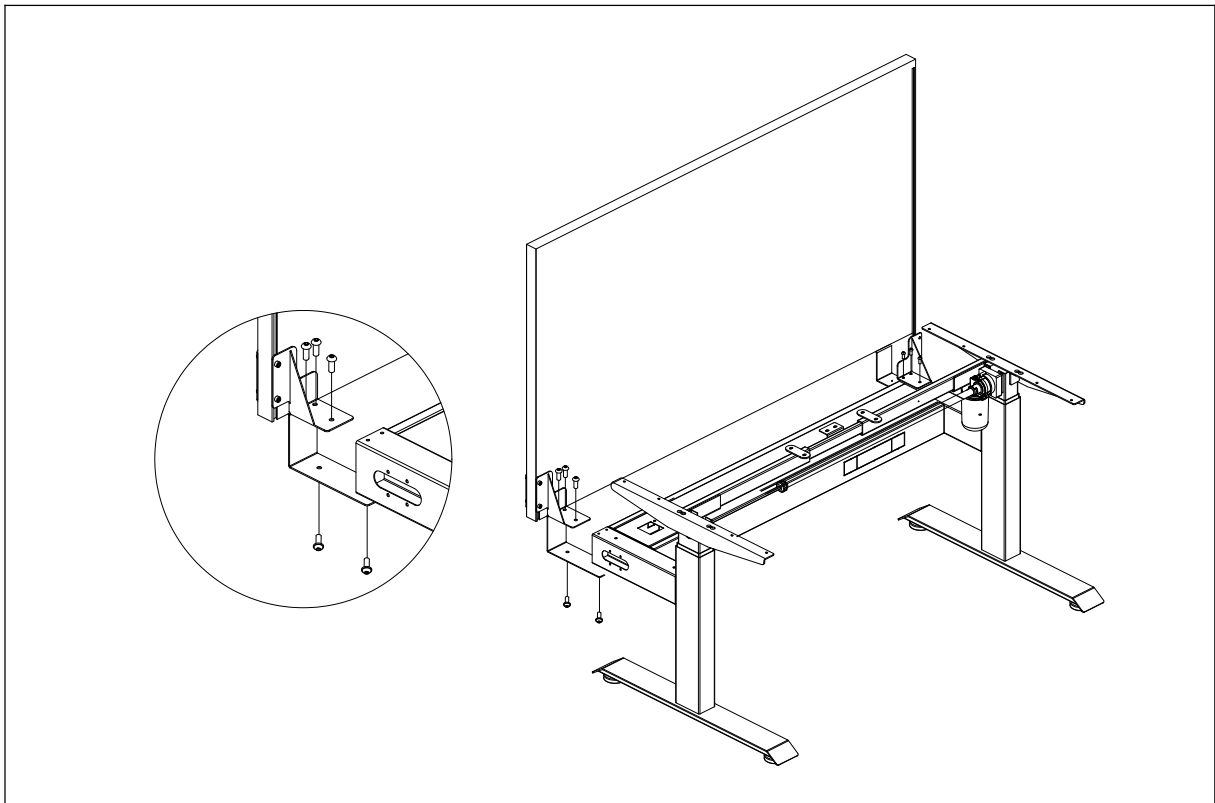

## EPS ( 900mm H Eco Panel ) Screen panel installation


### Step 1

- Install the screen brackets(B2-SBRAC) on the cable tray arm (B2-SSARM) with 10 PCS M6x10 Screws. The brackets direction as photos display.

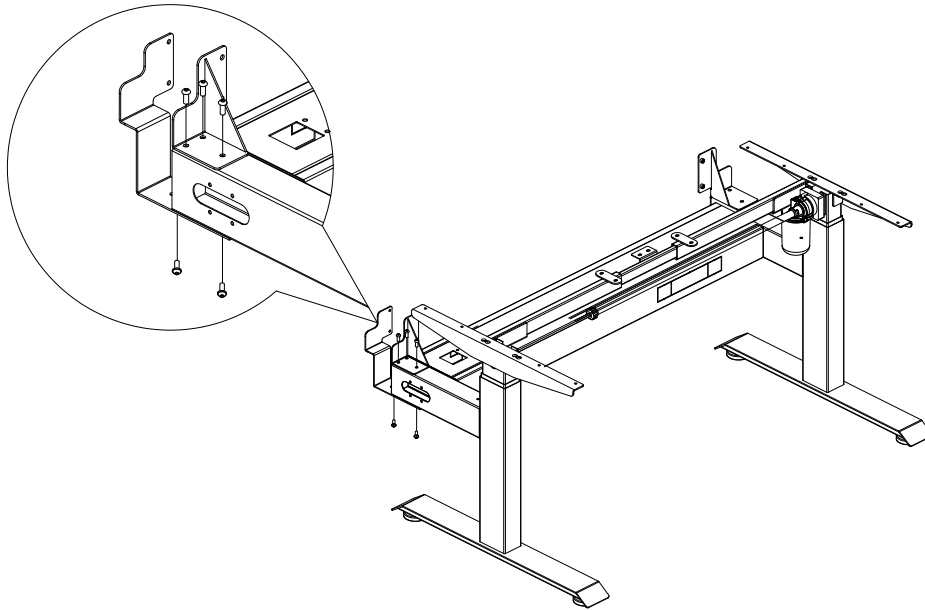

### Step 2

- Place the EPS panel on the screen brackets.
- Using a 6mm drill bit ( not included ), drill out holes in Eco Panel Screen in line with back to back screen bracket holes ( Note: Carbide Drill Bits Work Best For PET panel )
- Place 8 x Double Ended Bolts M5\* 32mm - 6mm through The screen bracket ( B2-SBRAC ) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

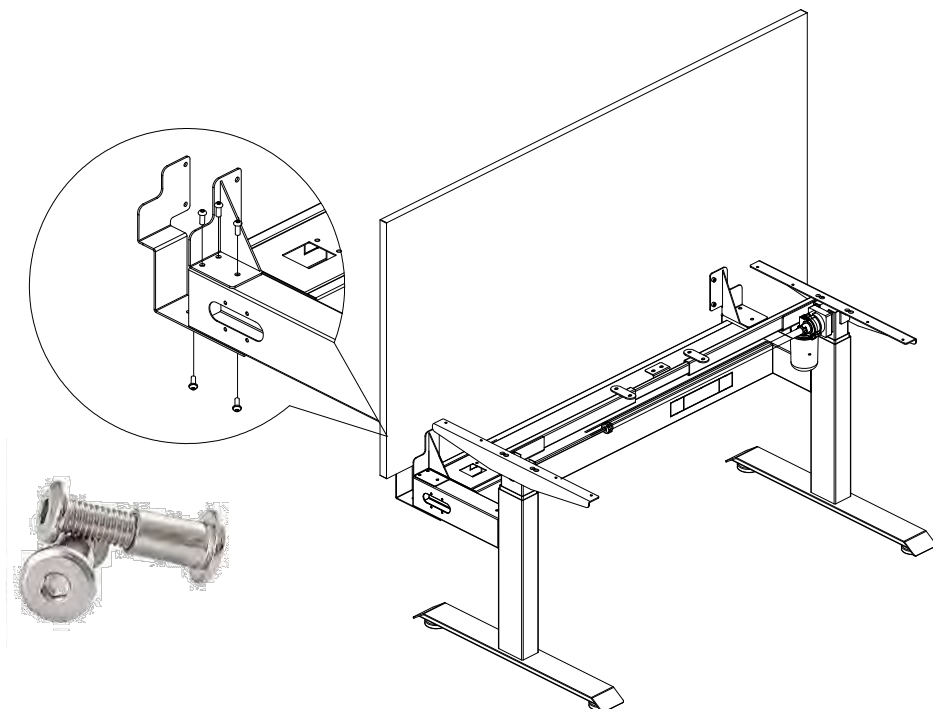


# Use Instructions

## A. Parts list

- 1. Lifting Column ..... 2 pcs
- 2. Handset..... 1 pcs
- 3. Control Box ..... 1 pcs
- 4. Power Cord ..... 1 pcs

Connect the cables as shown in the photo below:

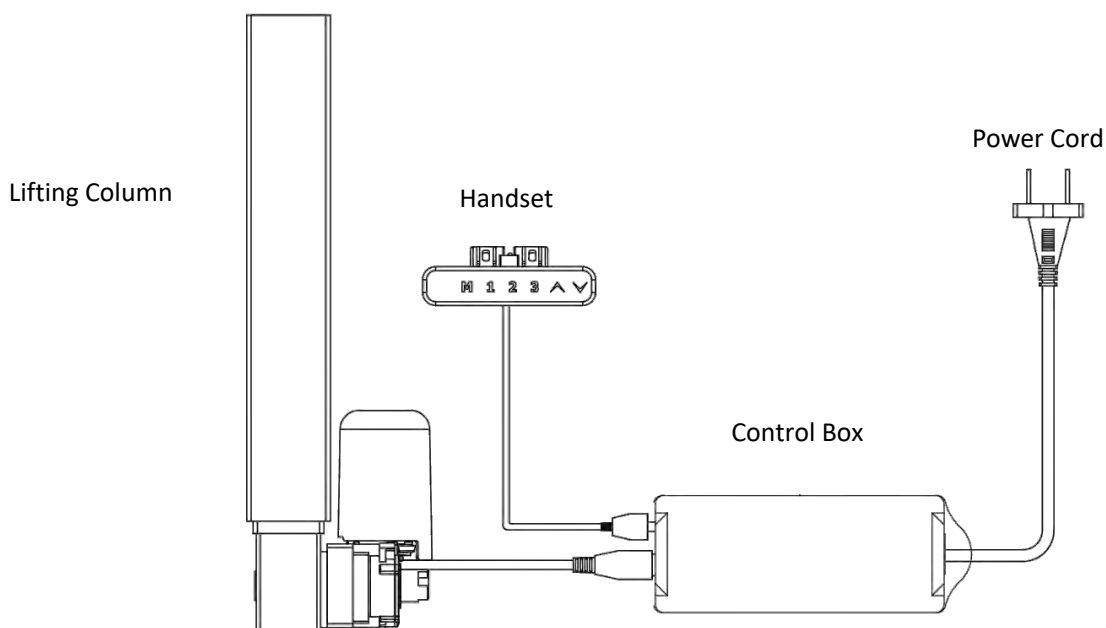

## B. Technical Specifications

Input: 100-240VAC

Output Power: 29VDC

Maximum accepted weight: 80 kg (including tabletop weight)

Maximum speed: 25 mm/s

Minimum height: 620mm

Travel distance: 650 mm

Operating temperature: 0-40°C

Duty Cycle: Max.10% or 2 min on and 18 min pause

# Control Panel Operation and Programming Instructions



1. Make sure all components are connected correctly (control box, control panel, power cable and connecting cable, lifting columns).

2. Connect the power cable to a 110/240VAC outlet. After the control panel will display "62.0" sign for a few seconds, the system is turn on and the desk is ready for use.

## 3. Up and Down

Press and hold the "**UP**" button to move up the desk to the desired height. The desk will stop when the button is released.

Press and hold the "**DOWN**" button to lower the desk to the desired height. The desk will stop when the button is released.

## 4. Memory Settings

After adjusting the desk height using the "**UP**"/"**DOWN**" buttons, press the "**M**" button ,Then press the desired button from 1 to 3 to assign the current height to a number on the keypad. Can be saved and memorized 3 different heights.

Moving the desk to a preset height can be done by pressing the corresponding button from 1 to 3.

During operation you can stop the desk by pressing one of the "**UP**"/"**DOWN**" buttons.

## 5. Keypad Lock

To lock: Press and hold "**UP**" and "**DOWN**" buttons for 5 seconds until "**LOC**" sign appears on the display, indicating that the system is locked.

To unlock: Press the "**UP**" and "**DOWN**" buttons for 5 seconds at a same time until the "**LOC**" sign disappears and the height of the desk is displayed, indicating that the system is ready to be adjusted again.

## 6. Reset

When the system is experiencing a problem or the control panel displays "**RES**", the system must be reset.

Press and hold the "**DOWN**" button throughout the process. After 5 seconds, the desk will lower slightly until it reaches its lowest height, then rises slightly and the display changes back to the numeric height setting. After the desk stops, the reset process is successfully completed.

# Troubleshooting

## 1. HOT

**Issue:** Operation of the control box, continuously, for more than 2 minutes.

**Solution:**

- a. Wait 18 minutes.
- b. Disconnect the power cable, wait a few minutes, and then plug the cable to the power source. The error code will disappear.

## 2. E01 and E02

**Issue:**

- a. One of the control box cables is not connected properly, it is defective or broken;
- b. The weight on one side of the desk exceeds 80 kg.

**Solution:**

Make sure all the connection cables are properly connected.

Then wait 3 seconds and the error code will disappear. If the problem still persists, replace the engine with a new one.

Remove load from desk, then the error code will automatically disappear.

## 3. E06

**Issue:** The difference between the two lifting columns is higher than 1 cm (0.4 inches).

**Solution:** Start the "Reset" process.

## 4. E07

**Issue:** The load weight exceeds the limit of 80 kg.

**Solution:** Remove some from the things on the desk to make sure the total weight does not exceed 80 kg.

## 5. E08

**Issue:** The input voltage is lower than the required value.

**Solution:** The error code will automatically disappear when the voltage increases and reaches the limits required by the device.

## 6. E09

**Issue:** The input voltage is too high and exceeds the maximum allowed value.

**Solution:** The error code will disappear automatically when the voltage decreases and reaches the maximum value that the device can support.

## 7. E10

**Issue:** The control panel is not connected or does not receive power, while the control box is already connected to a power source.

**Solution:** Wait 1 second, the error code will disappear automatically. If the problem persists, check the connection cables.

## Important Safety Instructions

- Before using this device, read these operating instructions carefully and keep this user manual for future reference.
- Before using the product, check the desk and power cables for any visible signs of damage. If you notice cuts or deep scratches, do not turn on the device.
- Before connecting the product to the power supply, make sure that the power supply voltage is compatible with the parameters of the product.
- Before using it, make sure that the length of the power cable allows you to connect the desk to the power supply.
- The height-adjustable desk contains electronic circuits and should only be used in dry environments. Do not use outdoors or in very dusty environments. Keep away from heat sources and any corrosive materials.
- Keep all electrical components away from liquids. Never touch or handle the desk, power supply, the control box, the panel control or any other cable with wet hands.
- Clean the product only with a clean, dry, soft cloth or cloth. Disconnect from the power supply before moving or cleaning electrical components.
- Do not disassemble the columns, control box and control panel. These actions are considered damage caused by the user.
- This product contains small parts. Make sure they are out of the reach of children. Do not allow children to play with the device. Packing materials must not be used as toys.
- Do not lay or sit on the worktop. This product is not for lifting people.
- Do not exceed the maximum permissible load weight.
- This product can be used in a 10% cycle (2 minutes of operation, followed by 18 minutes pause).
- The manufacturer cannot be held liable or for any damage or injuries resulting from improper use of the height adjustable desk, in other words, non-compliance with these safety instructions and warnings.

## Advanced programming



|                                                           |    |
|-----------------------------------------------------------|----|
| 1Un-Display units setting -----                           | 15 |
| 2br-Handset brightness setting-----                       | 15 |
| 3bE-Voice setting -----                                   | 15 |
| 4Fu-Go up anti-collision sensitivity setting -----        | 16 |
| 5Fd-Go down anti-collision sensitivity setting -----      | 16 |
| 6FS-Balance sensitivity-----                              | 17 |
| 7SH-Setting the new lowest display and height range ----- | 17 |
| 8Hc-Setting Constant-touch & One-touch -----              | 18 |
| 9St-Time Reminder setting -----                           | 18 |
| 10H-Setting bounce height -----                           | 18 |
| 11r-Restore Factory Defaults -----                        | 19 |
| 12d-Fatigue test mode -----                               | 19 |

## 1Un- Display units

---

Change the numeric display to show heights in either inches or centimeters

Press "**M**" button and hold 3 seconds, handset display "**S--**", Release "**S**" button, Press "**M**" button to enter, Display " 1Un", Press "**M**" button again to confirm the first programming setting.

1. It will display  , Press S button to get CM display, wait 2 seconds, centimeters setting is done, It will display current height (cm)
2. After it display  , press UP or DOWN , It will display  , Press button "**S**", Wait 2 seconds, inches setting is done, It will display current height (Inch)

## 2br-Handset display brightness

---

Press "**M**" button and hold 3 seconds, handset display "**S--**", Release "**M**" button, Press "**M**" button to enter, Display " 1Un".

1. Press UP/Down , It will display 2br.

2. Press "**M**" to enter, It will display current brightness level 

 : Means normal brightness,  : Means low brightness,  : Means high brightness

3. Press UP or DOWN to select the desired brightness level, press "**M**" button to confirm, wait 2 seconds, It will display current height.

## 3bE – Handset Sound

---

Press "**M**" button and hold 3 seconds, handset display "**S--**", Release "**S**" button, Press "**M**" button again to enter, Display " 1Un".

1. Press UP or DOWN, It will display "3bE"

2. Press "**M**" button, It will display current sound status ,  or 

 : Means no sound when you press the button ,  : Means with sound when you press the button.

3. Press UP or DOWN to select  or  , then Press "**M**" to confirm, wait 2 seconds, It will display current height.

## 4Fu- Upward direction anti-collision sensitivity

---

The desk has an Anti-Collision Sensitivity that will stop the desk's movement if it hits something on the way up. You can change this Sensitivity level by doing the following:

Press "**M**" button and hold 3 seconds, handset display "**S--**", Release "**M**" button, Press "**M**" button again to enter, Display "1Un".

1. Press UP or DOWN ,It will display 4Fu.
2. Press "**M**" button to enter,It will display current anti-collision sensitivity level.Total 9 levels for up from

L1 to L9;

L1 is the most sensitivity setting, L9 is the least sensitivity setting.

3. Press UP or Down to select the your favorite level,Press "**M**" button to confirm,wait 2 seconds,It will display current height.

## 5Fd-Downward direction anti-collision sensitivity

---

The desk has an Anti-Collision Sensitivity that will stop the desk's movement if it hits something on the way down. You can change this Sensitivity level by doing the following:

Press "**M**" button and hold 3 seconds, handset display "**S--**", Release "**S**" button, Press "**M**" button again to enter, Display "1Un".

- 1.Press UP or DOWN,It will display 5Fd.
- 2.Press "**S**" button to enter,It will display current anti-collision sensitivity level L5 .Total 9 levels for down

from L1 to L9;

L1 is the most sensitivity setting, L9 is the least sensitivity setting.

- 3.Press UP or Down to select the your favorite level,Press "**M**" button to confirm,wait 2 seconds,It will display current height.

## 6FS-Balance sensitivity

---

The desk has a balance Sensitivity to make sure the 2 columns always work in the same position . You can change this Sensitivity level by doing the following:

Press "**M**" button and hold 3 seconds, handset display "**S--**" ,Release "**S**" button,Press "**M**" button again to enter,Display " 1Un".

1.Press UP or DOWN ,It will display 6FS.

2.Press "**M**" button to enter,It will display current balance sensitivity level L5.Total 9 levels for down from

L 1 to L 9;

L 1 is the most sensitivity setting, L 9 is the least sensitivity setting.

4. Press UP or Down to select the your favorite level,Press "**M**" button to confirm,wait 2 seconds,It will display current height.

## 7SH-Setting the new lowest display and height range

---

The desk frame ships defaulted to its minimum and maximum height limits. These steps allow the upper and lower limits to be adjusted to your preference:

Press "**M**" button and hold 3 seconds, handset display "**S--**" ,Release "**S**" button,Press "**M**" button again to enter,Display " 1Un".

1.Press UP or DOWN ,It will display "**7SH**"

2.Press "**M**" button to enter,It will display H 1 b,Press UP or DWON,It will display L 1 L and L 1 H

H 1 b: Set the lowest position height display L 1 L:Set a new minimum desk height

L 1 H:Set a new maximum desk height

5. Press UP or DOWN ,It will display H 1 b,Press "**M**" button to enter,It will display current lowest height,Press UP or DOWN to set the lowest height display ,Press "**S**" to confirm .

6. Press UP or DOWN ,It will display L 1 L ,Press "**M**" button to enter,It will display current lowest height,Press UP or DOWN to set a lowest height position ,Press "**M**" to confirm .

7. Press UP or DOWN ,It will display L 1 H ,Press "**M**" button to enter,It will display current highest height,Press UP or DOWN to set a new highest height position ,Press "**M**" to confirm .

## 8Hc- Setting Constant-touch & One-touch for go Up or Down

---

Press "**M**" button and hold 3 seconds, handset display "**S--**",Release "**M**" button,Press "**M**" button again to enter,Display " 1Un".

1. Press UP or DOWN,It will display 8Hc

2. Press "**S**" button to enter,It will display current mode ,Press UP or DOWN,It will display 

 : Keep pressing UP or DOWN button to make the desk moving up or down.

 : Press UP or DOWN button and release,the desk will moving up or down automatically; Press any button can stop the desk when it moving.

3. Press "**M**" to confirm the the way you need,wait 2 seconds,setting is done.

## 9St-Reminder setting

---

To get a healthier working style,the desk can remind you to stand up when you sit in a long time,you can set it by doing the following:

Press "**M**" button and hold 3 seconds, handset display "**S--**",Release "**M**" button,Press "**M**" button again to enter,Display " 1Un".

1. Press UP or DOWN go get "9St"

2. Press "**S**" to enter,It will display " 0.0H",It no time reminder ,(H means Hour)

3. Press UP or DOWN to select the time reminder you need ,(1.5H means 1.5 hours),Press "**S**" to confirm.

Note: When handset time reminder beep,press any button to make it disappear ; the time reminder will last 30 seconds if no any operations.

## 10H-Setting bounce height

---

Press "**M**" button and hold 3 seconds, handset display "**S--**",Release "**M**" button,Press "**M**" button again to enter,Display " 1Un".

1. Press UP or Down to get 10H.

2. Press "**M**" button to enter,It will show current bounce height.

3. Press UP or DOWN to get the bounce height,Press "**M**" to confirm;Wait 2 seconds,It will display current height

## **11r- Restore Factory Defaults**

---

Press **"M"** button and hold 3 seconds, handset display **"S--"** ,Release **"M"** button,Press **"M"** button again to enter,Display **" 1Un"**.

1. Press UP or DOWN ,It will display 11r
2. Press **"M"** to enter,It will display **F r E** and flash.
3. Press **"M"**to confirm,wait 2 seconds,It will display current height.

## **12d-Fatigue test mode**

---

Factory use,please ignore this programming.