 
 


Assembly Instructions


MODEL NO: CBC9

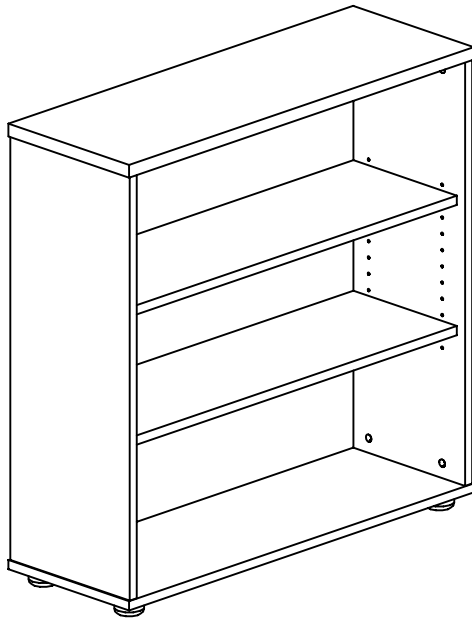


Pin 6x35 16PCS	Cushion $\varnothing 42 \times 25H$ 4PCS	Wood Screw 4x40 2PCS
Cam 16PCS	Wood Screw 3.5x13 16PCS	Wood Screw 4x16 2PCS
Cam Cover 16PCS	73x23x15 2PCS	
Shelf Pin 8PCS	$\varnothing 6 \times 40$ 2PCS	

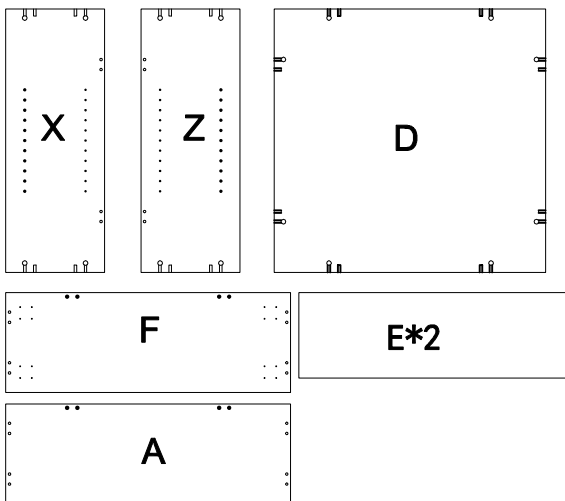

 STEP1

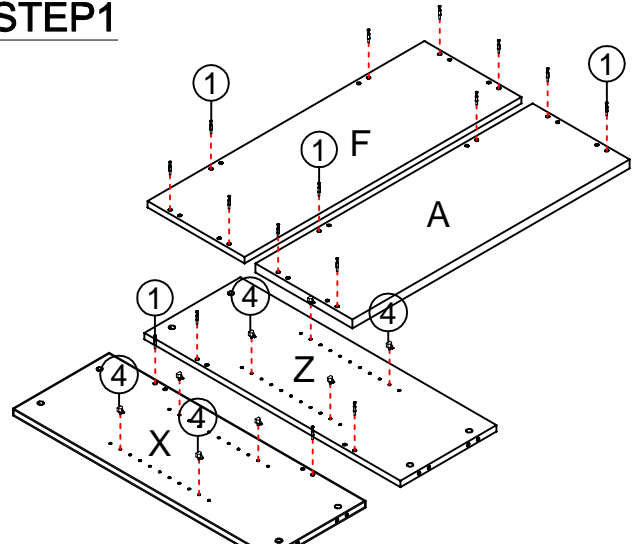


 STEP2

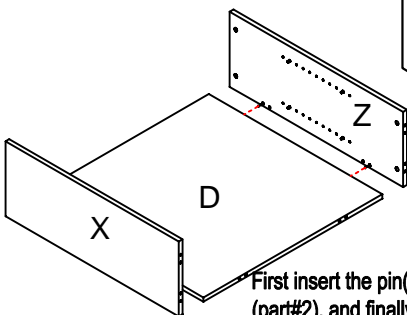


First insert the pin(part#1), then place the cam (part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP3

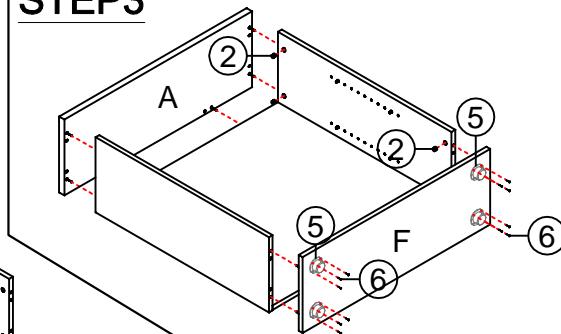


 STEP4

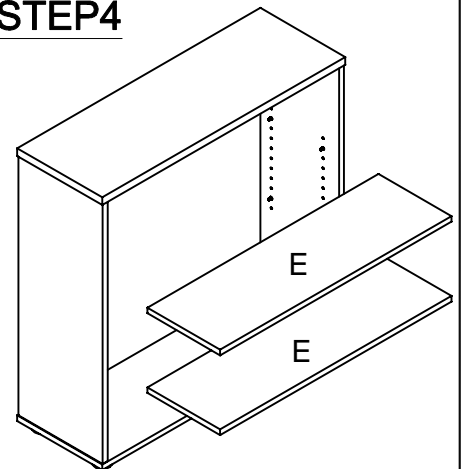

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions


MODEL NO: CBC9

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

 STEP5 Make a mark with a pencil

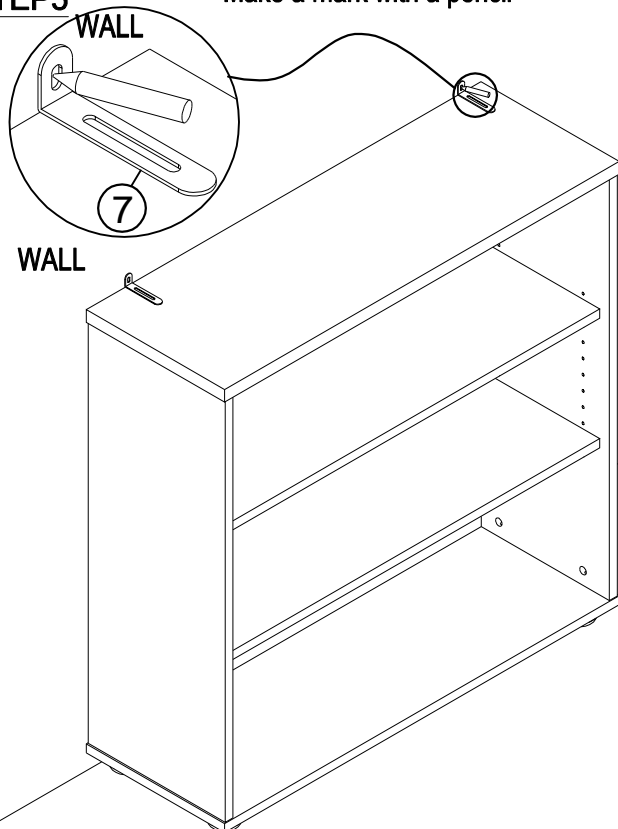


 STEP6

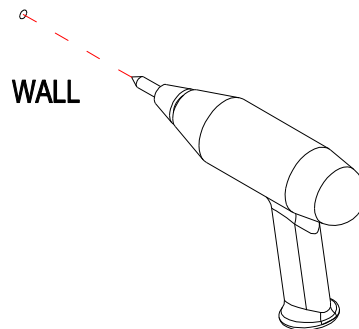


Drill holes at the marks with an electric drill

 
STEP7

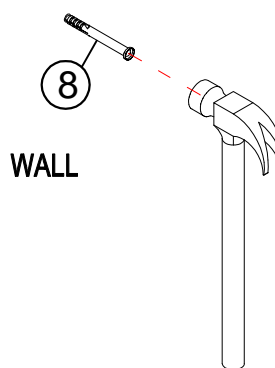

 STEP8 WALL

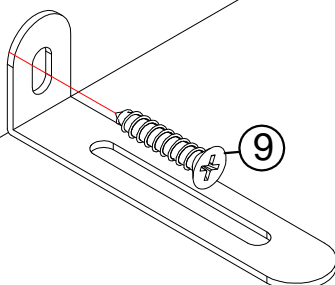

 STEP9

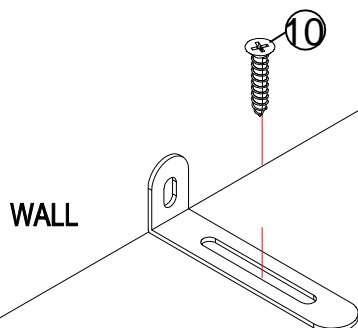

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

 


This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

 MODEL NO: CBC12

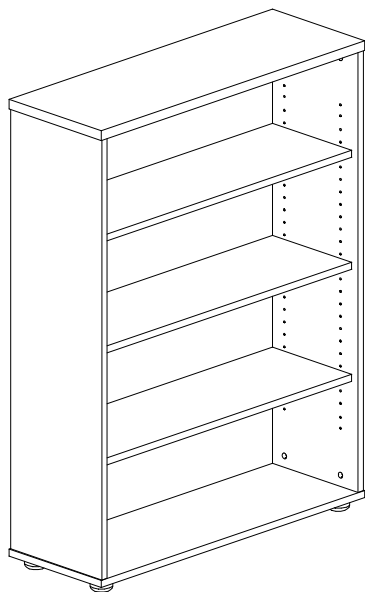


Pin 6×35 20PCS 1	Cushion ø42×25H 4PCS 5	Wood Screw 4×40 2PCS 9
Cam 20PCS 2	Wood Screw 3.5×13 16PCS 6	Wood Screw 4×16 2PCS 10
Cam Cover 20PCS 3	73×23×15 2PCS 7	
Shelf Pin 12PCS 4	ø6×40 2PCS 8	

 STEP1

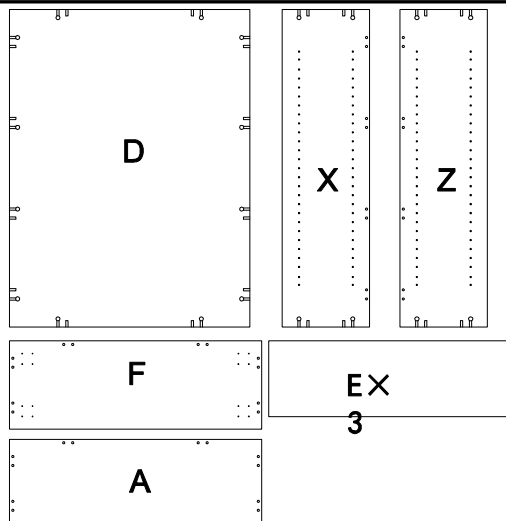


 STEP2

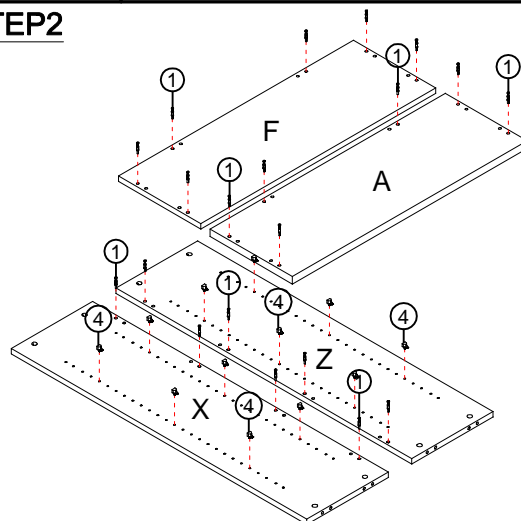

STEP3

 
First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

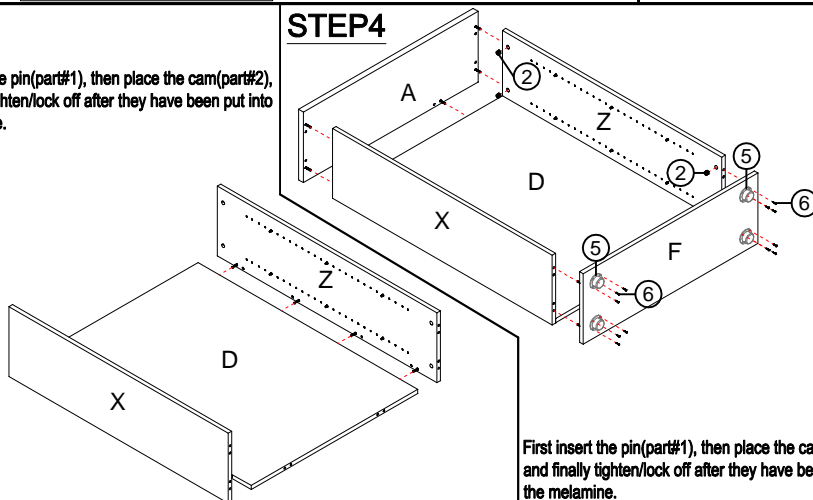

STEP4


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP5

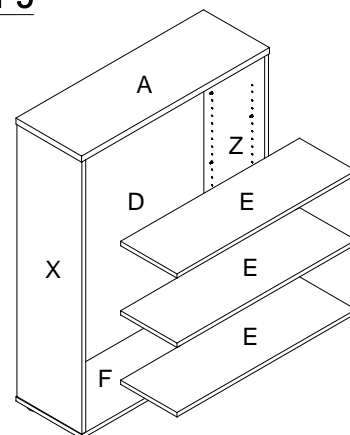

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions


MODEL NO: CBC12

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

 STEP6 Make a mark with a pencil

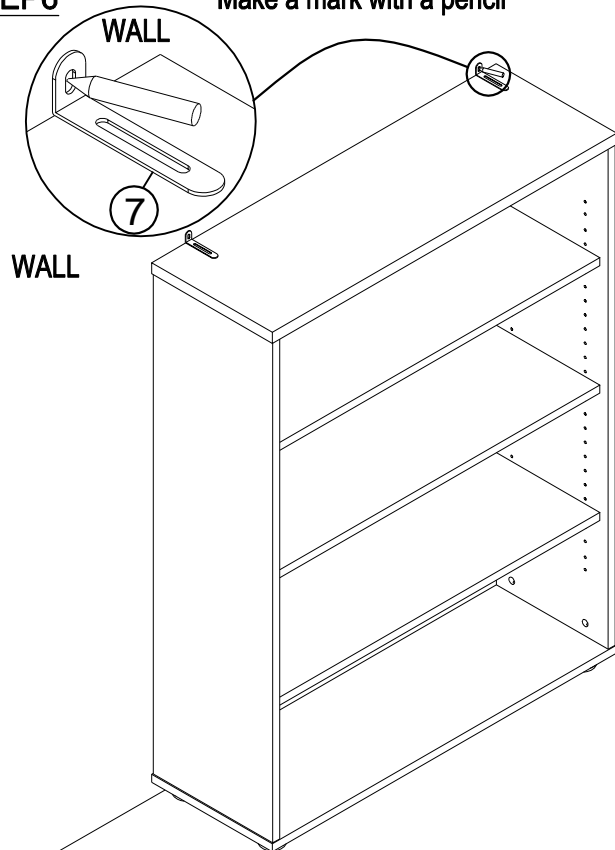


 STEP7

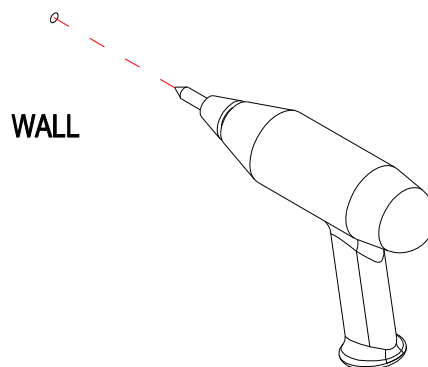


Drill holes at the marks with an electric drill

 
STEP8

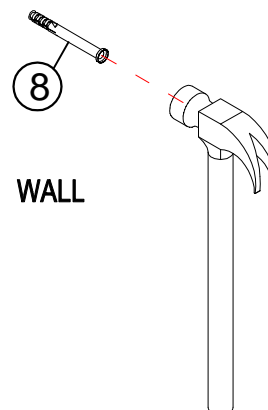

 STEP9

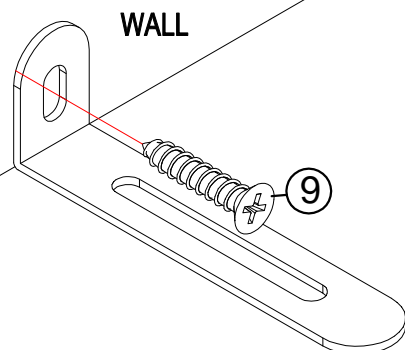

 STEP10

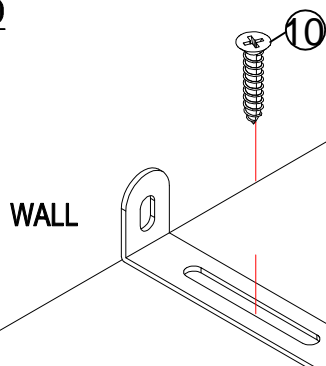

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture

 


This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

 MODEL NO: CBC18

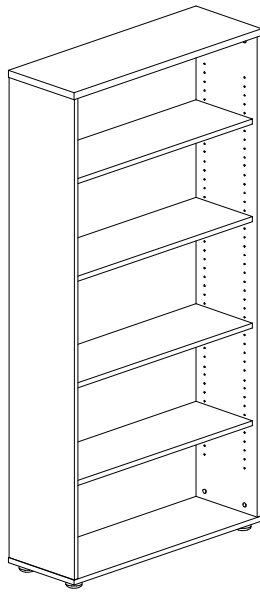


Pin 6×35 20PCS 1	Cushion ø42×25H 4PCS 5	Wood Screw 4×40 2PCS 9
Cam 20PCS 2	Wood Screw 3.5×13 16PCS 6	Wood Screw 4×16 2PCS 10
Cam Cover 20PCS 3	73×23×15 2PCS 7	
Shelf Pin 16PCS 4	ø6×40 2PCS 8	

 STEP1

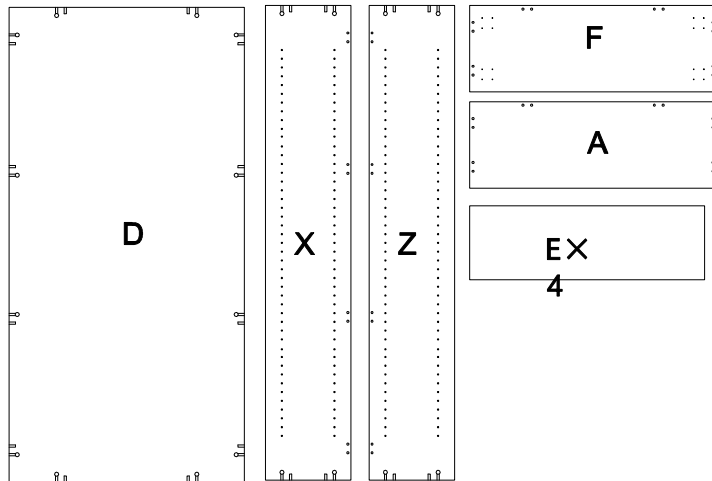


 STEP2

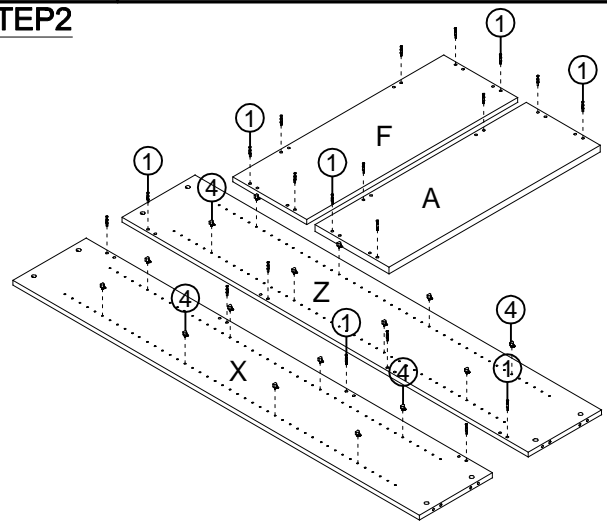

STEP3

 
First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

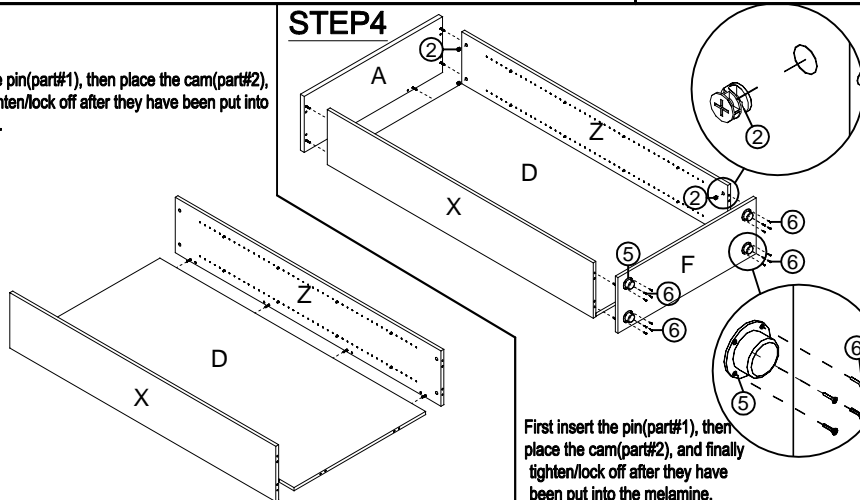

STEP4


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP5

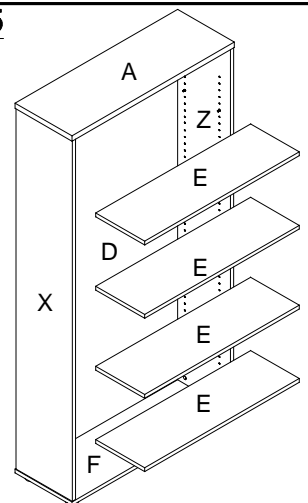

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: CBC18/CBC186/SPBC18-N/CBC1510/CBC918


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

STEP6

 Make a mark with a pencil

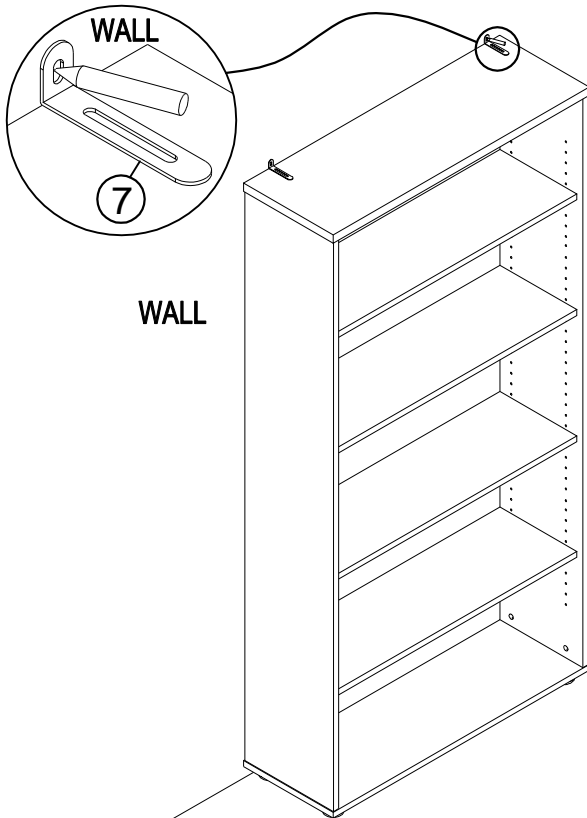


 STEP7

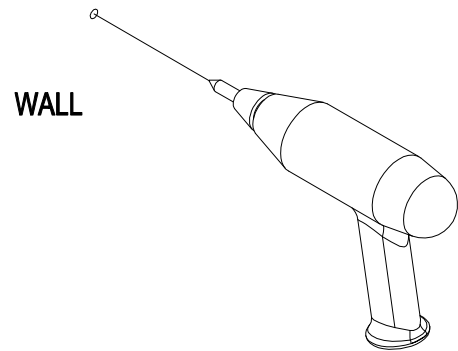


Drill holes at the marks with an electric drill

 
STEP8

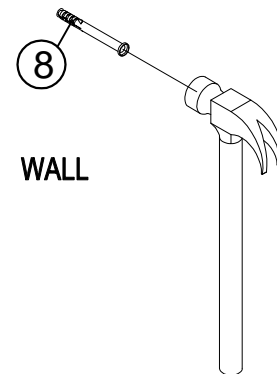

 STEP9

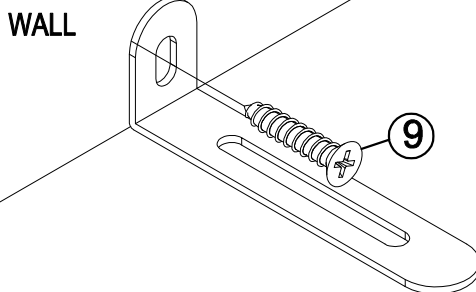

 STEP10

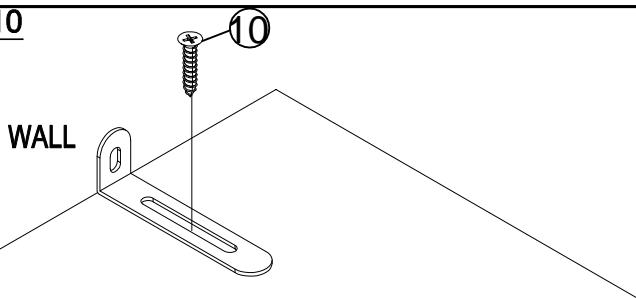

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

