


EM300

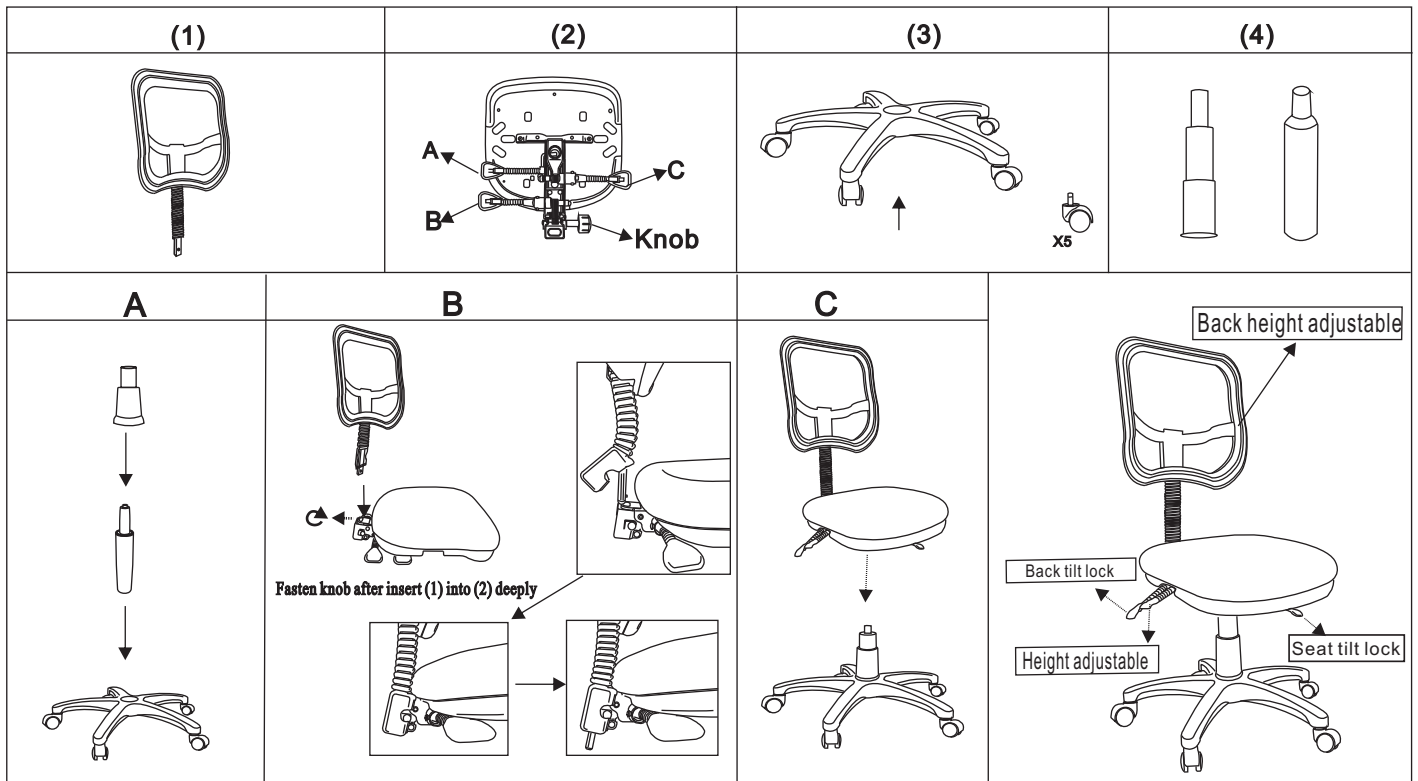

ADJUSTING MECHANISM

- Release knob to adjust the backrest height.
- Lever A: Lift it up to let the backrest tilt, turn it down to lock the backrest
- Lever B: Lift it up to let the seat tilt, turn it down to lock the seat
- Lever C: Lift it up to let the seat up and down

ERGONOMIC INSTRUCTION

- Sit in the chair, adjust the seat to be approximately horizontal.
- For computer work, adjust the seat to be horizontal or slightly back, and for writing work adjust the seat slightly forward.
- Adjust the seat height so that your feet are resting flat on the floor. For good circulation your feet should take the weight of your legs.
- Adjust the angle of the backrest to give firm support while sitting upright.
- Adjust the backrest height to give support to the lumbar region of your back when leaning back.
- Your forearms should be as close to horizontal as possible when working at a desk.

MAINTENANCE

- Protect the chair from direct sunlight
- Check and tighten all the bolts periodically

FABRIC CARE

- Vacuum regularly and gently
- Wipe clean with damp cloth
- Use upholstery detergents or dry cleaning fluid suitable for this fabric
- Test on concealed area before proceeding

WARNING

- Do not use this chair unless all bolts/knob are tightened and this chair is assembled firmly and properly
- This chair is for one person to sit in. Do not stand on the chair
- Do not touch mechanism except lever handle/knob when people is sitting in
- Do not repair the gas lift
- Failure to follow these warnings could result in serious injury