# Assembly Instructions

*For cabinet on right hand side of workstation

## MODEL NO: ECF185-RIG



D A L R V Y F Y1 V V1 X Z

**Cable Cover Must Be Removed Before Installing Height Adjustable Column Through Top Of Unit**

| | | | | | |
|---|---|---|---|---|---|
| Pin 6×35 **1** 35PCS | | Hinge(half-overlay) **5** 2PCS | | Cable Cover **9** 1PCS | |
| Cam **2** 35PCS | | Hinge(inset) **6** 4PCS | | Cable Cover Ø76 **10** 2PCS | |
| Cam Cover **3** 35PCS | | Metal Feet 40H **7** 5PCS | | 130×108×30 **11** 2PCS | |
| Shelf Pin **4** 4PCS | | Wood Screw 4×16 **8** 67PCS | | Allen Wrench M3 **12** 1PCS | |
| | | Wood Screw 4×35 **14** 1PCS | | 118×116×30 **13** 2PCS | |

## 1



F

D

A

T
T3

V1   V*2   E

X   Z

## 2



## 4



First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

## 3



## IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

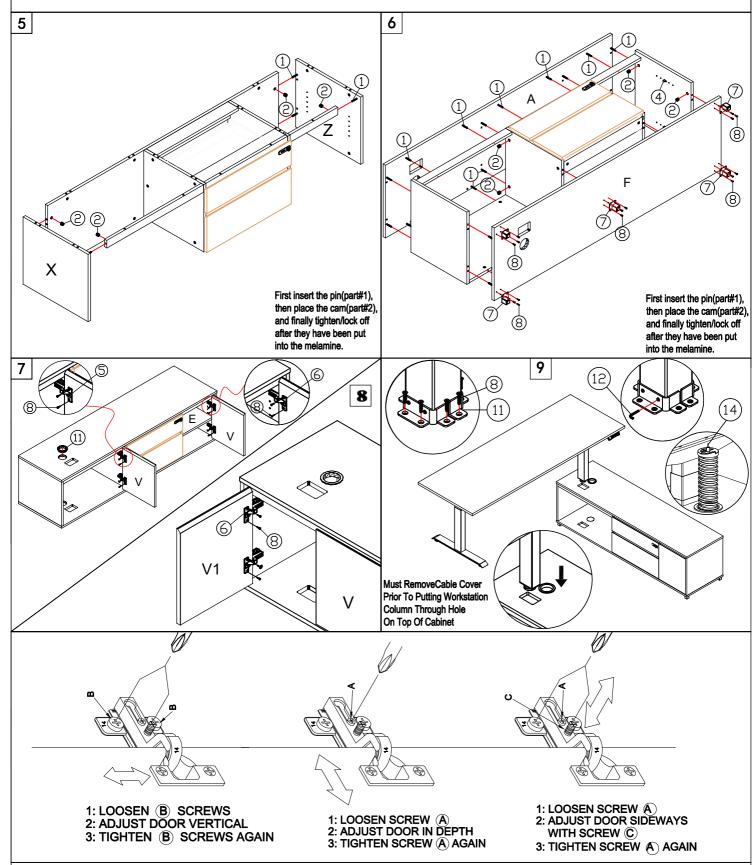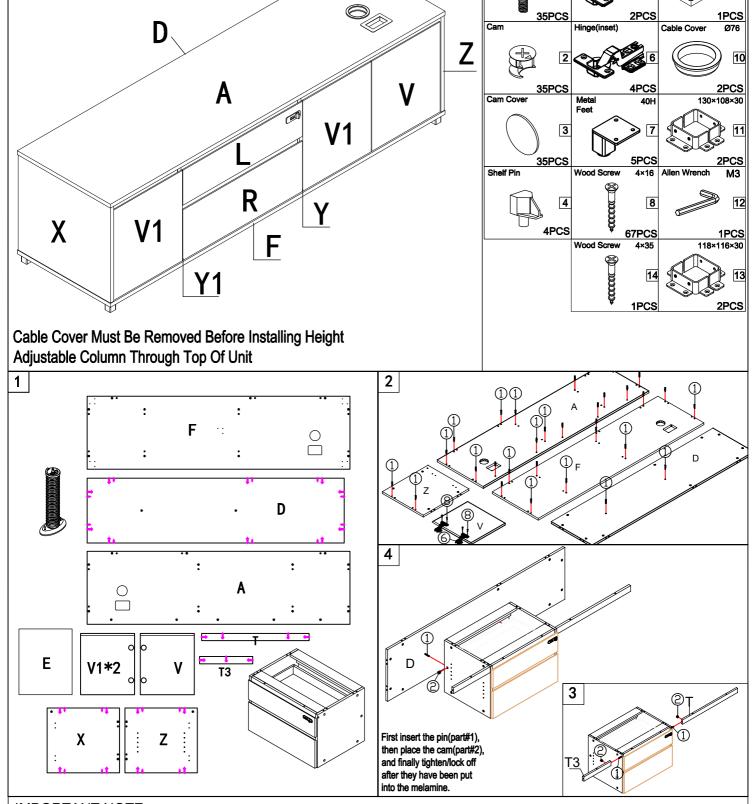# Assembly Instructions

**MODEL NO: ECF185-RIG**

*For cabinet on right hand side of workstation

## 5

First insert the pin(part#1),
then place the cam(part#2),
and finally tighten/lock off
after they have been put
into the melamine.

## 6

First insert the pin(part#1),
then place the cam(part#2),
and finally tighten/lock off
after they have been put
into the melamine.

## 7

## 8

## 9

Must Remove Cable Cover
Prior To Putting Workstation
Column Through Hole
On Top Of Cabinet

1: LOOSEN Ⓑ SCREWS
2: ADJUST DOOR VERTICAL
3: TIGHTEN Ⓑ SCREWS AGAIN

1: LOOSEN SCREW Ⓐ
2: ADJUST DOOR IN DEPTH
3: TIGHTEN SCREW Ⓐ AGAIN

1: LOOSEN SCREW Ⓐ
2: ADJUST DOOR SIDEWAYS
   WITH SCREW Ⓒ
3: TIGHTEN SCREW Ⓐ AGAIN

## IMPORTANT NOTE:
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

# Assembly Instructions
## MODEL NO: EC185-LEF

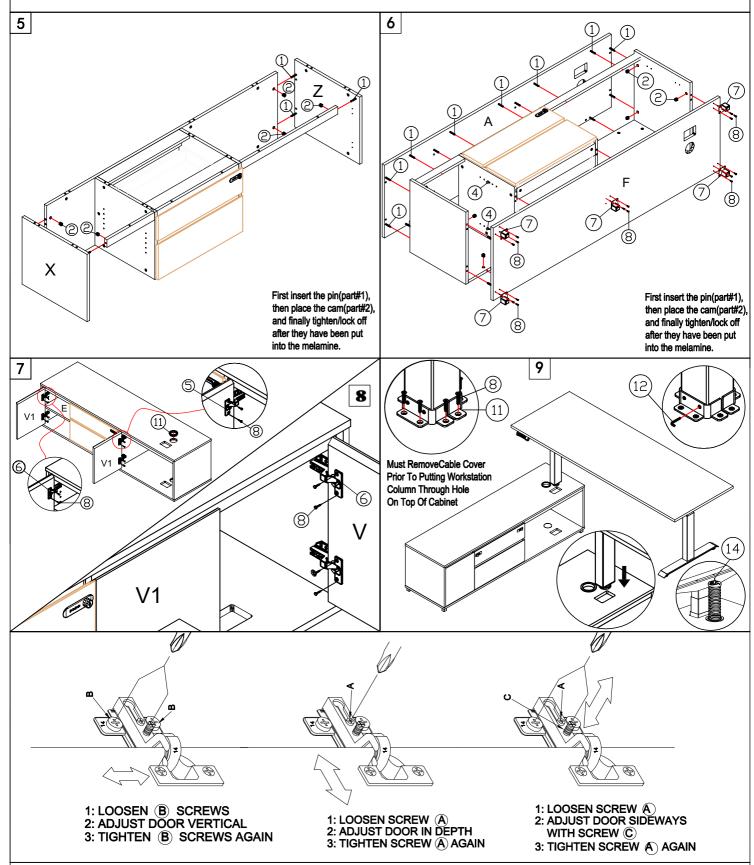*For cabinet on left hand side of workstation

D
Z
A
V
V1
L
R
Y
X
V1
F
Y1

| Pin 6×35 | Hinge(half-overlay) | Cable Cover |
|---|---|---|
| 1 35PCS | 5 2PCS | 9 1PCS |

| Cam | Hinge(inset) | Cable Cover Ø76 |
|---|---|---|
| 2 35PCS | 6 4PCS | 10 2PCS |

| Cam Cover | Metal Feet 40H | 130×108×30 |
|---|---|---|
| 3 35PCS | 7 5PCS | 11 2PCS |

| Shelf Pin | Wood Screw 4×16 | Allen Wrench M3 |
|---|---|---|
| 4 4PCS | 8 67PCS | 12 1PCS |

| Wood Screw 4×35 | | 118×116×30 |
|---|---|---|
| 14 1PCS | | 13 2PCS |

**Cable Cover Must Be Removed Before Installing Height Adjustable Column Through Top Of Unit**

## 1

F
D
A
E
V1*2
V
T
T3
X
Z

## 2

A
D
F
Z
V

## 4

D

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

## 3

T
T3

## IMPORTANT NOTE:
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

# Assembly Instructions

## MODEL NO:EC185-LEF

*For cabinet on left hand side of workstation

**5**



Z

X

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

**6**



A

F

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

**7**



V1
E
V1

**8**

V
V1

**9**

Must RemoveCable Cover Prior To Putting Workstation Column Through Hole On Top Of Cabinet



1: LOOSEN Ⓑ SCREWS
2: ADJUST DOOR VERTICAL
3: TIGHTEN Ⓑ SCREWS AGAIN

1: LOOSEN SCREW Ⓐ
2: ADJUST DOOR IN DEPTH
3: TIGHTEN SCREW Ⓐ AGAIN

1: LOOSEN SCREW Ⓐ
2: ADJUST DOOR SIDEWAYS
   WITH SCREW Ⓒ
3: TIGHTEN SCREW Ⓐ AGAIN

IMPORTANT NOTE:
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

FOR  COMBI-PUBLIC

No. 822          No. 822Z          No. 838Z

No. 824          No. 826          No. 828          No. 834

■ TO CHANGE THE SECRET CODE

1. THE PRESET FACTORY CODE IS 0-0-0-0. TO CHANGE THE SECRET CODE, ROTATE THE KNOB TO OPEN POSITION.

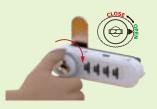2. THE NEW SECRET CODE CAN BE RESET, E.G. 1-1-1-1.

■ TO LOCK

1. TURN THE DIALS TO THE SET CODE, E.G. 1-1-1-1 AND ROTATE THE KNOB TO CLOSE POSITION.

2. TURN THE DIALS TO ANY NUMBER, E.G. 2-2-2-2 FOR LOCKING.

■ TO UNLOCK

1. TURN THE DIALS TO THE PREVIOUSLY SET SECRET CODE, E.G. 1-1-1-1.

2. ROTATE THE KNOB TO OPEN POSITION.

■ TO RECOVER THE SECRET CODE WHEN THE LOCK IS IN CLOSE POSITION

1. INSERT THE KEY INTO THE KNOB AND TURN TO OPEN POSITION DIRECTION UNTIL STOP.

2. TURN EACH OF THE DIALS UNTIL IT CANNOT MOVE (ALL FOUR DIALS) TO RECOVER THE FORGOTTEN SECRET CODE.

3. TURN THE KEY TO CLOSE POSITION DIRECTION UNTIL STOP AND PULL THE KEY OUT. THE LOCK CAN NOW BE USED NORMALLY.

## HOW TO SWITCH BETWEEN FUNCTIONS

■ FROM  PRIVATE  TO  PUBLIC

1. THE LOCK IS IN OPEN POSITION.

1.PRIVATE
2.PUBLIC
3.CODE RESET

2. SLIDE THE FUNCTION SWAP BUTTON TO PUBLIC TO CHANGE THE FUNCTION TO COMBI-PUBLIC.

FOR STEP 2, REMOVE THE CAM SHOULD IT OBSTRUCT THE SWAP BUTTON.

■ FROM  PUBLIC  TO  PRIVATE

1. THE LOCK IS IN OPEN POSITION. THE SECRET CODE CAN BE RESET RIGHT AWAY E.G. 1-1-1-1.

2. ROTATE THE KNOB TO CLOSE POSITION.

1.PRIVATE
2.PUBLIC
3.CODE RESET

3. SLIDE THE FUNCTION SWAP BUTTON TO PRIVATE.

4. ROTATE THE KNOB TO OPEN POSITION TO CHANGE THE FUNCTION TO COMBI-PRIVATE.

FOR STEP 3  REMOVE THE CAM SHOULD IT OBSTRUCT THE FUNCTION SWAP BUTTON.