







rapidline

FURNITURE FOR TODAY

ASSEMBLY INSTRUCTIONS

SPF189

	M5*20H 32pcs		M8*1H 8pcs
	M8*20H 8pcs		1pcs

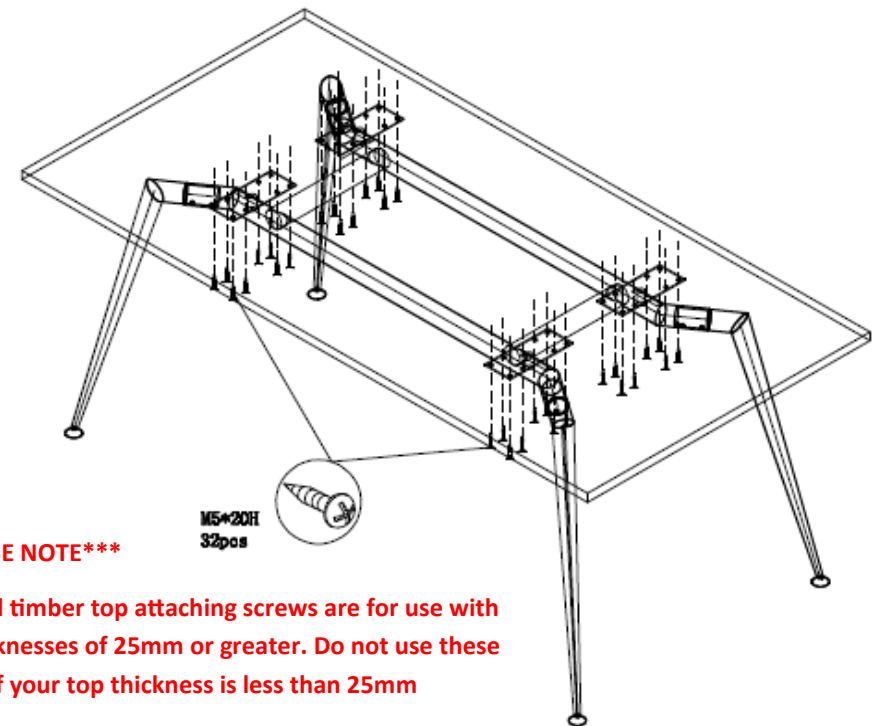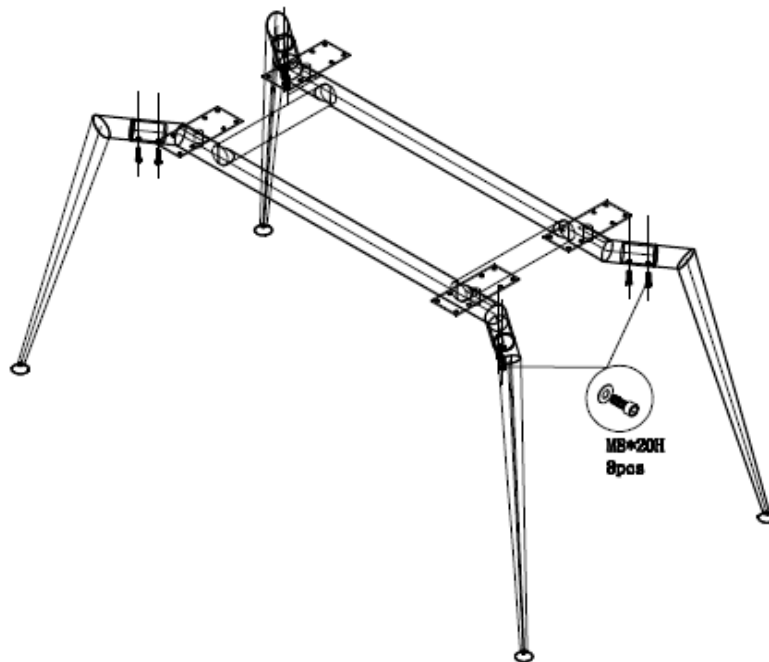

****PLEASE NOTE****

Supplied timber top attaching screws are for use with top thicknesses of 25mm or greater. Do not use these screws if your top thickness is less than 25mm