


# ASSEMBLY INSTRUCTIONS

**rapidline**  
FURNITURE FOR TODAY

2011-8-25

## VBC18

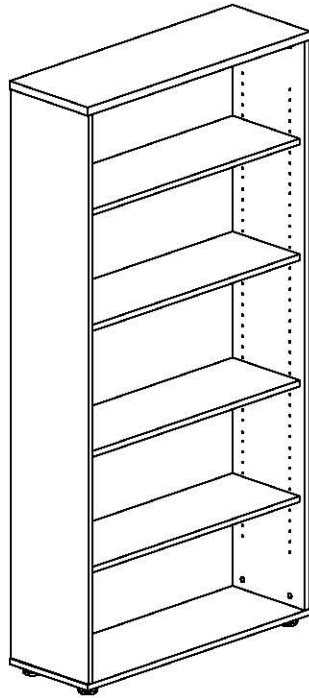

pin	6x35	1	20PCS
CAM		2	20PCS
Cam Cover		3	20PCS
Bolt Minifix		4	16PCS
CUSHIOA	25Hx φ52	5	4PCS
Screw	4x30	6	4PCS

