

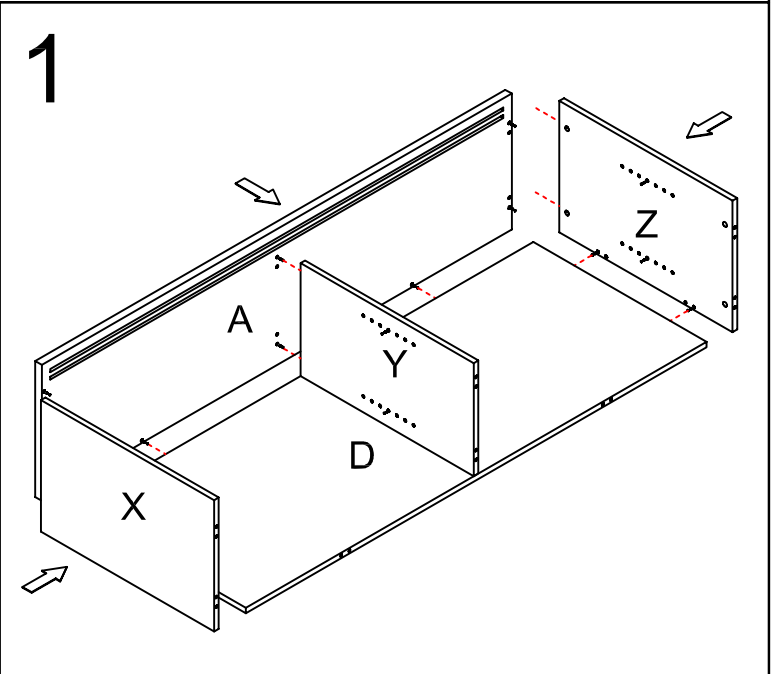
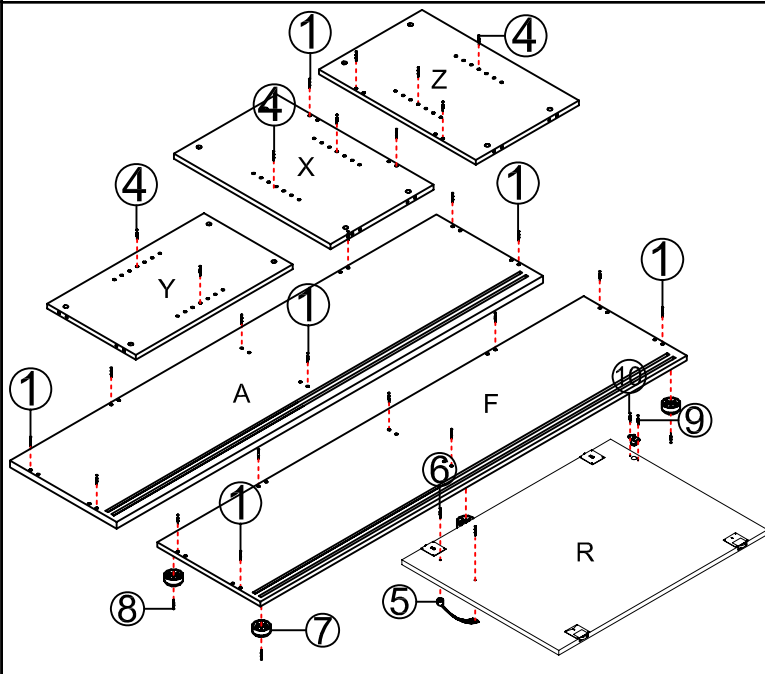
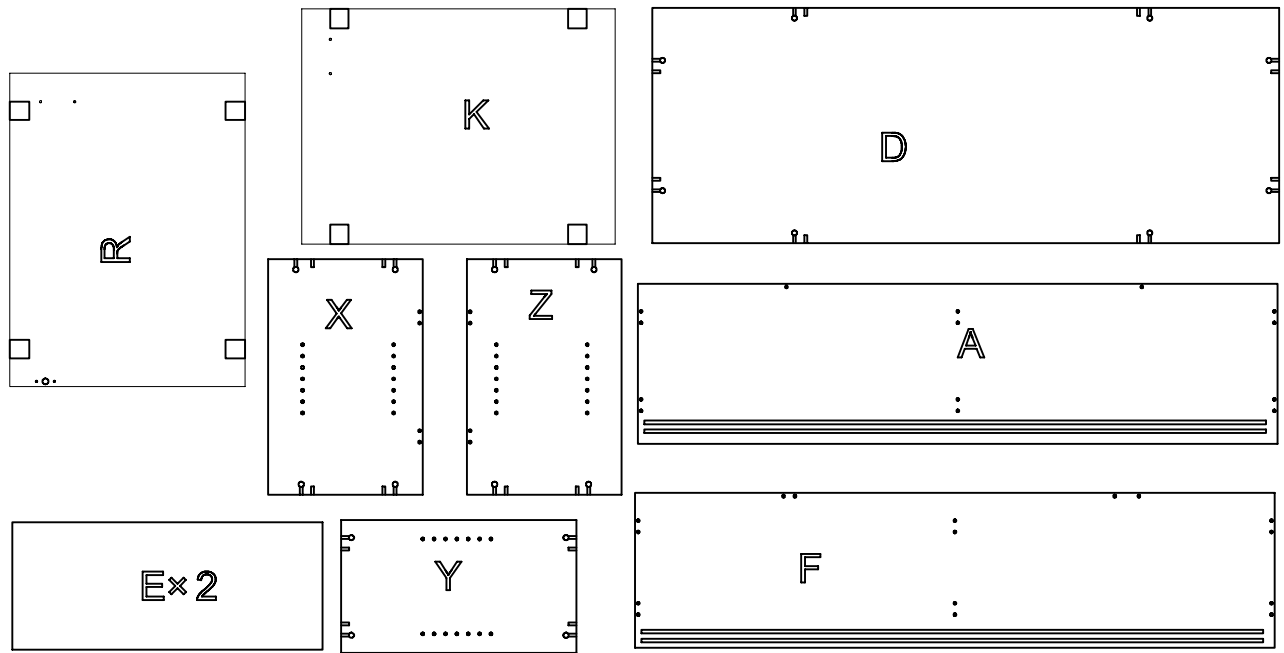


ASSEMBLY INSTRUCTIONS


VCZ1245

rapidline
FURNITURE FOR TODAY
2011-8-25


pin 6x36 1 20PCS	CAM 2 20PCS
Cam Cover 3 20PCS	Bot Minib 4 8PCS
T-Handle 5 2PCS	Screw 4x22 6 4PCS
CUSHION 25Hxφ52 7 8PCS	Screw 4x30 8 8PCS
LOCK 9 1PCS	Screw 3.5X18 10 2PCS
	

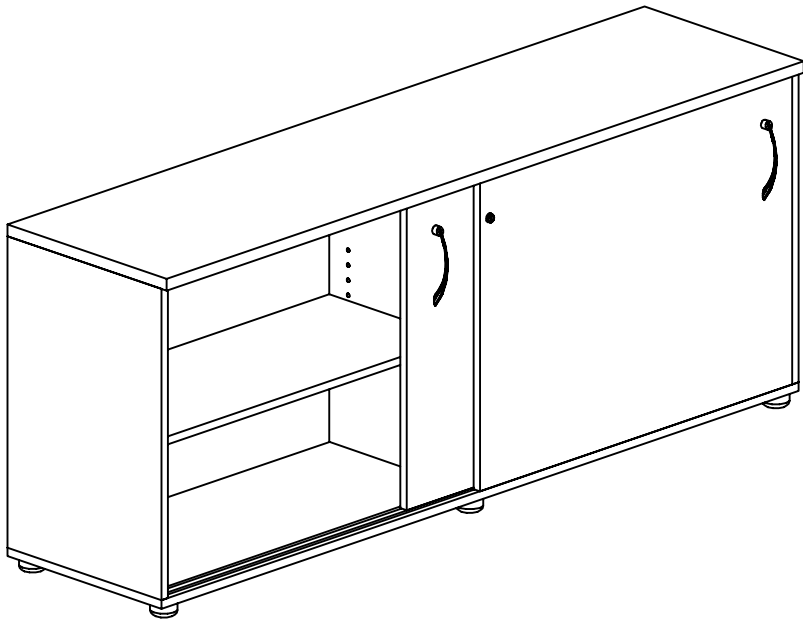


2

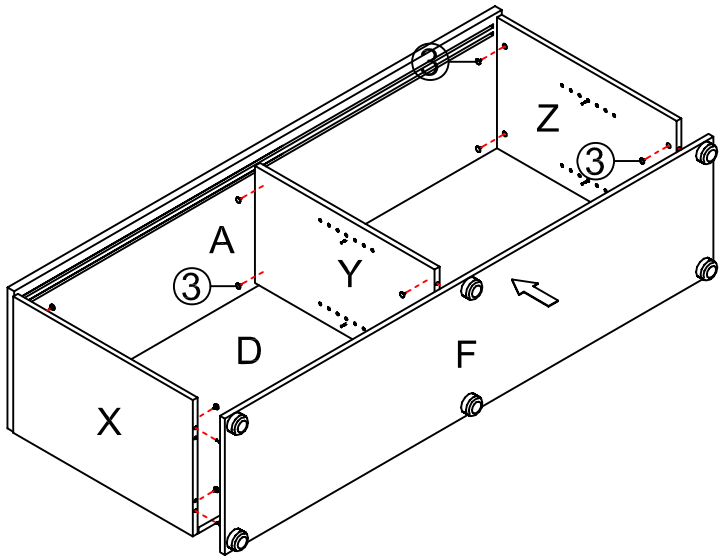


3

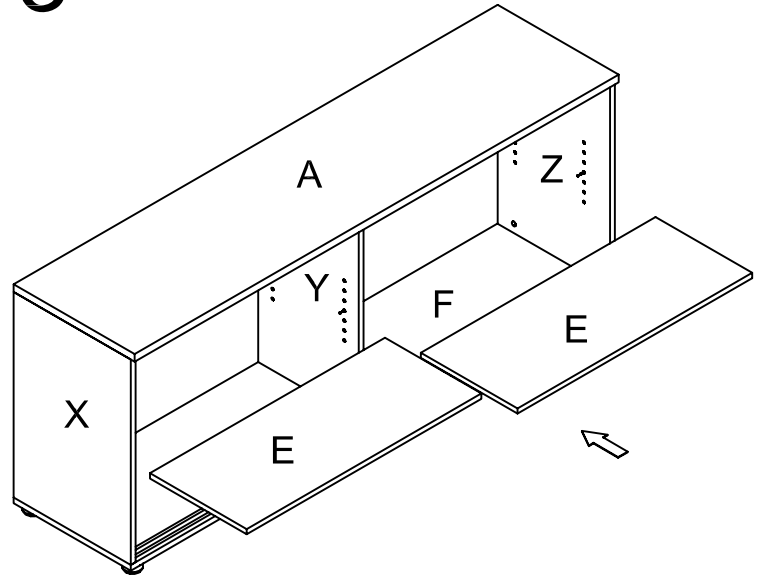



4

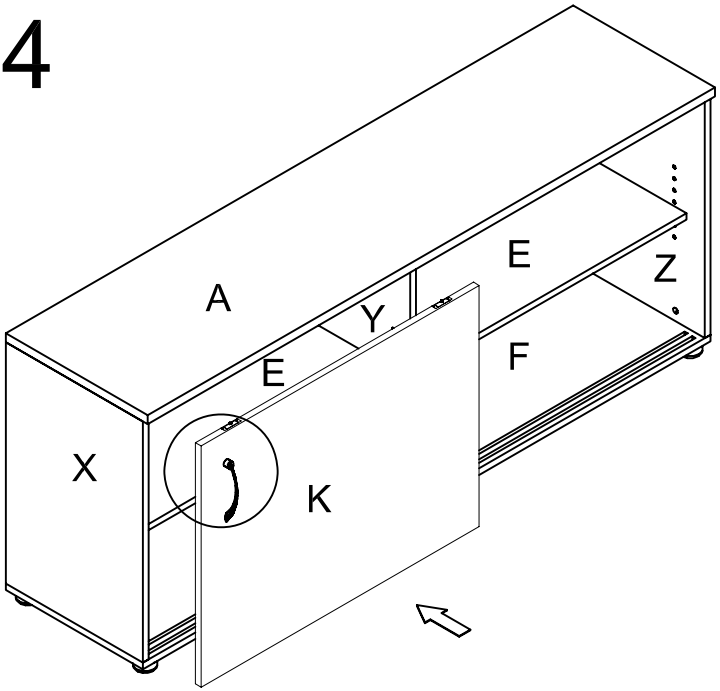

5

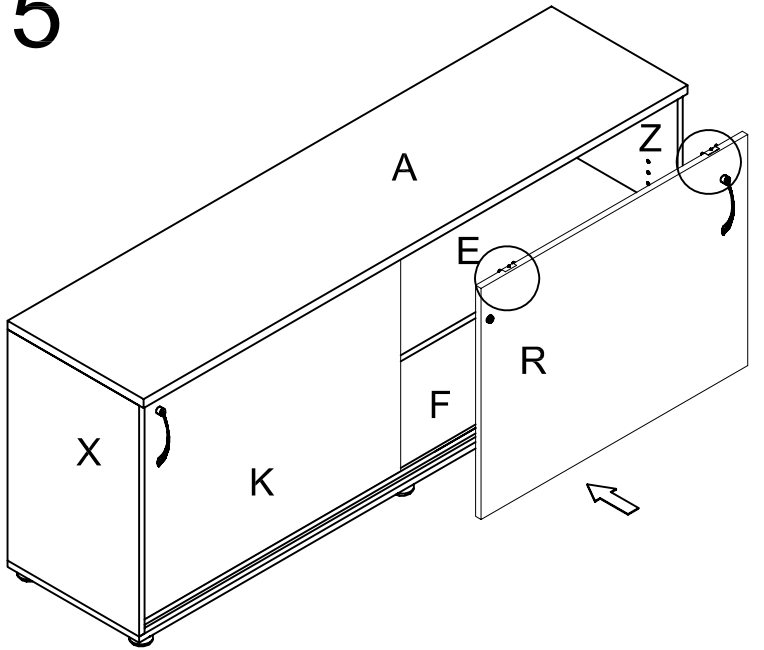


6

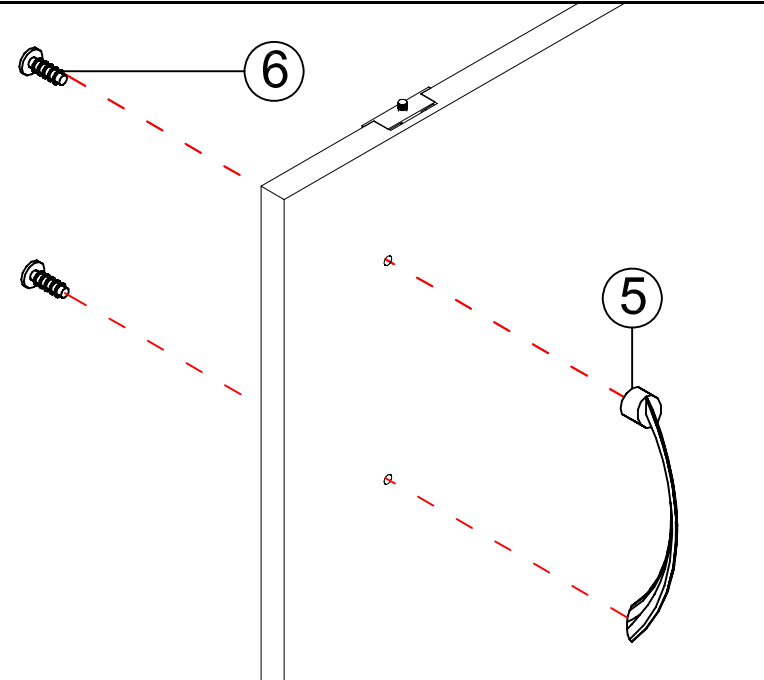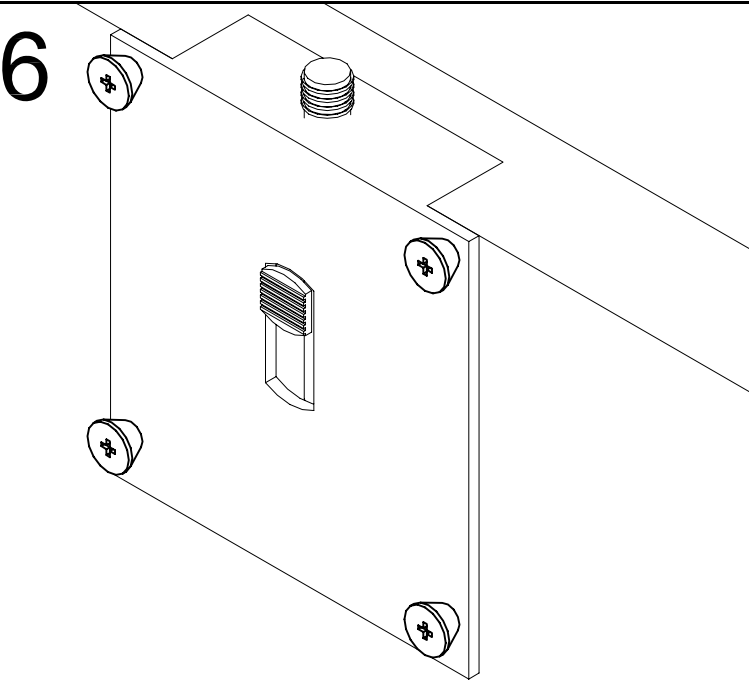




ASSEMBLY INSTRUCTIONS

VCZ1845


rapidline
FURNITURE FOR TODAY
2011-8-25

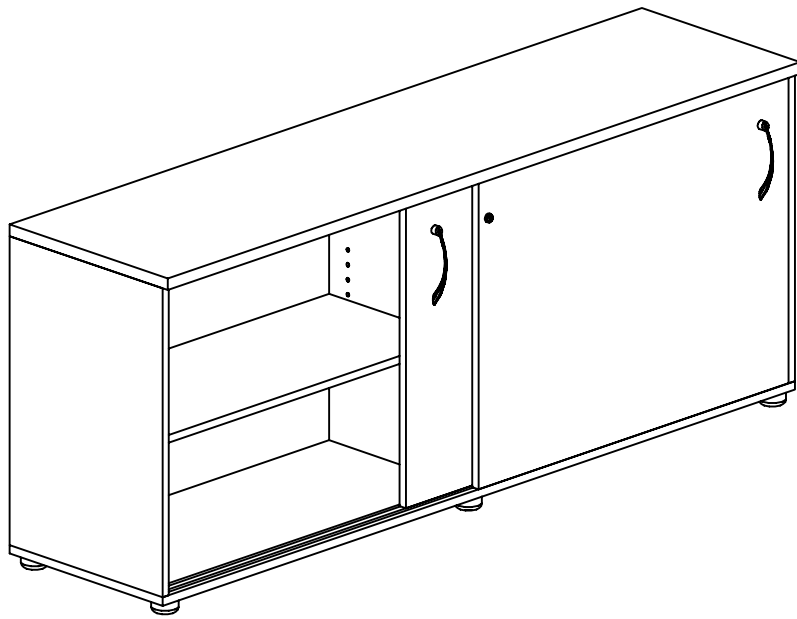


<p>pin 6x35 1 24PCS</p>	<p>CAM 2 24PCS</p>
<p>Cam Cover 3 24PCS</p>	<p>Bolt Minifix 4 8PCS</p>
<p>T-Handle 5 2PCS</p>	<p>Screw 4x22 6 4PCS</p>
<p>CUSHION 25Hx4E2 7 6PCS</p>	<p>Screw 4x30 8 6PCS</p>
<p>LOCK 9 1PCS</p>	<p>Screw 3.5x13 10 2PCS</p>

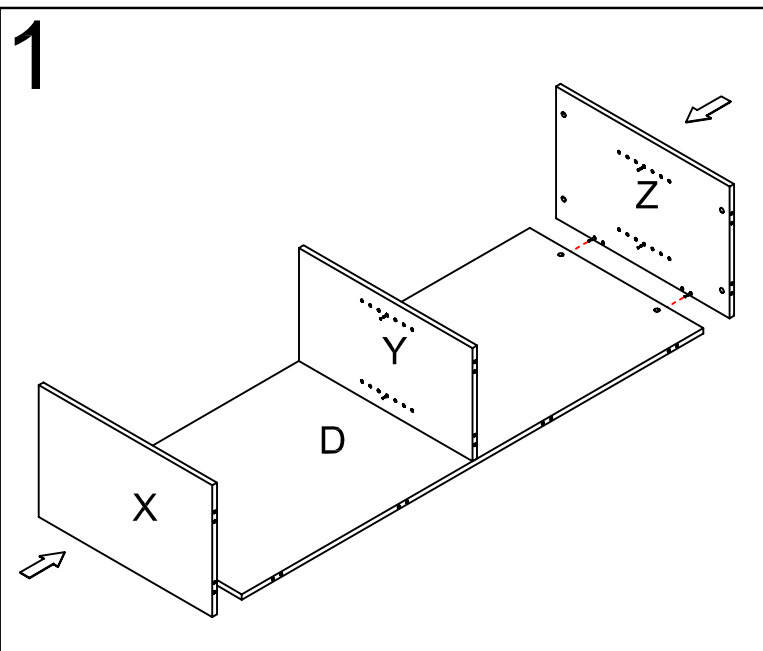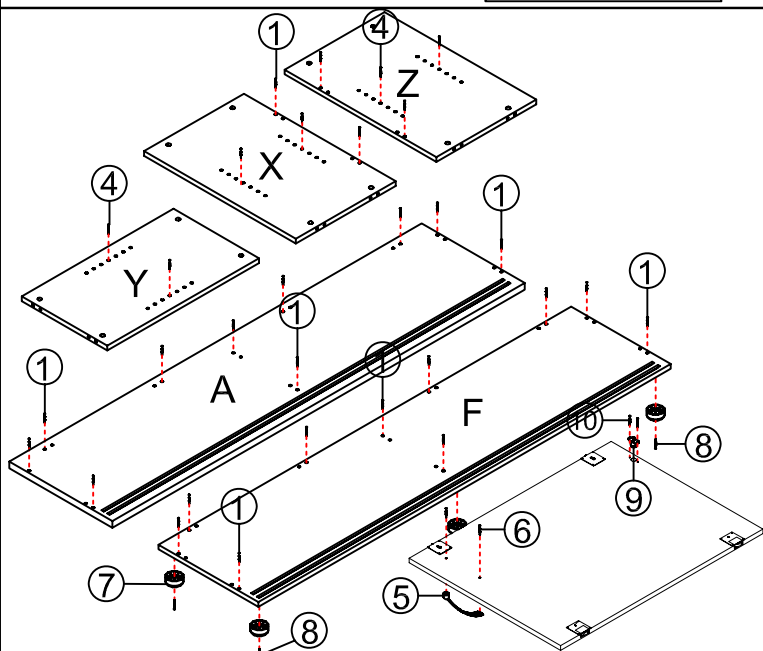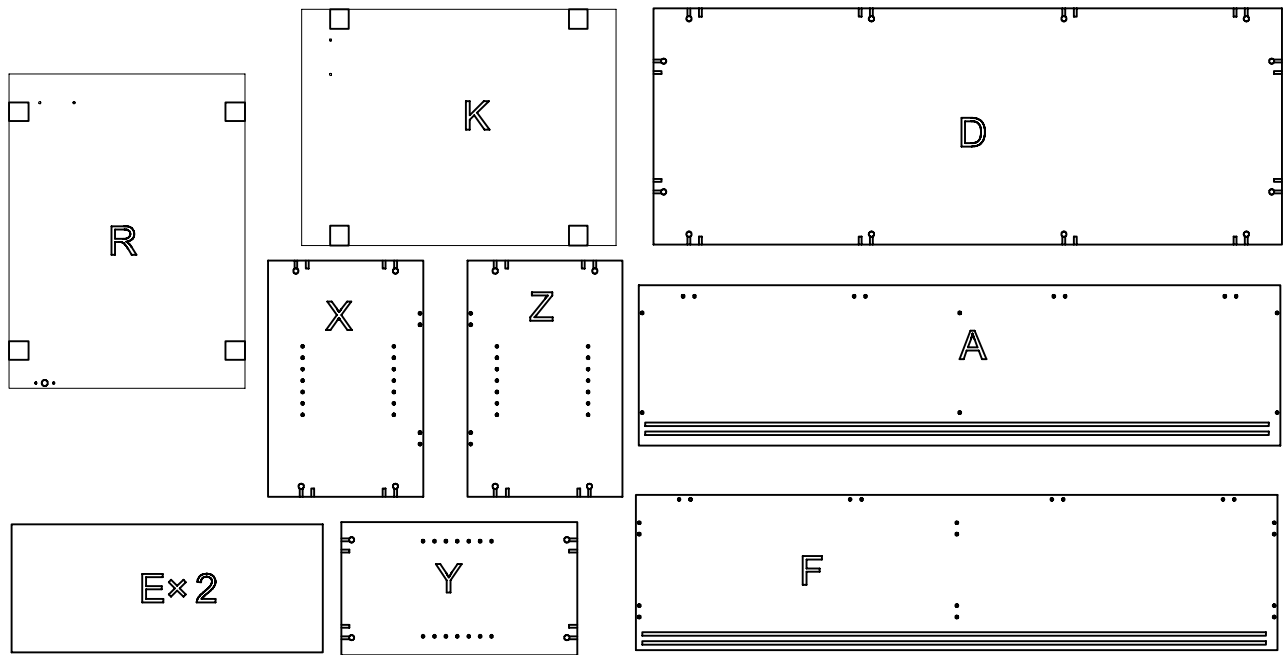


2

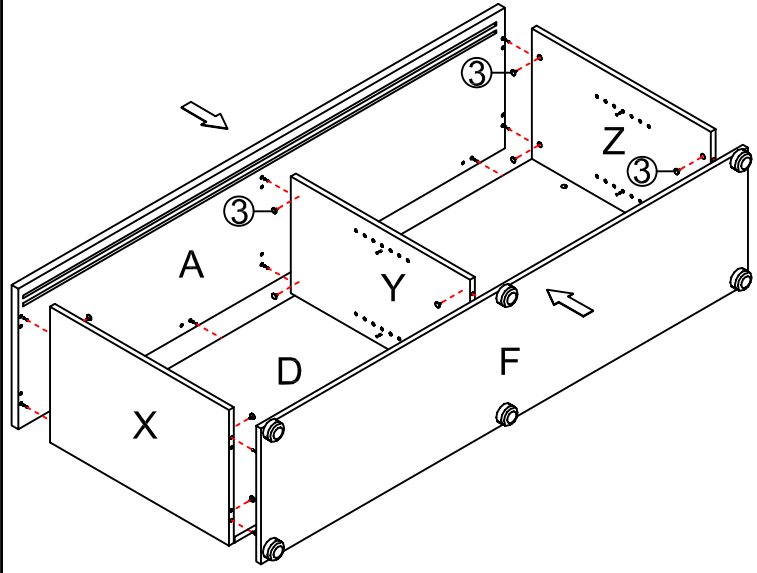


3

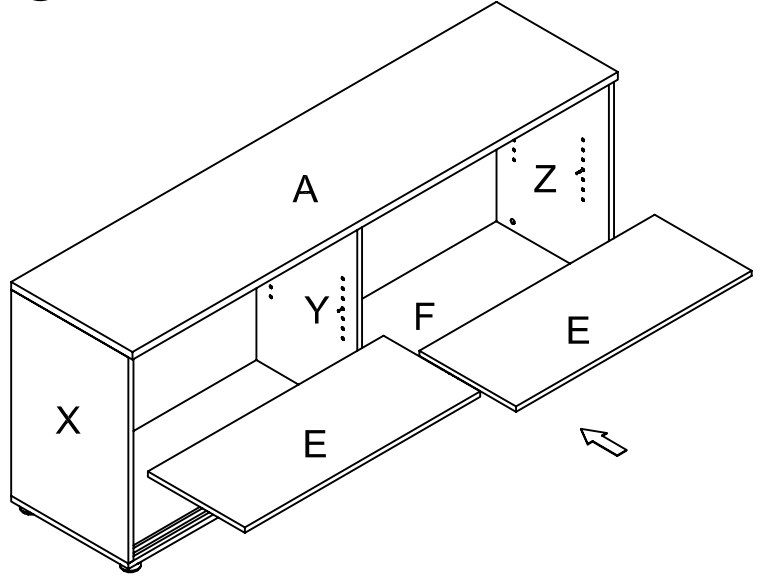

4

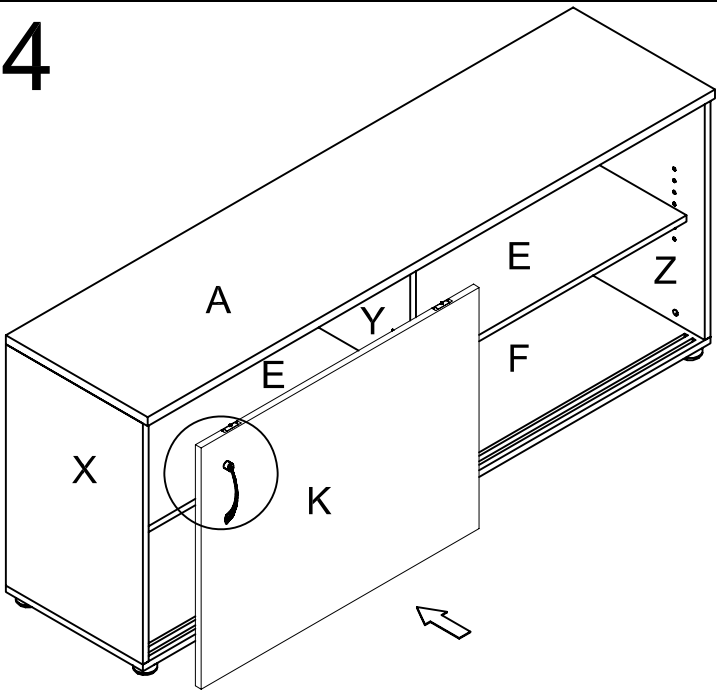

5

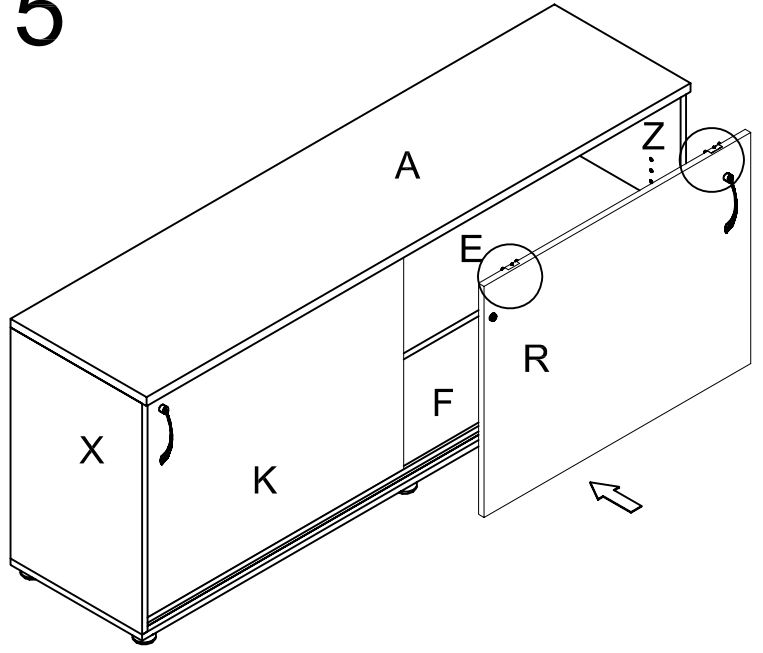

6

