





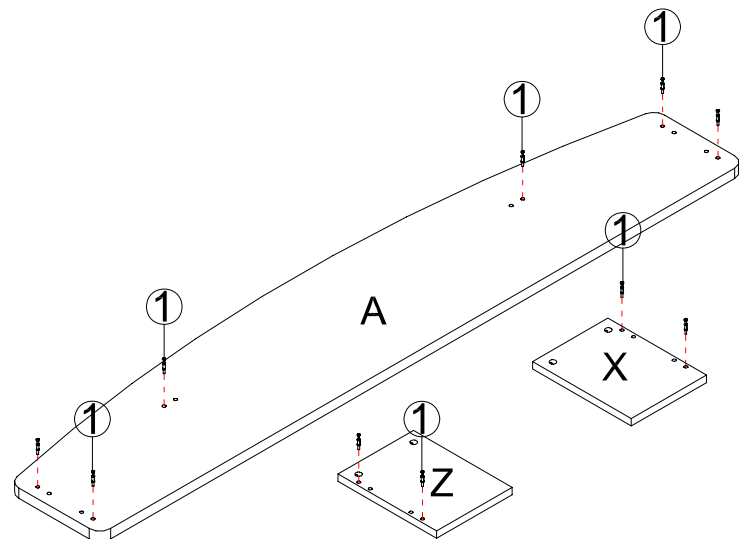
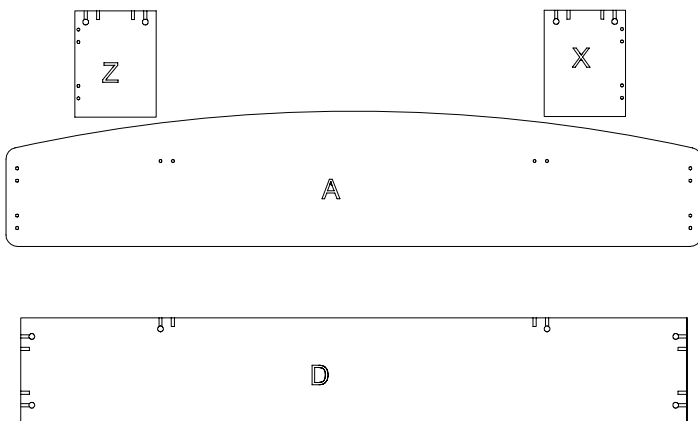
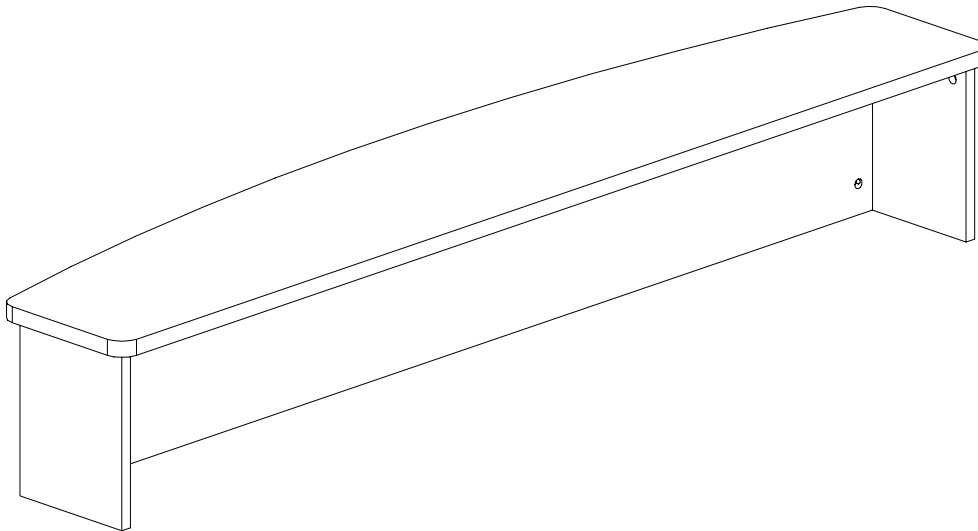


# ASSEMBLY INSTRUCTIONS

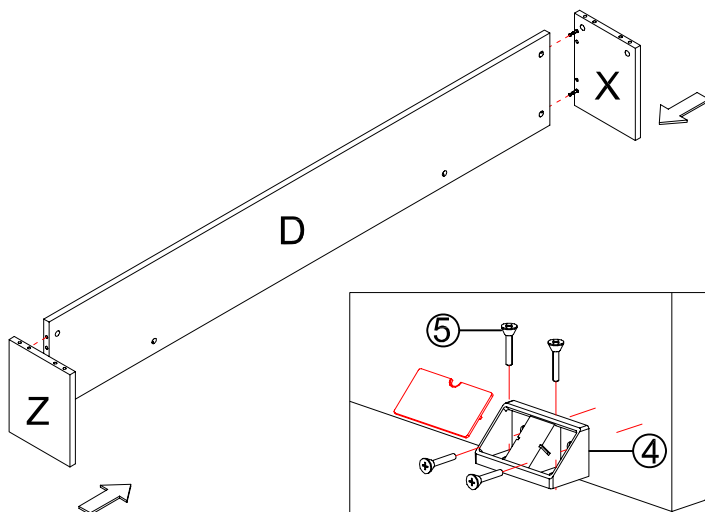
## VHOB18

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

pin		6X35
	1	10PCS
CAM		
	2	10PCS
Cam Cover		
	3	10PCS
Bracket		
	4	4PCS
Screw		4X16
	5	16PCS
		



1



2

