


EPS (900mm H Eco Panel) Screen panel installation on BOOST or HALO workstations


Step 1

- Install the screen brackets(B2-SBRAC) on the cable tray arm (B2-SSARM)with 10 PCS M6x10 Screws
The brackets direction as photos display.

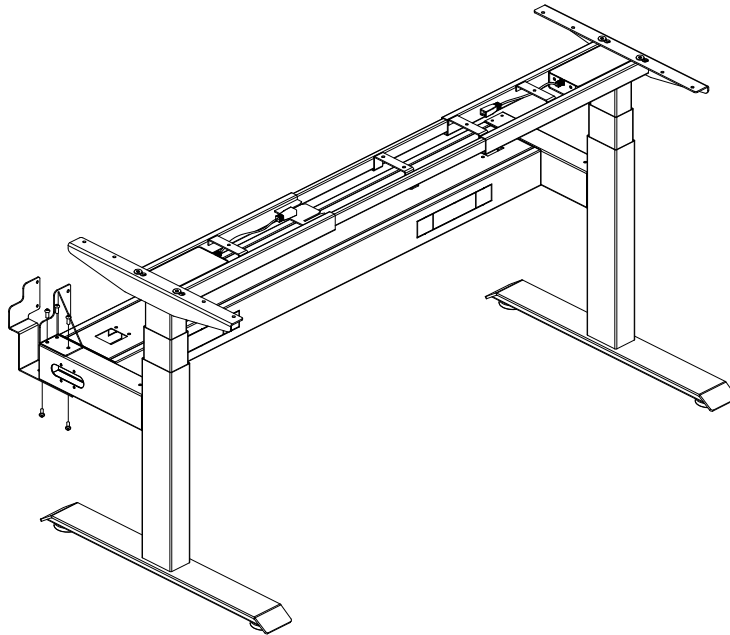

Step 2


- Place the EPS panel on the screen brackets
- Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)
- Place 8 x Double Ended Bolts M5* 32mm - 6mm through The screen bracket (B2-SBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

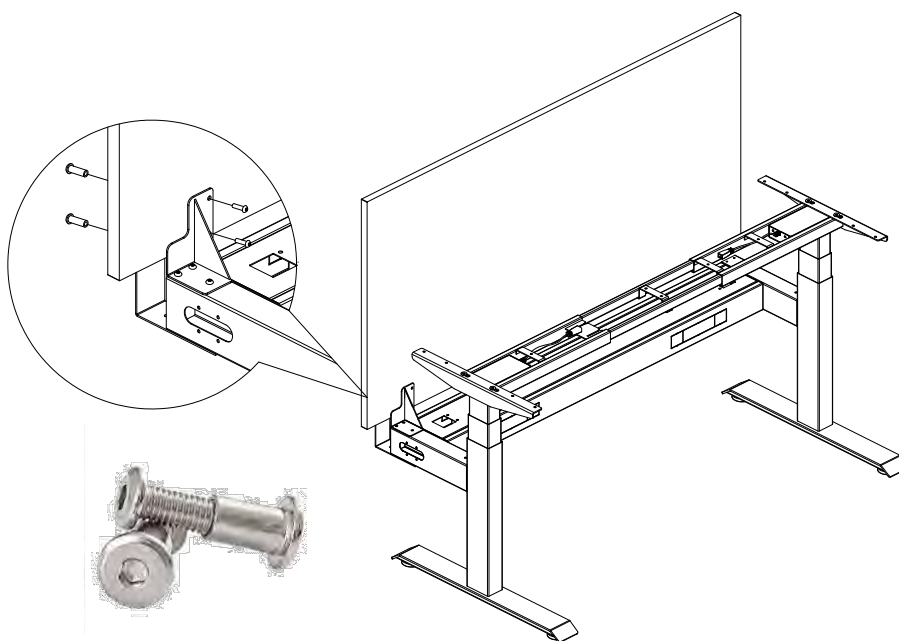

EPS (900mm H Eco Panel) Screen panel installation on Boost and Halo

Step 1

- Install the screen brackets with 8 PCS M6x10 Screws
- The brackets direction as photos display.

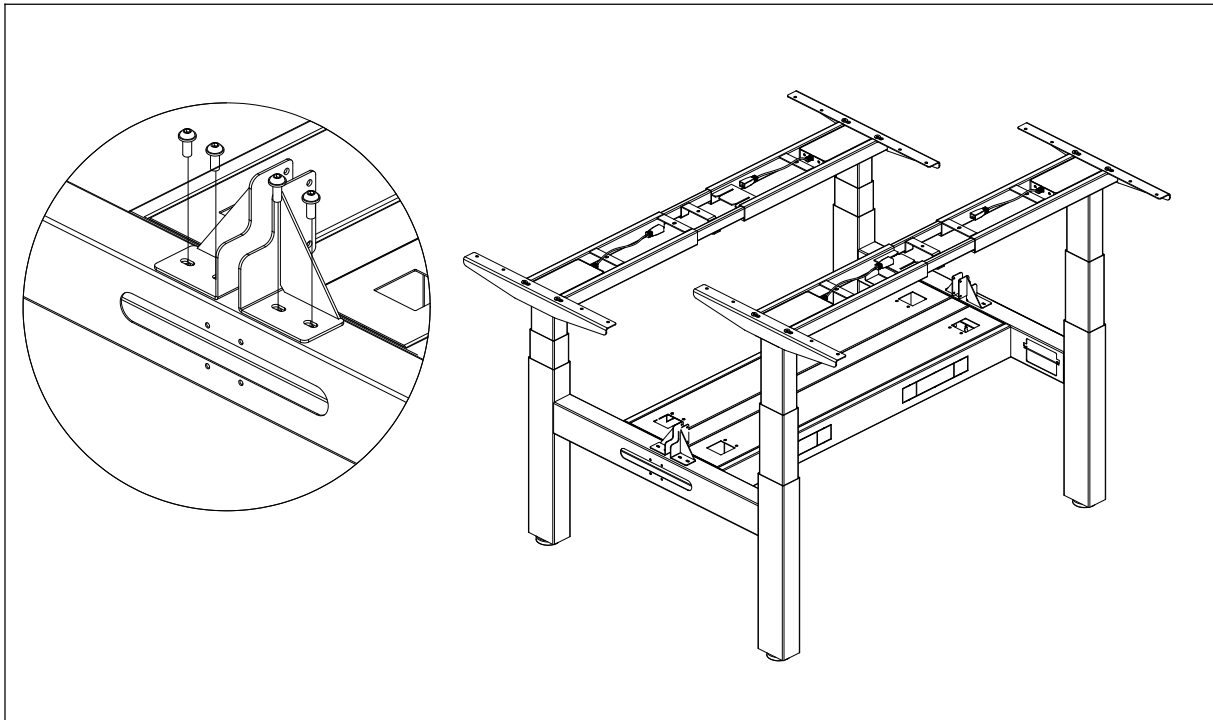

Step 2

- Place the EPS panel on the screen brackets
- Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)
- Place 8 x Double Ended Bolts M5* 32mm - 6mm through screen bracket (B2-BBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

