

Eco Panel Pinboard Installation Guide

Eco Panel Pinboards:

Available in 12 different sizes and a 12mm thickness



Mounting Hardware Types:

Stainless Steel Screw Covers AH-SSC16 SL) – Silver Colour Or (AH-SSC16 BLK) – Black Colour



Tools & Materials Required:




Tape measure, spirit level or laser level, pencil, drill, wall anchors (type dependent on wall substrate)

Eco Panel Pinboard Installation Guide

Eco Panel Pinboard Installation Process:

STEP 1

Mark a mounting point on each corner of the board measuring 35mm in from the edges.

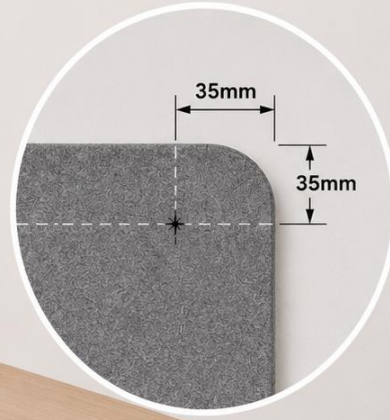


Mark a mounting point on each corner of the pinboard, approximately 35mm in from each edge using a pen or marker.
Measure and record the distance between each point, then proceed to step 2.



Eco Panel Pinboard Installation Guide

STEP 2

Drill holes into the pre-marked wall to suit the wall anchors you have purchased from others (if wall anchors are required for your wall substrate).

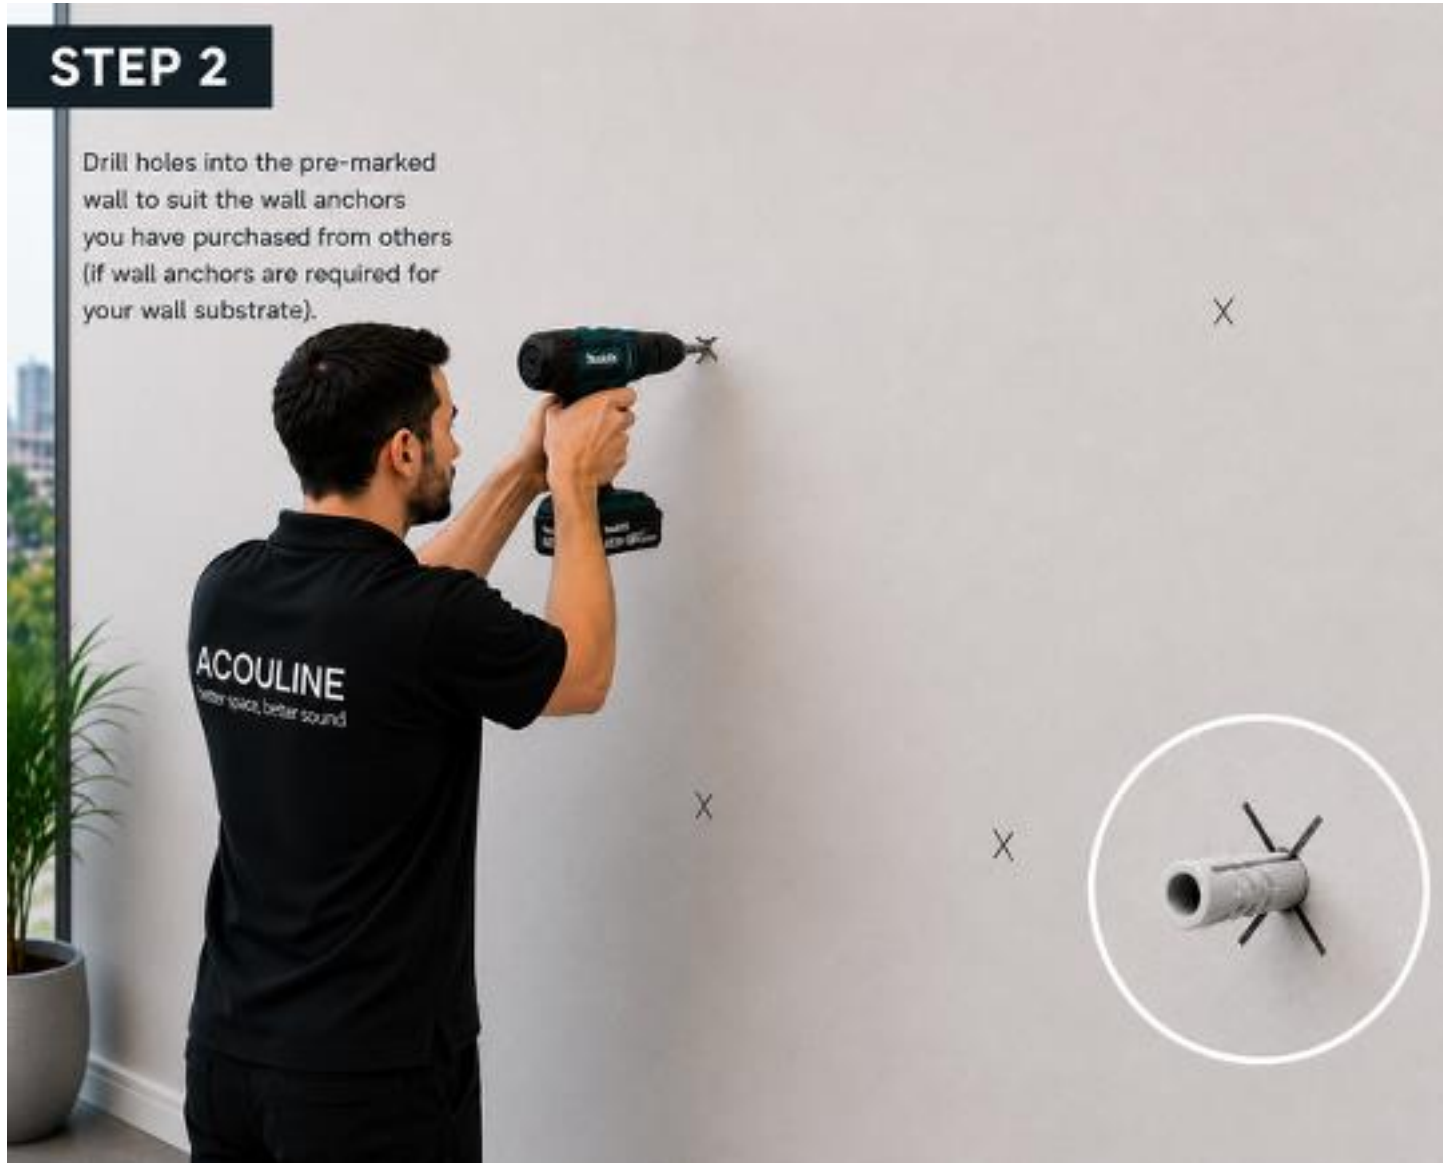

Using the distance between the points you have marked on the pinboard in Step 1, use a tape measure, and mark out the wall area. (Measure floor to bottom of board, then to the top of the board followed by the sides). Use a spirit level to ensure the marking is straight.

Drill holes into the pre-marked wall to suit the wall anchors you have purchased separately (only if your wall substrate type requires it)

Eco Panel Pinboard Installation Guide

STEP 3

Install your chosen wall anchors in accordance with the manufacturer's instructions on wall anchor installation based on your wall substrate.

Drill the required holes and insert the wall anchors. Follow the wall anchor manufacturer's instructions for correct installation.



Eco Panel Pinboard Installation Guide

STEP 4



Align the pinboard with the installed wall anchors



Using your drill and the screw provided, drill the screw through the pinboard and into the wall anchor behind it.

Note the required order of the screw, threaded piece and rubber washer in figure "a".

Figure "a"



Using a screwdriver or drill, drive the supplied screws through the marked pinboard mounting points created in Step 1.

Pre-drilling is not required.

Ensure the threaded washer is fitted to each screw before installation so that the stainless steel screw cap can be attached later.

Position the pinboard against the wall and secure it by inserting the screws into the wall anchors.

Eco Panel Pinboard Installation Guide



Once the pinboard is securely fixed in place, thread the Acouline Stainless Steel or Black screw covers to complete the installation.

STEP 5