


Boost Crank

Height Adjustable Desk Return frame


Instruction Manual

Table of Contents

| | |
|-----------------------------|---|
| Component parts | 2 |
| Assembly Instructions | 3 |

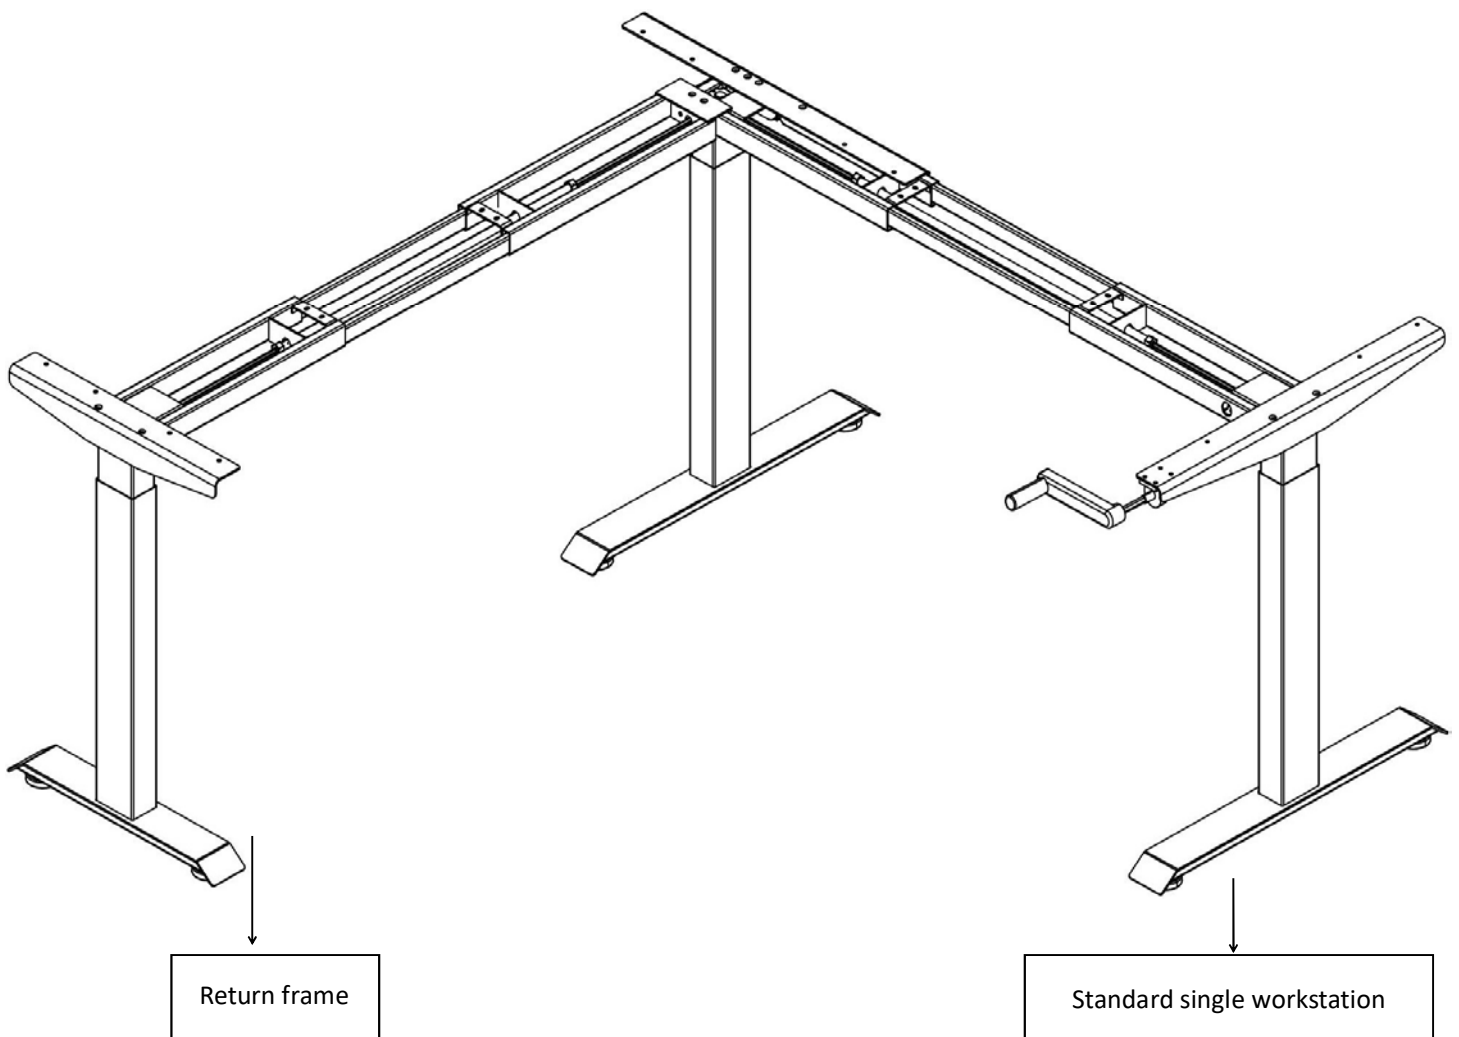

Component parts

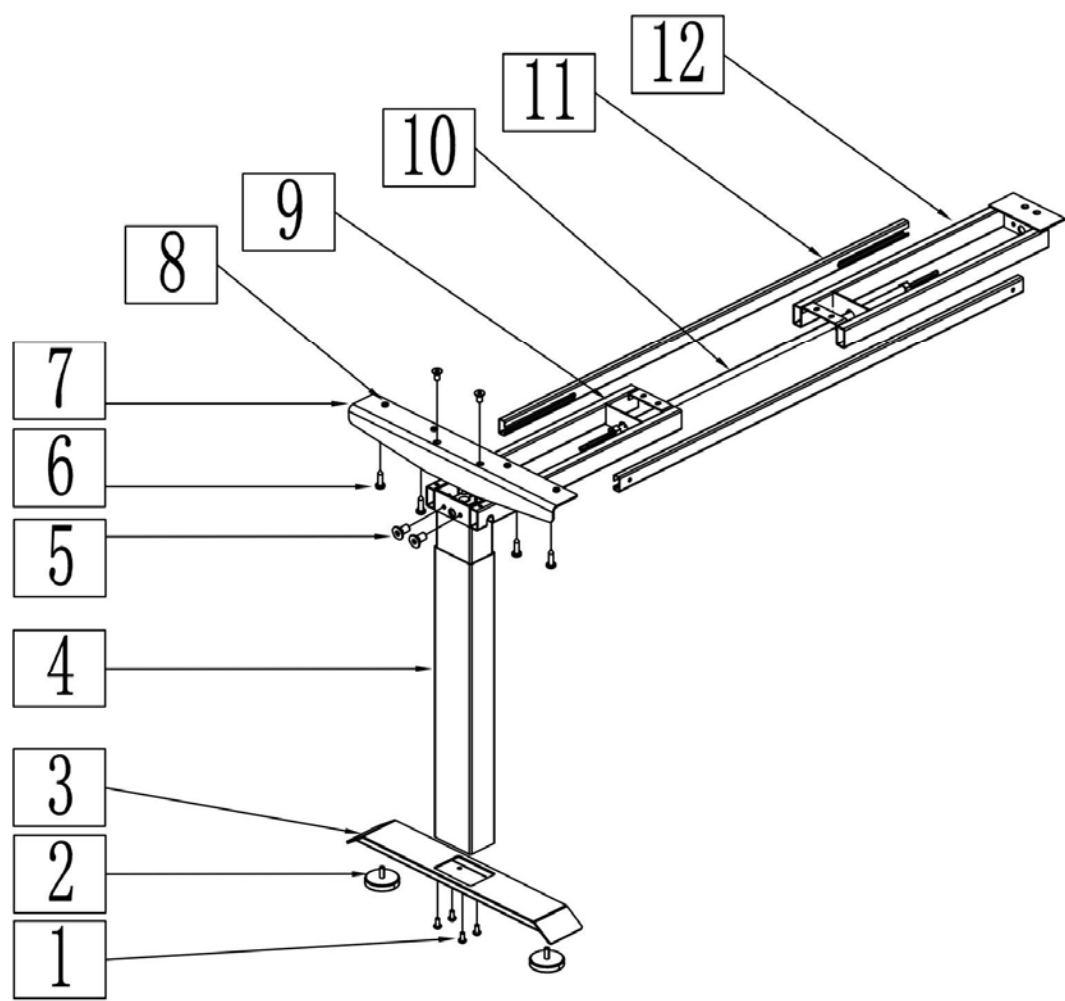


| NO. | Component Name | PCS | | NO. | Component Name | PCS |
|-----|------------------|-----|--|-----|----------------|-----|
| 1 | Hand bolts M6x10 | 4 | | 10 | transmit | 1 |
| 2 | Leveling pads | 2 | | 11 | Centre bracket | 2 |
| 3 | Table feet | 1 | | 12 | Top frame-2 | 1 |
| 4 | Lifting column | 1 | | | | |
| 5 | Bolt: M6x12 | 6 | | | | |
| 6 | Screw:ST4x16 | 8 | | | | |
| 7 | Side brackets | 1 | | | | |
| 8 | Rubber pad | 8 | | | | |
| 9 | Top frame-1 | 1 | | | | |

Assembly Instructions

Step 1


Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.

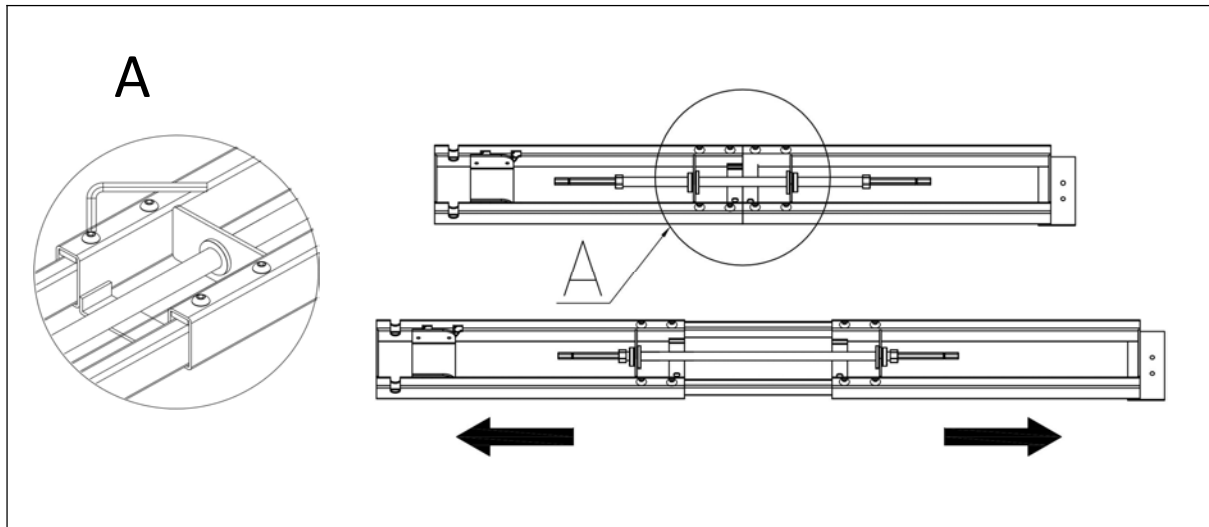

Step 2


Inset the lifting column to the top frame.

- First fix 2pcs screws M6x12 like **B** displayed
- And then tighten the pre-installed bolts like **C** displayed

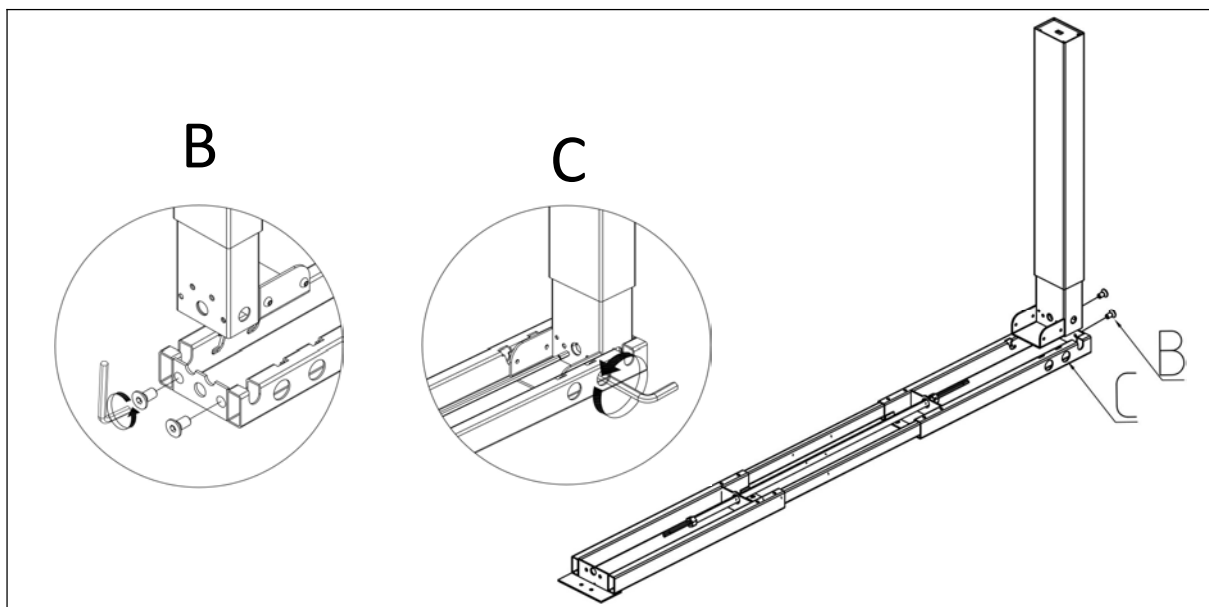


Step 3

- Install the table feet with 4 PCS M6X16 bolts
- Install the leveling feet

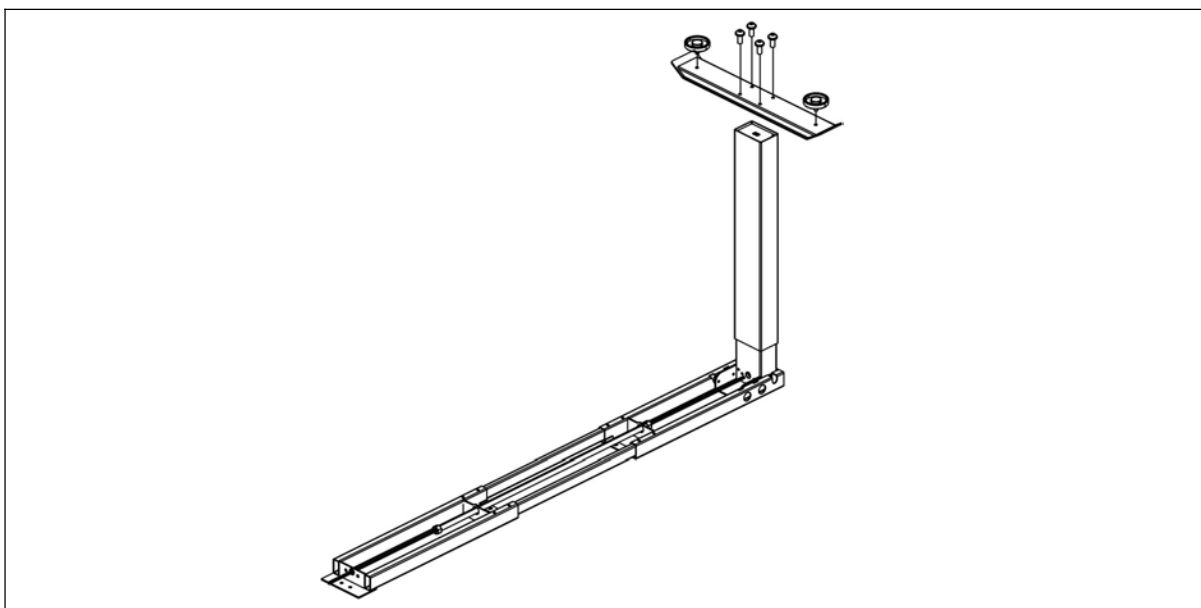

Step 4

Install the side bracket with 2 PCS M6x12 Bolts

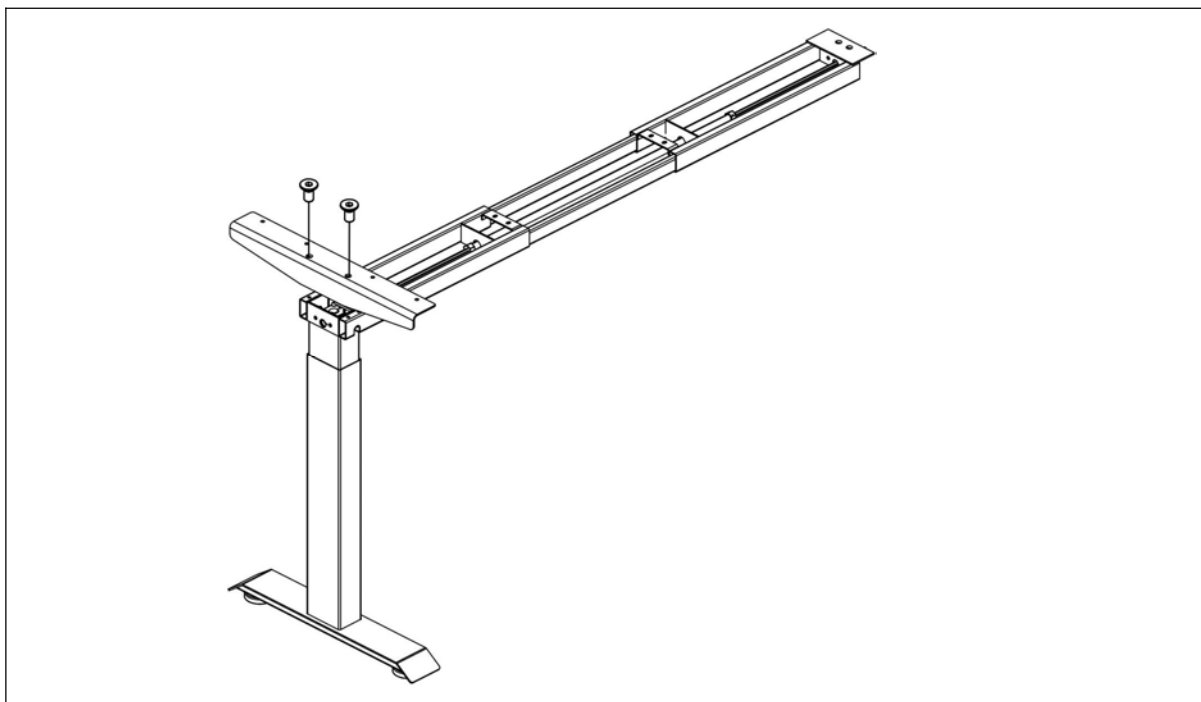


Step 5

Connect the return frame to the single desk and fix it with 2 PCS M6x12 Bolts

Adjust the side bracket to align the return frame and fix it with 2 PCS M6x12 Bolts


Insert the hex steel rod to the single workstation and tighten it.

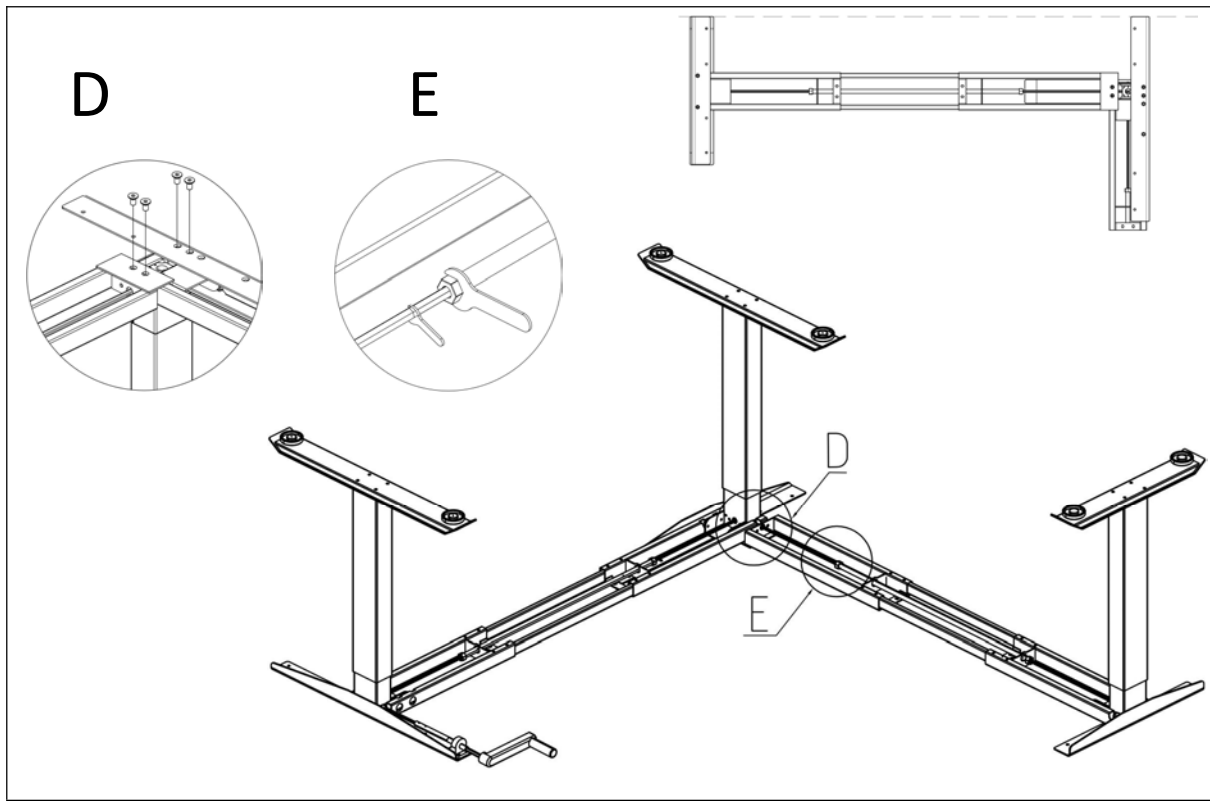

Step 6

Fix the desk frame to the tabletop with 17 PCS ST4X16 screws


Fix the manual crank holder with 2 PCS ST4X16 screws

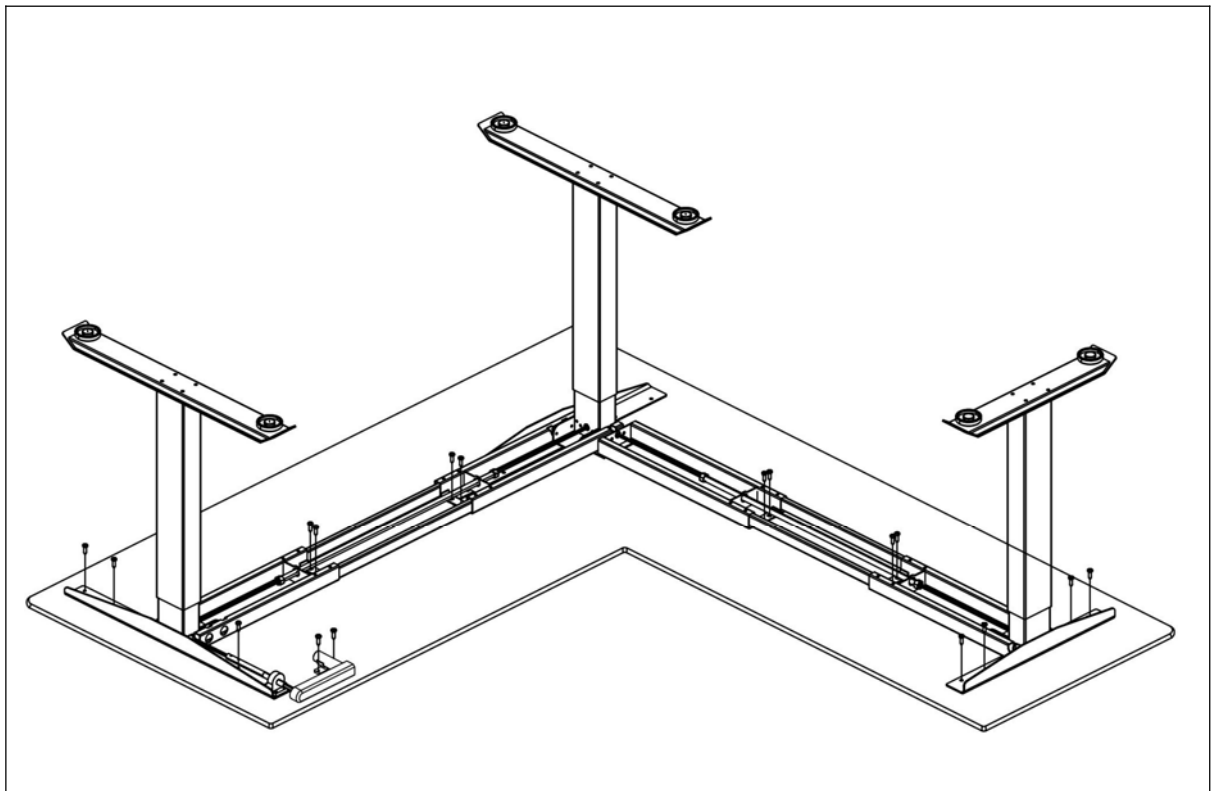

Add-On : Cable tray installation


Step 1

- Fix the cable tray to the cable tray arms with 8 pcs M6x10 screws.

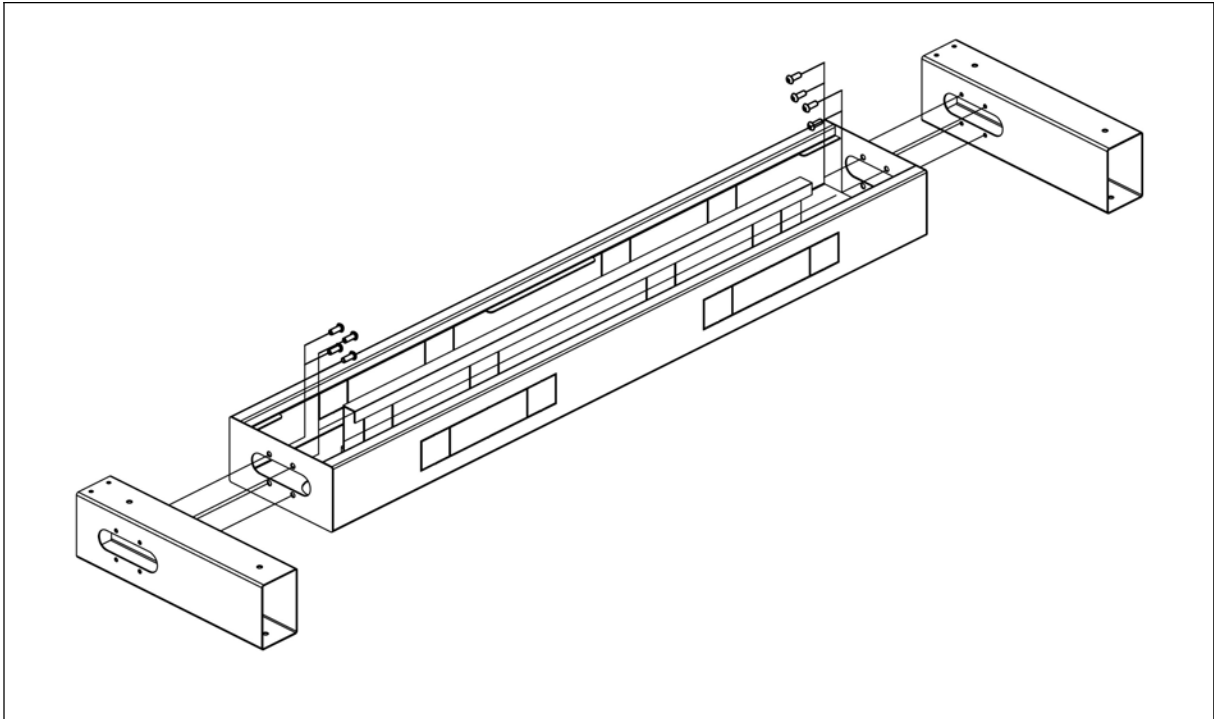

Step 1


- Install the U brackets to the desk frame with 4 pcs M8x10 screws.
- Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

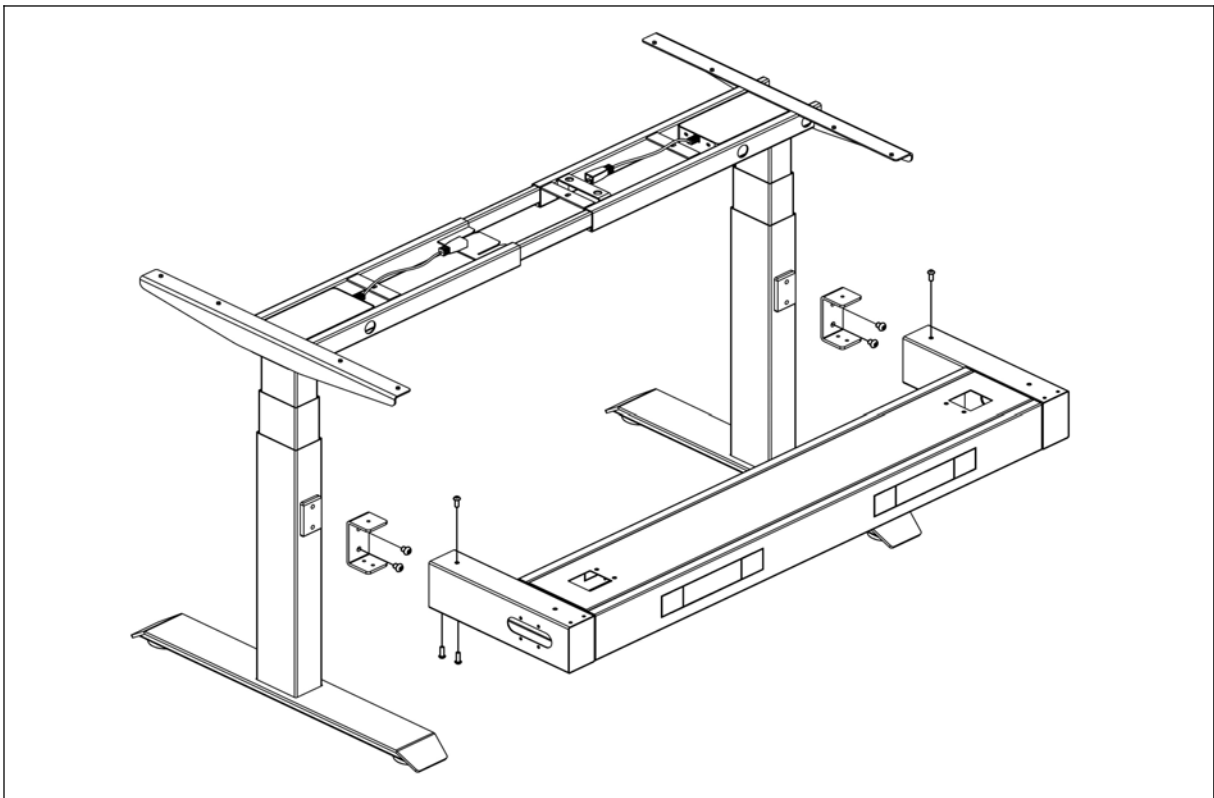

Add On : Screen panel installation


Step 1

- Insert the tapped plates to the screen panel

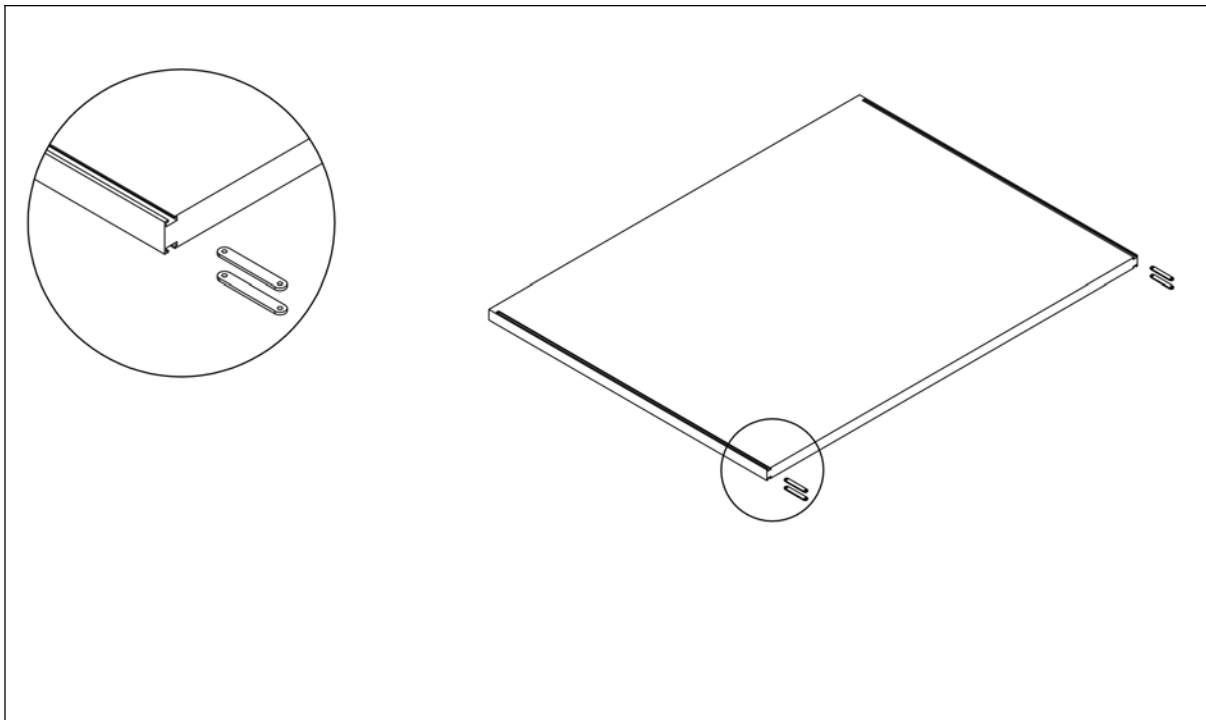


Step 2

- Install the brackets to the panel with 8 pcs M5x6 screws.

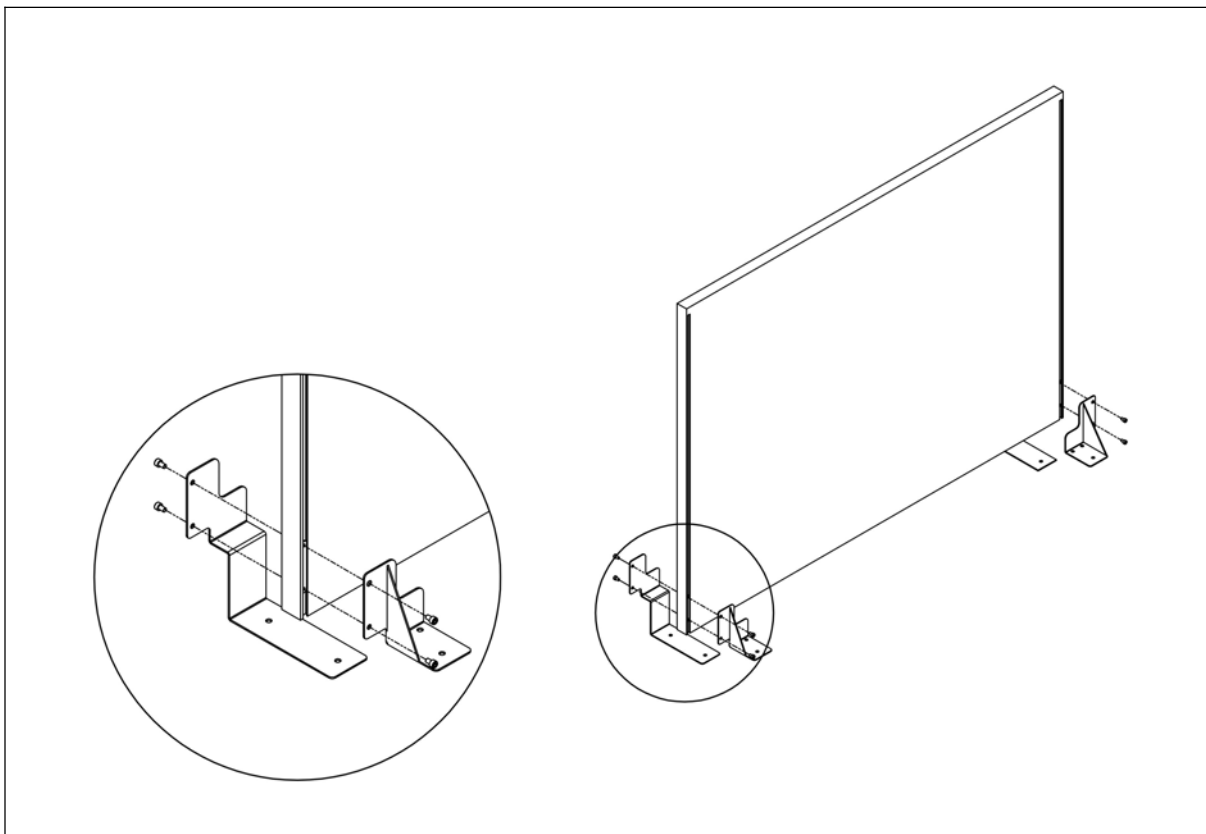

Step 3


- Fix the panel to the desk frame with 10 pcs M6x10 screws.

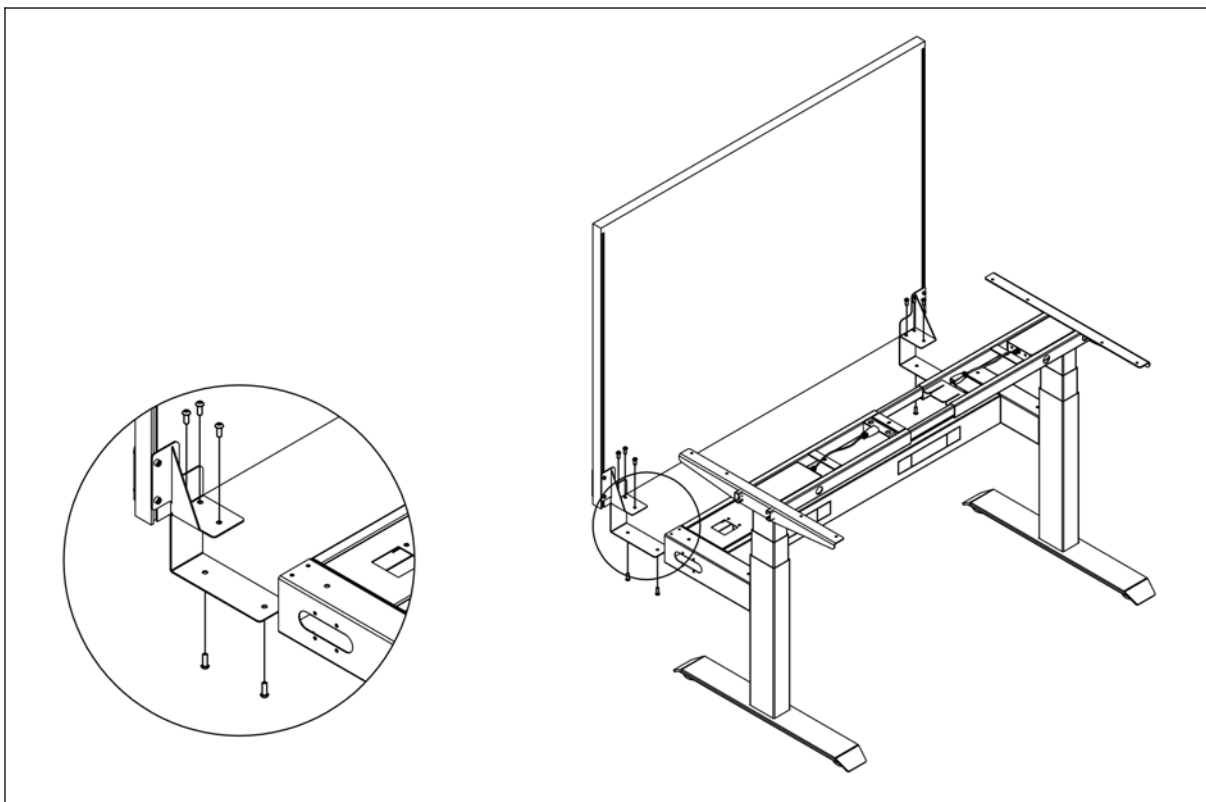

EPS (900mm H Eco Panel) Screen panel installation

Step 1

- Install the screen brackets(B2-SBRAC) on the cable tray arm (B2-SSARM)with 10 PCS M6x10 Screws
The brackets direction as photos display.

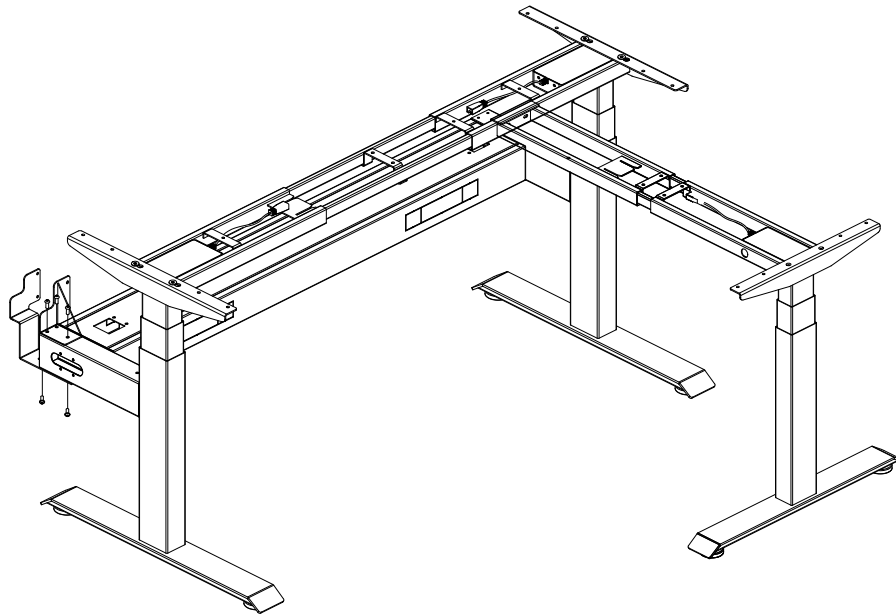

Step 2

- Place the EPS panel on the screen brackets
Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)
- Place 8 x Double Ended Bolts M5* 32mm - 6mm through The screen bracket (B2-SBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

