



# Assembly Instructions

MODEL NO: CMZ1245

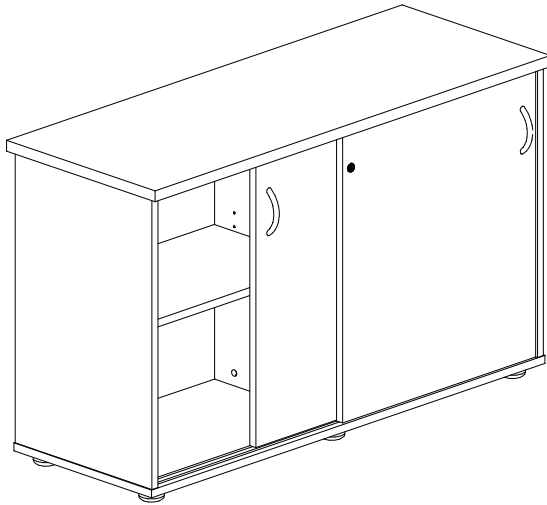


|                           |                                    |                                  |
|---------------------------|------------------------------------|----------------------------------|
| Pin<br>6x35<br>20PCS<br>1 | Cushion<br>ø42x25H<br>6PCS<br>6    | ø6x40<br>2PCS<br>11              |
| Cam<br>20PCS<br>2         | Handle Screw<br>4x22<br>4PCS<br>7  | Wood Screw<br>4x40<br>2PCS<br>12 |
| Cam Cover<br>20PCS<br>3   | Lock<br>1PCS<br>8                  | Wood Screw<br>4x16<br>2PCS<br>13 |
| Shelf Pin<br>8PCS<br>4    | Wood Screw<br>3.5x13<br>26PCS<br>9 |                                  |
| T-Handle<br>2PCS<br>5     | 73x23x15<br>2PCS<br>10             |                                  |


## STEP1

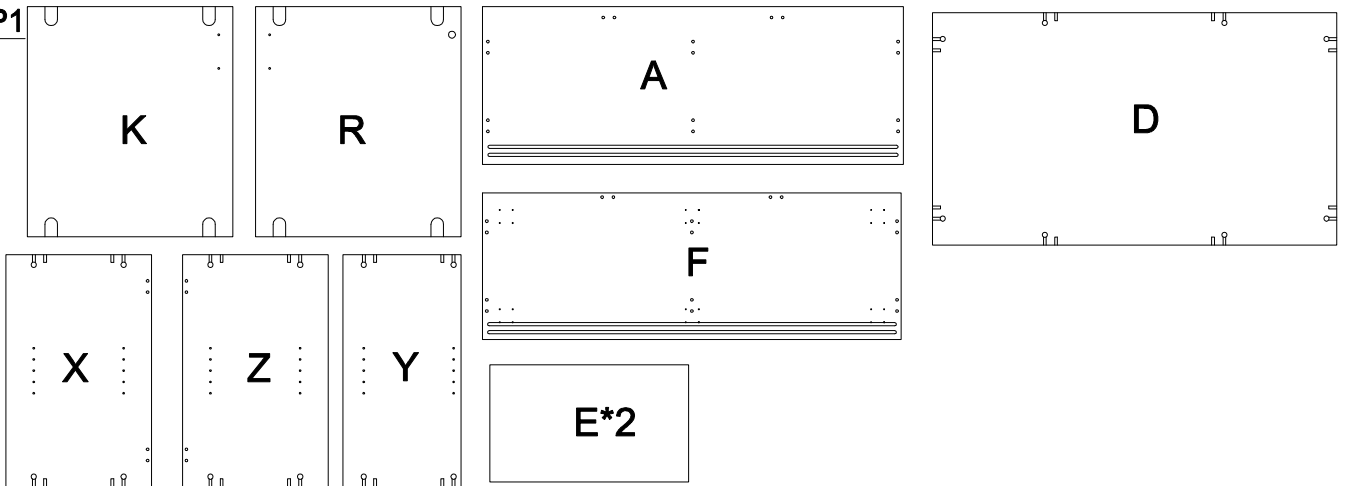

## STEP2

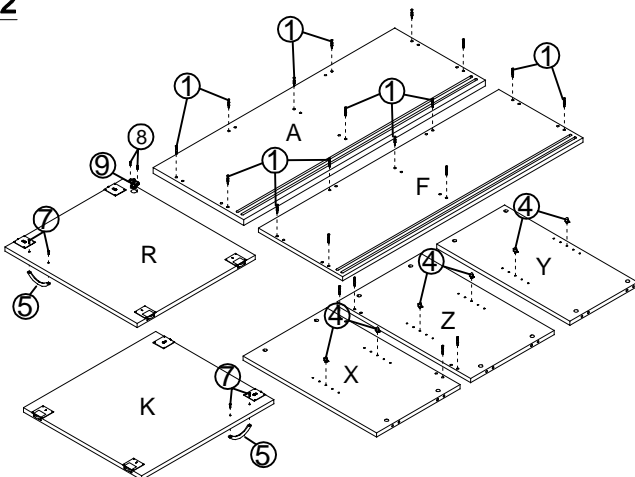


## STEP3

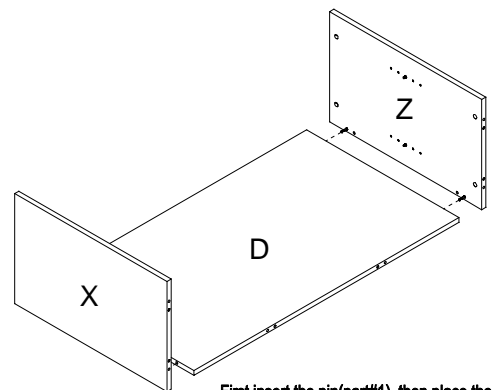

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CMZ1245


## STEP4

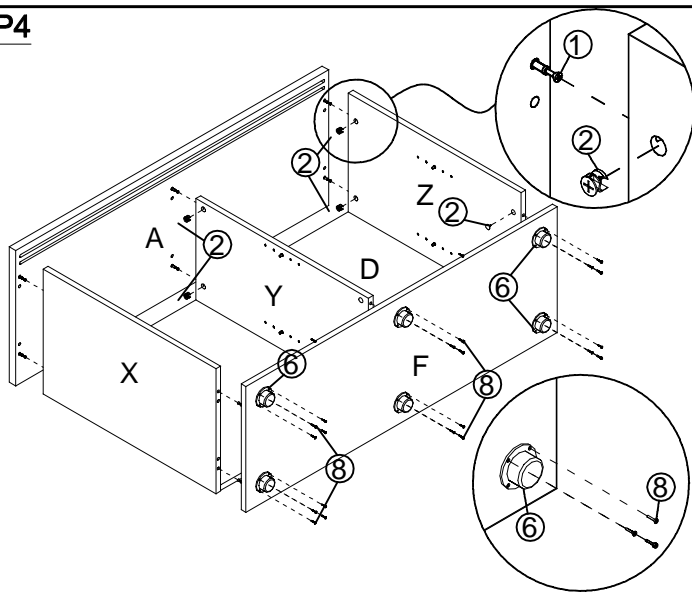


## STEP5

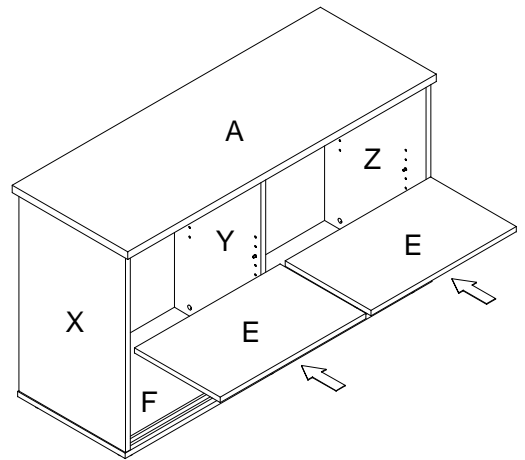


## STEP6

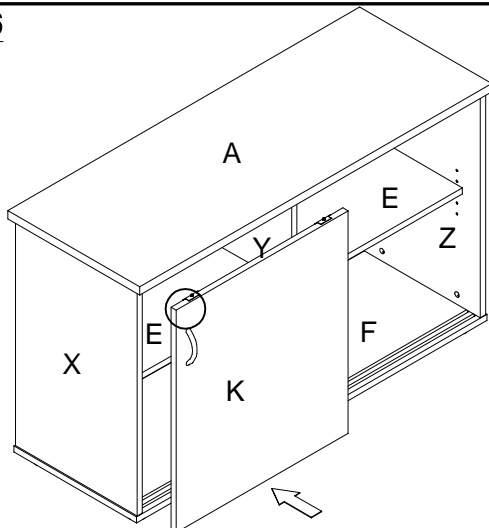


## STEP7

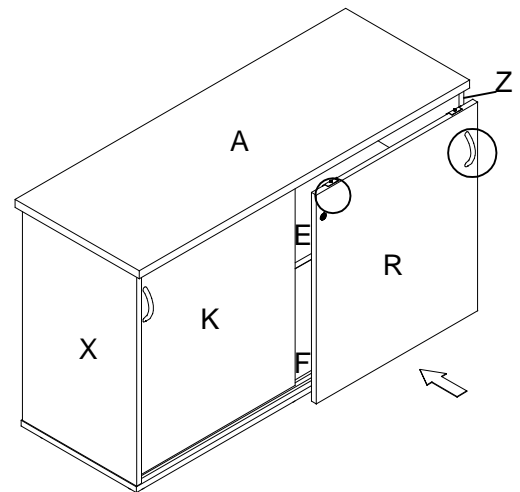

## STEP8

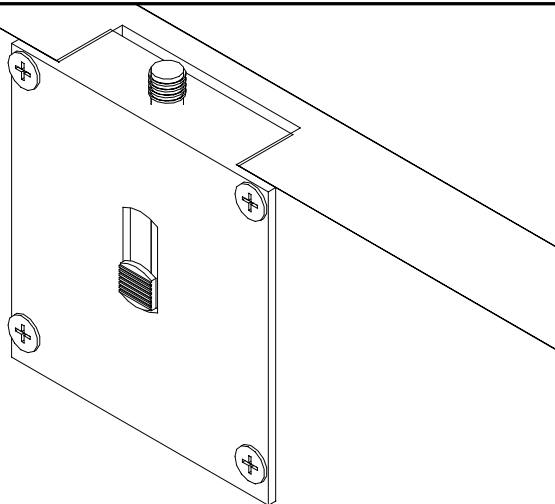


## STEP9

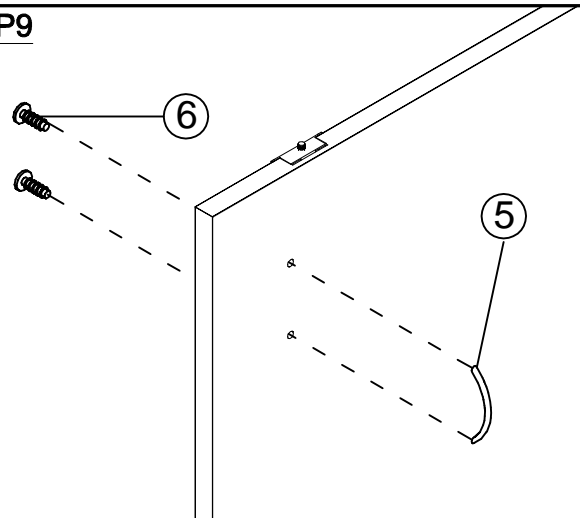

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions


MODEL NO: CMZ1245

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

## STEP10 Make a mark with a pencil

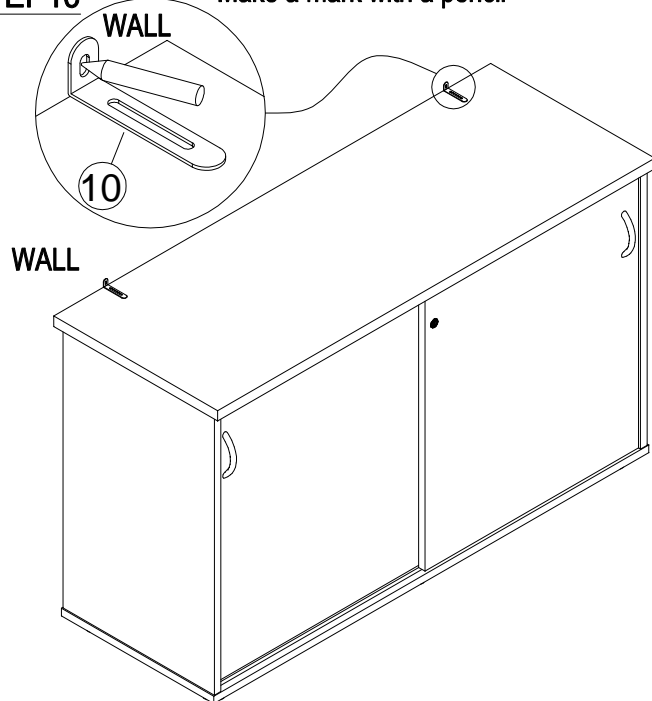


## STEP11

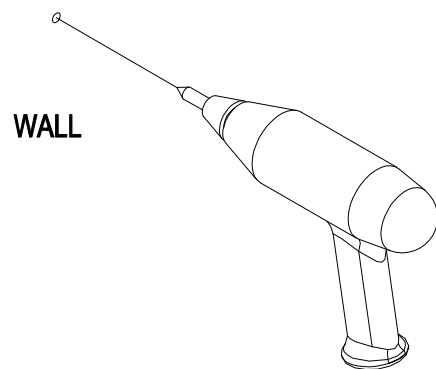


Drill holes at the marks with an electric drill

## STEP12

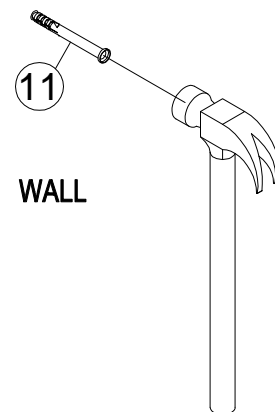


## STEP13

WALL

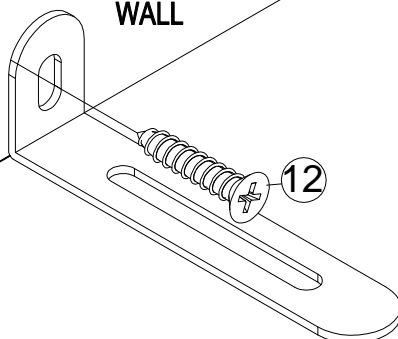

## STEP14

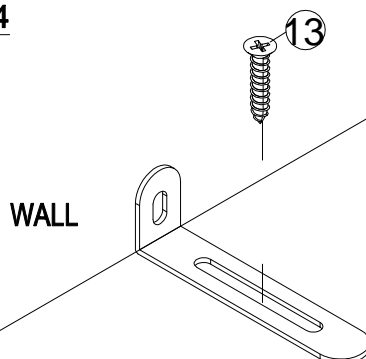

### ⚠ WARNING



#### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture




This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>


### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CMZ1845/CMZ1545

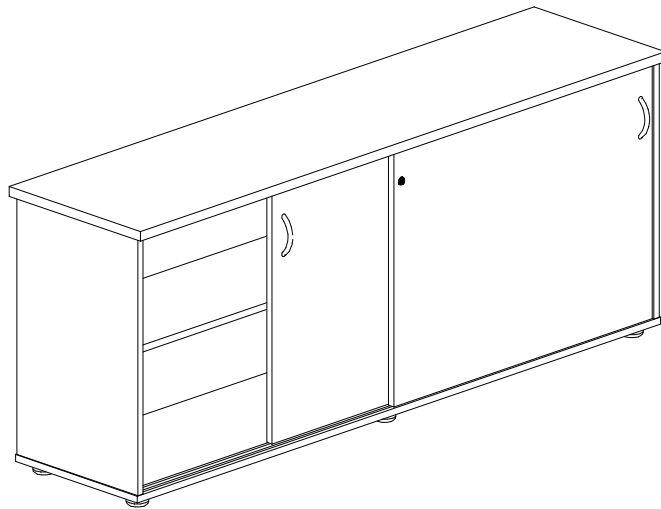


|                                 |                            |                                  |                                  |
|---------------------------------|----------------------------|----------------------------------|----------------------------------|
| pin<br>1<br>6×35<br>24PCS       | CAM<br>2<br>24PCS          | Screw<br>3.5×13<br>8<br>26PCS    | Wood Screw<br>4×16<br>12<br>2PCS |
| Cam Cover<br>3<br>24PCS         | Bolt Minifix<br>4<br>8PCS  | 73×23×15<br>9<br>2PCS            |                                  |
| T-Handle<br>5<br>2PCS           | Screw<br>4×22<br>6<br>4PCS | ø6×40<br>10<br>2PCS              |                                  |
| CUSHION<br>25H×φ42<br>7<br>6PCS | LOCK<br>8<br>1PCS          | Wood Screw<br>4×40<br>11<br>2PCS |                                  |


## STEP1

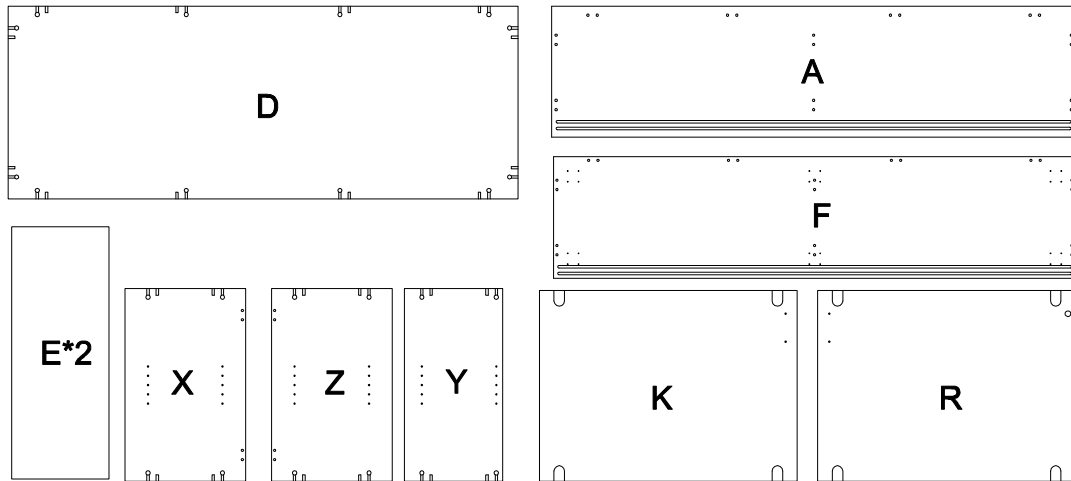

## STEP2

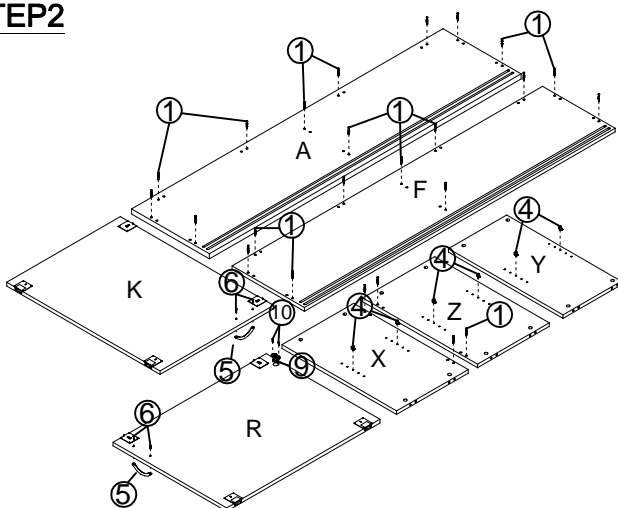


## STEP3

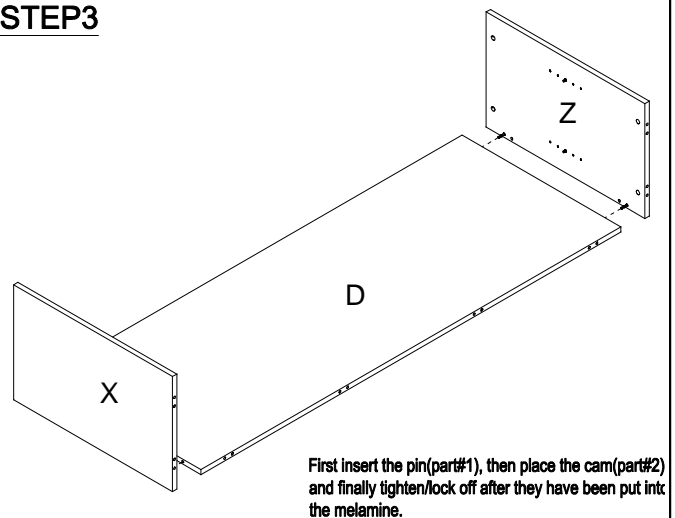

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CMZ1845/CMZ1545


## STEP4

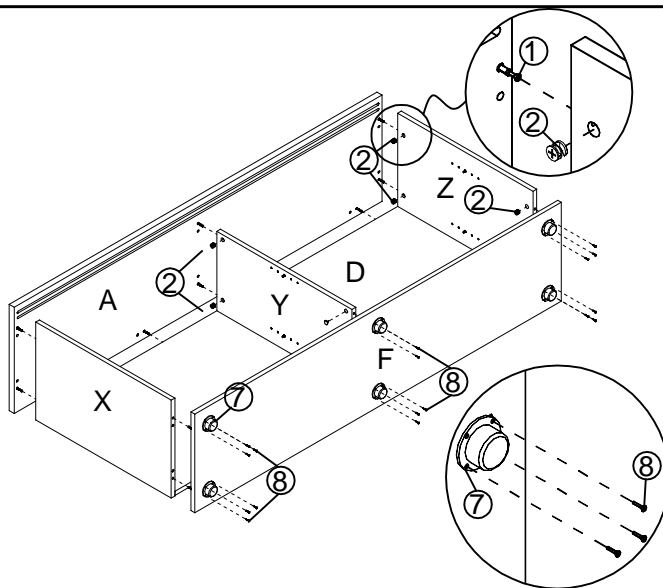


## STEP5

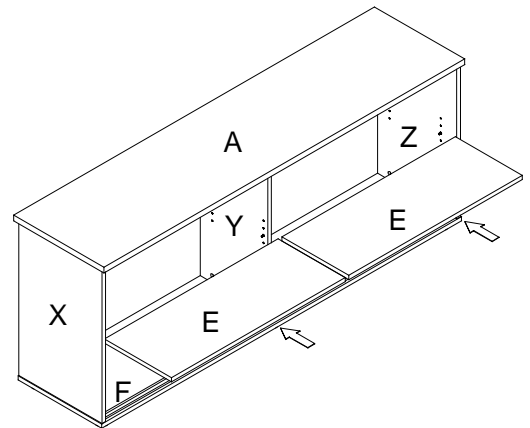


## STEP6

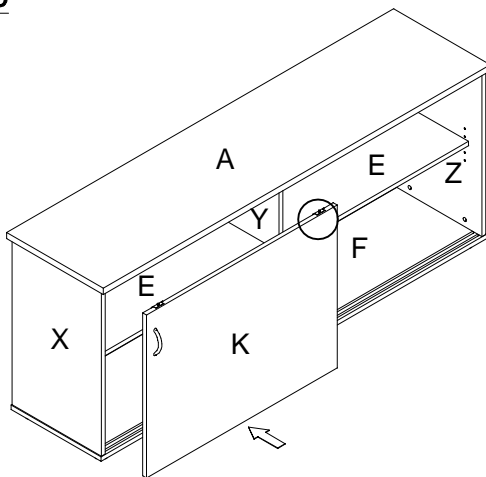


## STEP7

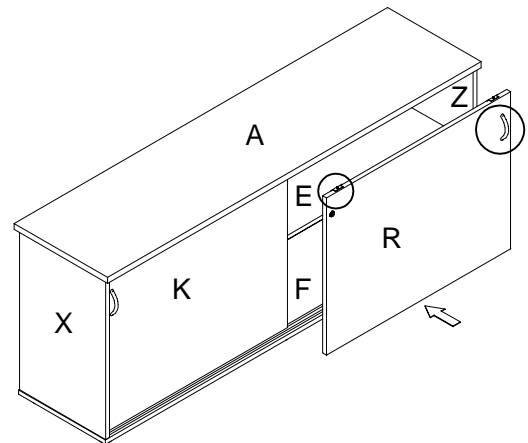

## STEP8

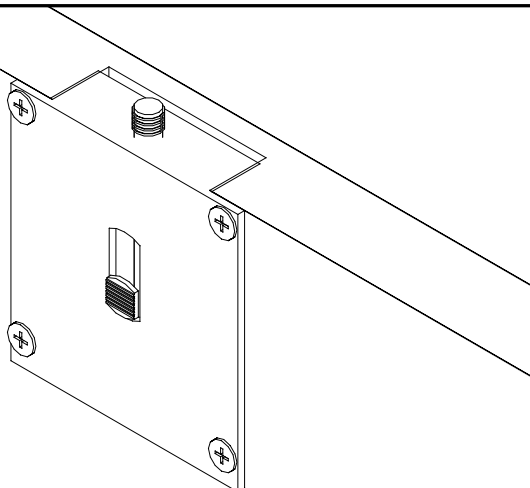


## STEP9

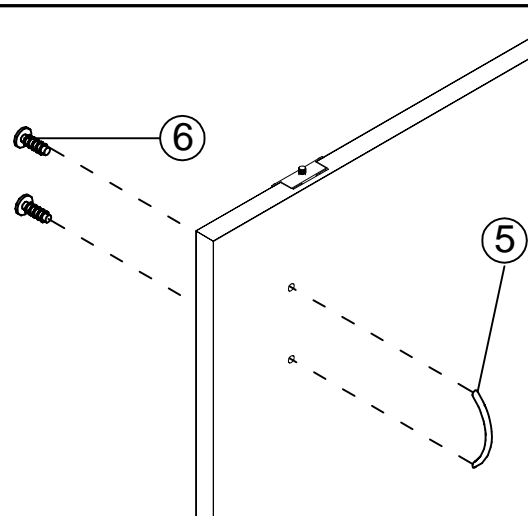

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CMZ1845/CMZ1545/CMZ1845-S/CMZ186


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

## STEP10

Make a mark with a pencil

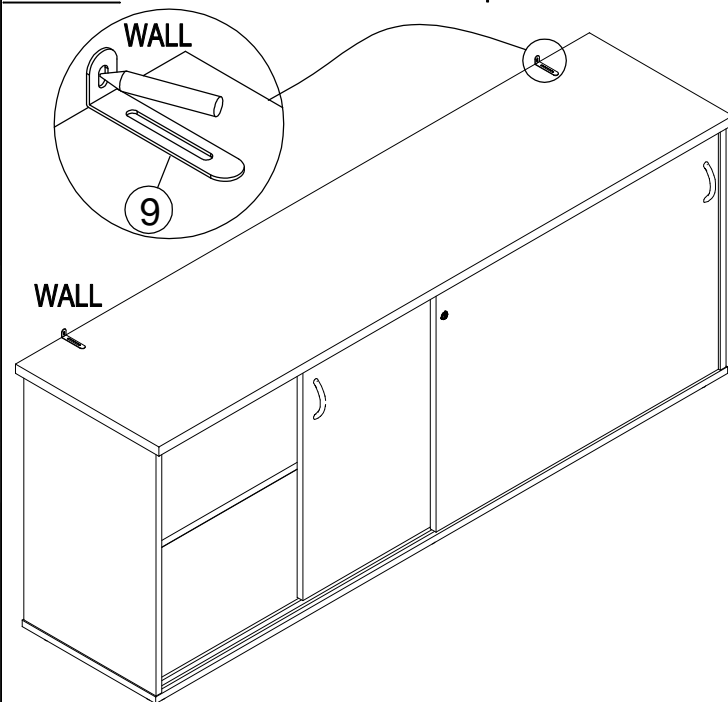


## STEP11

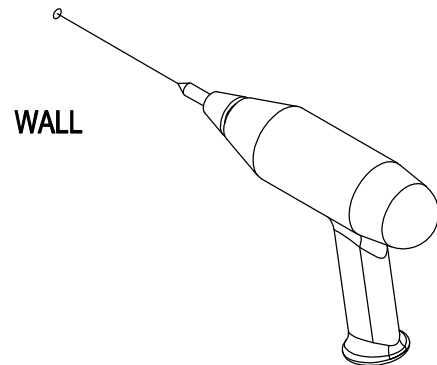


Drill holes at the marks with an electric drill

## STEP12

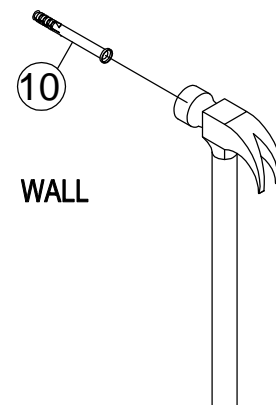


## STEP13


WALL

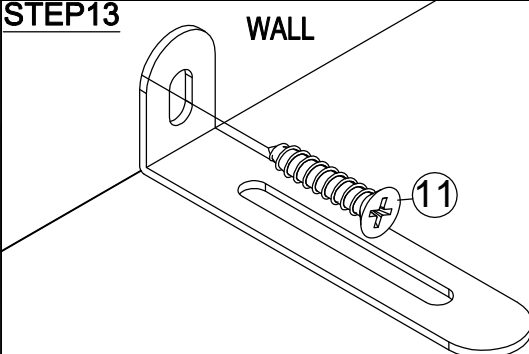

## STEP14

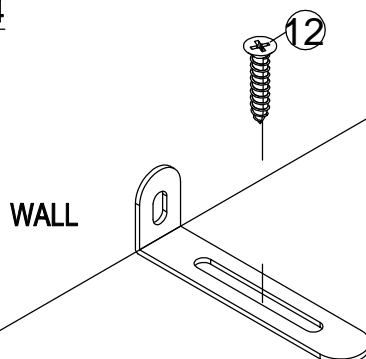

## ⚠ WARNING

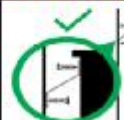

### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

