ASSEMBLY INSTRUCTIONS:

Product Code: GI 305/4 & GI 380/4

Product Name: GO Steel Lockers - 4 Door



TIME REQUIRED: **TOOLS REQUIRED:**

35 minutes Pop Rivet Gun

*Tools are not included.

SKILL REQUIRED:









Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

NOTE


- As this is a commercial product, some intermediate skills may be required.
 - No pre-drill holes or markings are provided on our table or desk tops.
 - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
 - Please retain your receipt as proof of purchase to validate your warranty.
 - Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
 - Remove all wrapping materials, including staples and packing straps before you start to assemble
 - Keep all hardware parts out of reach of children.


CAUTION

- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
 - Failure to follow these warnings could result in serious injury.

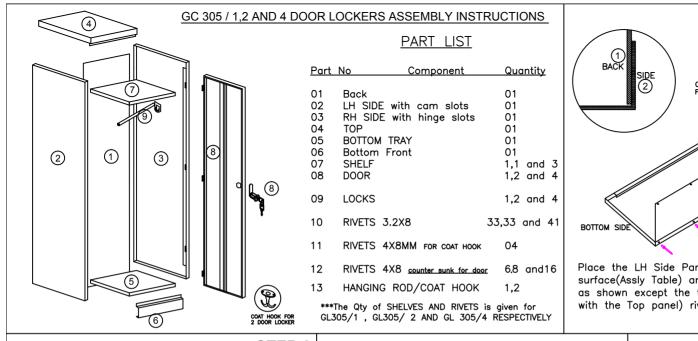

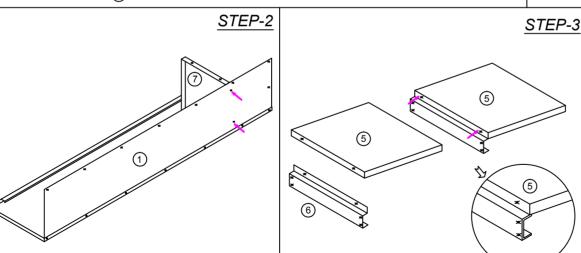


Rivet the shelf with the back panel as shown


in the drawing (rivet from outside to inside)

Insert the top flange of the bottom front into

the bottom tray and rivet as shown in the

drawing (seperate sub assembly)

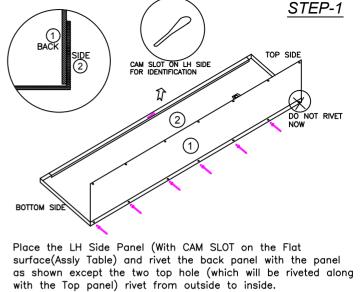

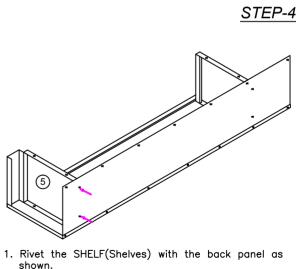


2. Rivet the bottom tray and bottom front assembly

page 1 of 2

with the back panels as shown.

3. Rivet the bottom front with the side.

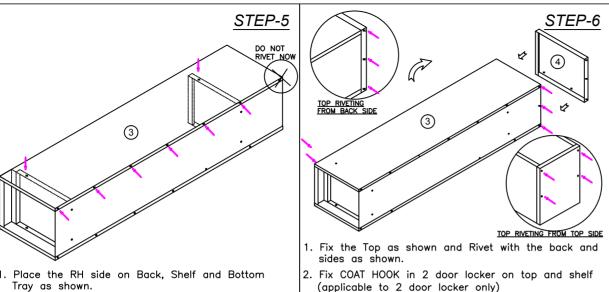

3. Flip the Locker on Its back as shown (Back touches

STEP-8


- LH Side.
 - STEP-9
- Hinge slots on RH Side 1. Fix the Coat hanger in the 1 door locker as shown.

ground) for rivetting the Shelf, Bottom tray with the

1. Position the door in the hinge slots of RH side as 2. Fix the Coat hanger in the 2 door locker in step no 6 (Applicable to 2 door locker only)




1. Rivet the LH side the Shelves and the Bottom Trav as shown. 2. Again Flip around the Locker in Its RH side as shown for DOOR FIXING.

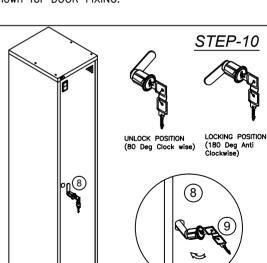

STEP-7

page 2 of 2

- 1. Check the lock for unlock and lock condition before fixing in hand.
 - 2. Insert the lock in unlock condition and press completely as shown.

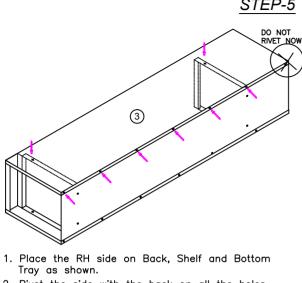

2. Rivet the side with the back on all the holes except the top hole and also rivet the side with

shown and rivet the door using counter sunk

riverts and then lift erect the locker.

the shelves and bottom tray as shown.

Use 4x8mm Counter sunk Rivets for Door Fixing