



Halo Static Back To Back Fixed Height Workstation Frame

Instruction Manual

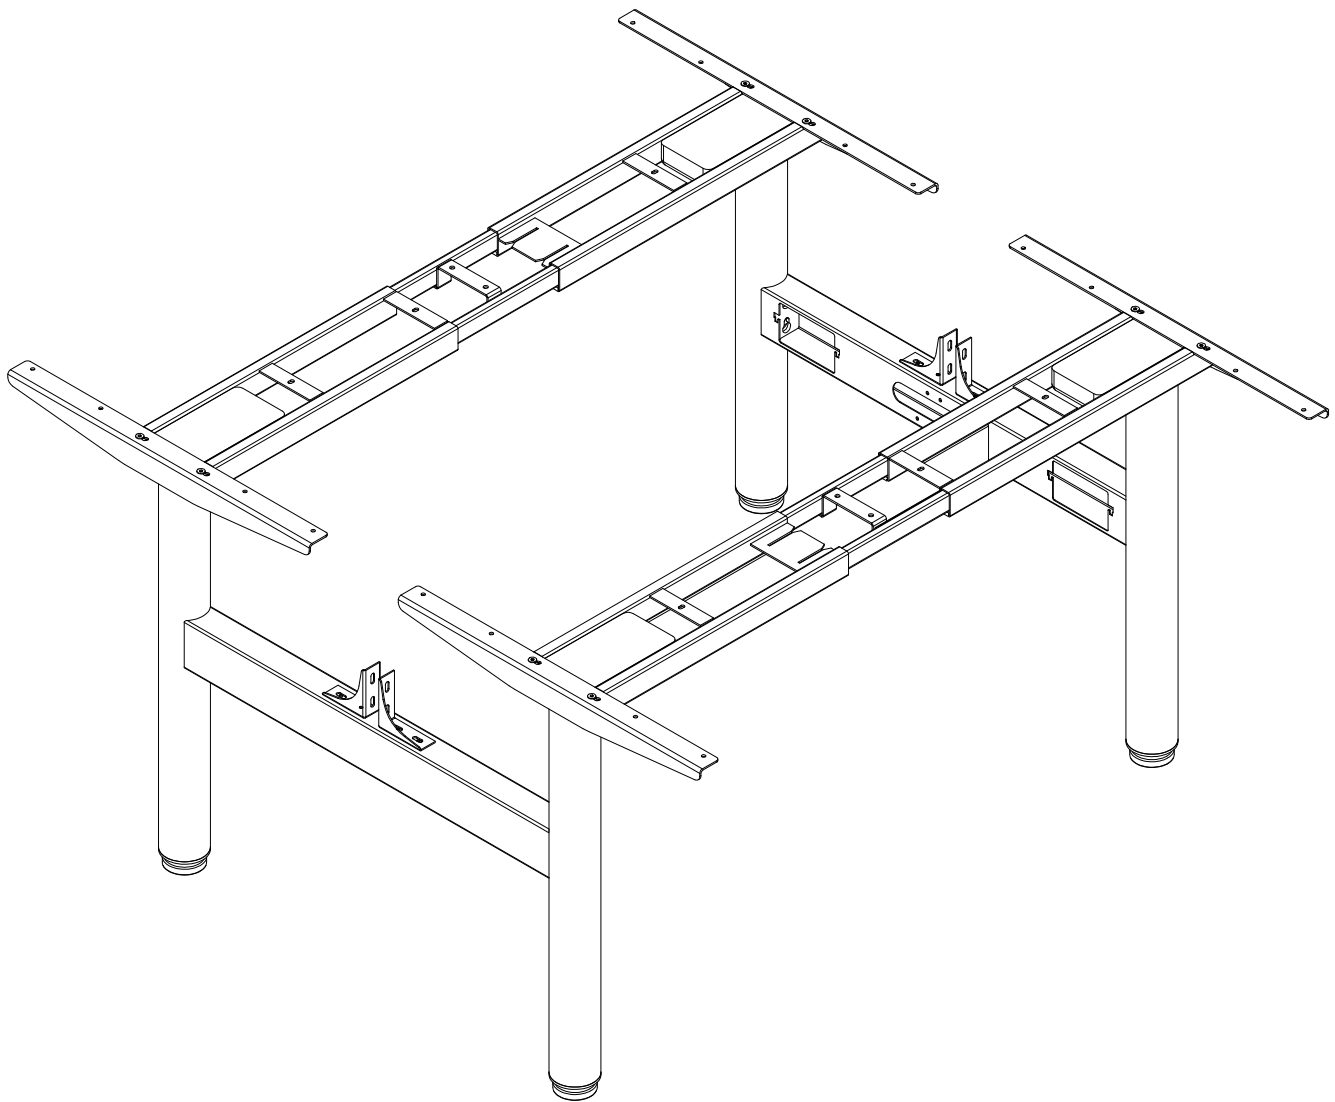

Component parts

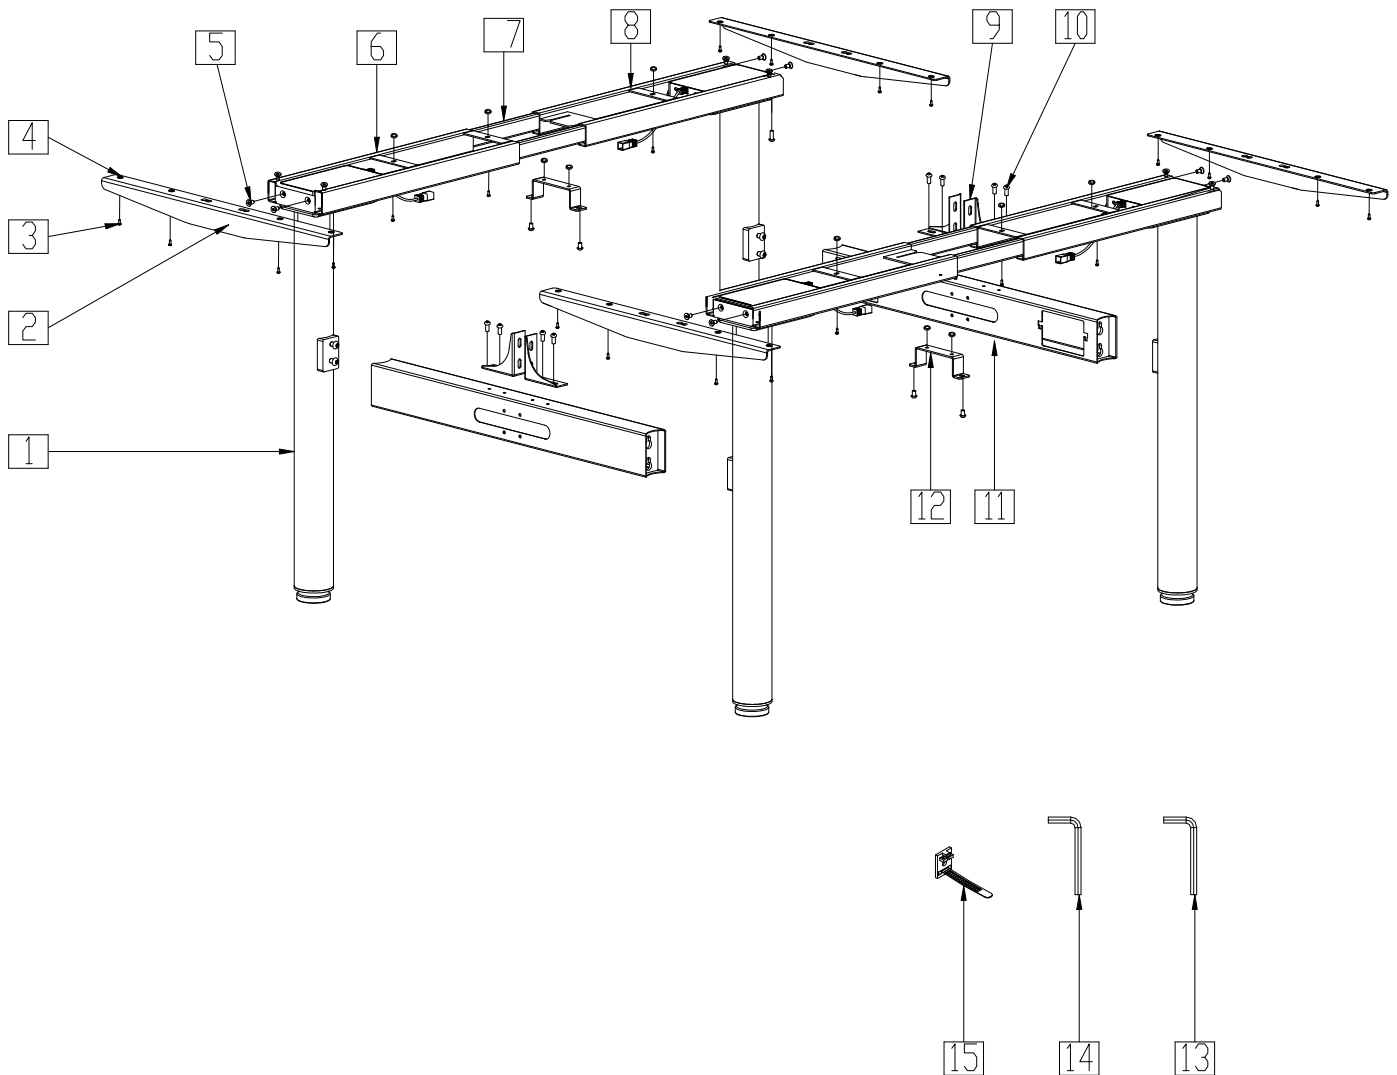


NO.	Component Name	PCS		NO.	Component Name	PCS
1	Column	4		9	Screen brackets	4
2	Side Bracket	4		10	Bolts M6x10	14
3	ST4x20	40		11	Connected beam	2
4	Rubber pad	24		12	Centre bracket	2
5	Bolts M6x12	8		13	Allen Wrench(6mm)	1
6	Top frame -1	2		14	Allen Wrench(4mm)	1
7	Centre rails	4		15	Cable Tie	10
8	Top frame-2	2				

Assembly Instructions


Step 1

Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.

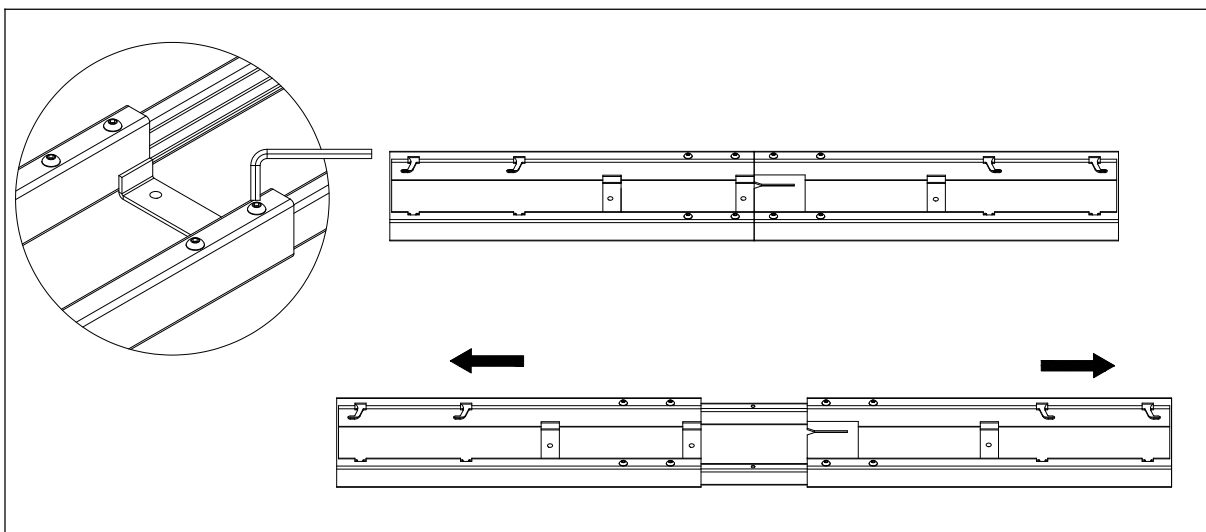


Step 2

Inset the column to the top frame, fix column with 4pcs screws M6x12 like.

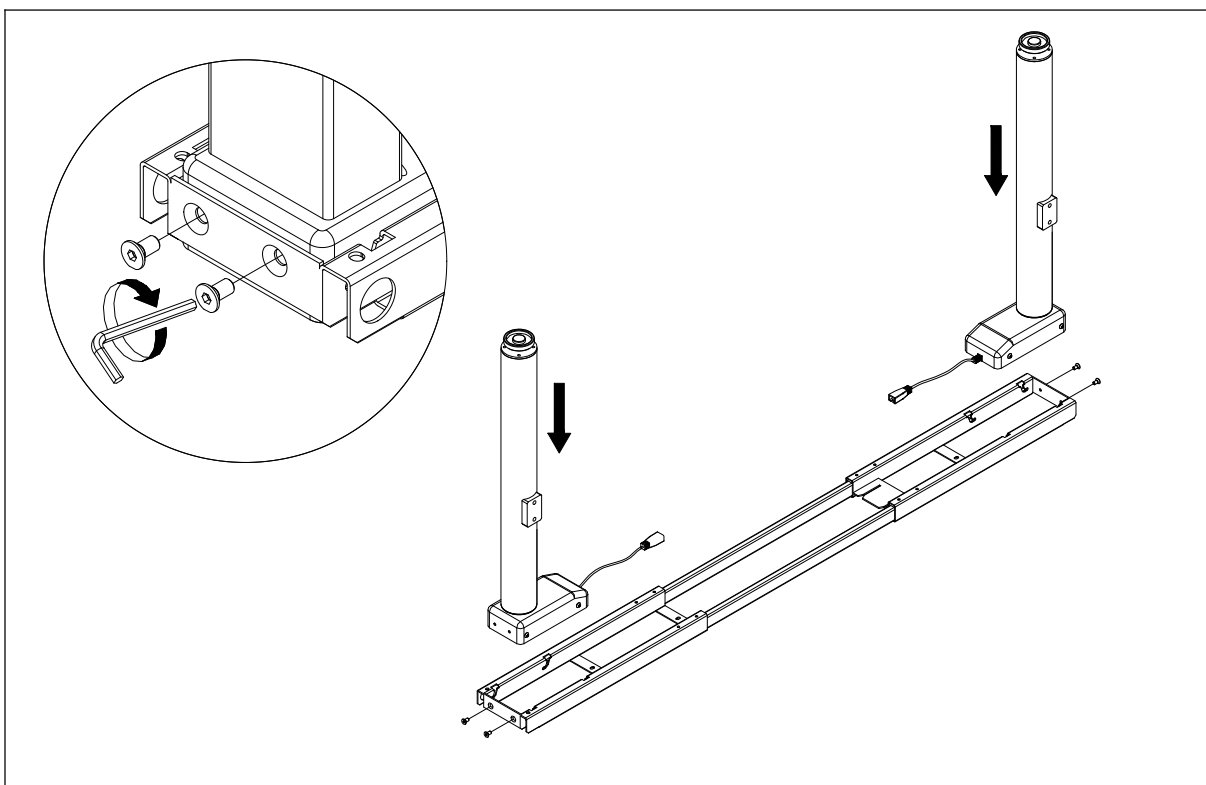


Step 3

Place the side bracket on the top frame and tighten the bolts.

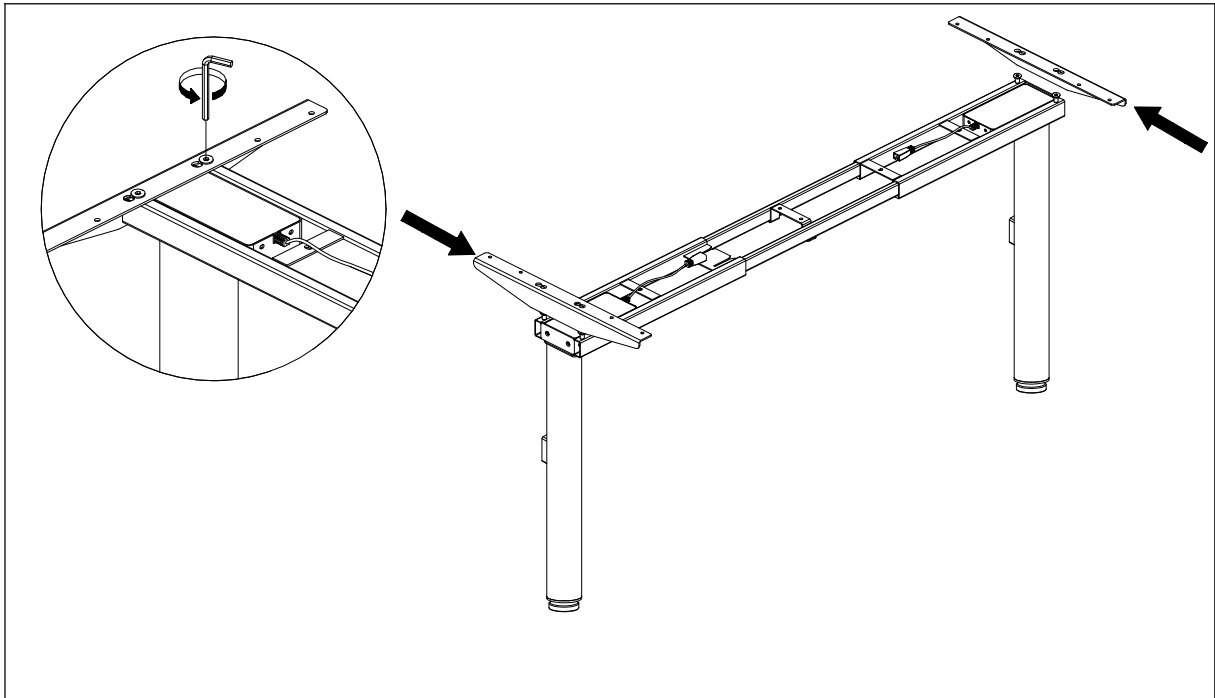


Step 4

Install the screen brackets with 8 PCS M6x10 Bolts

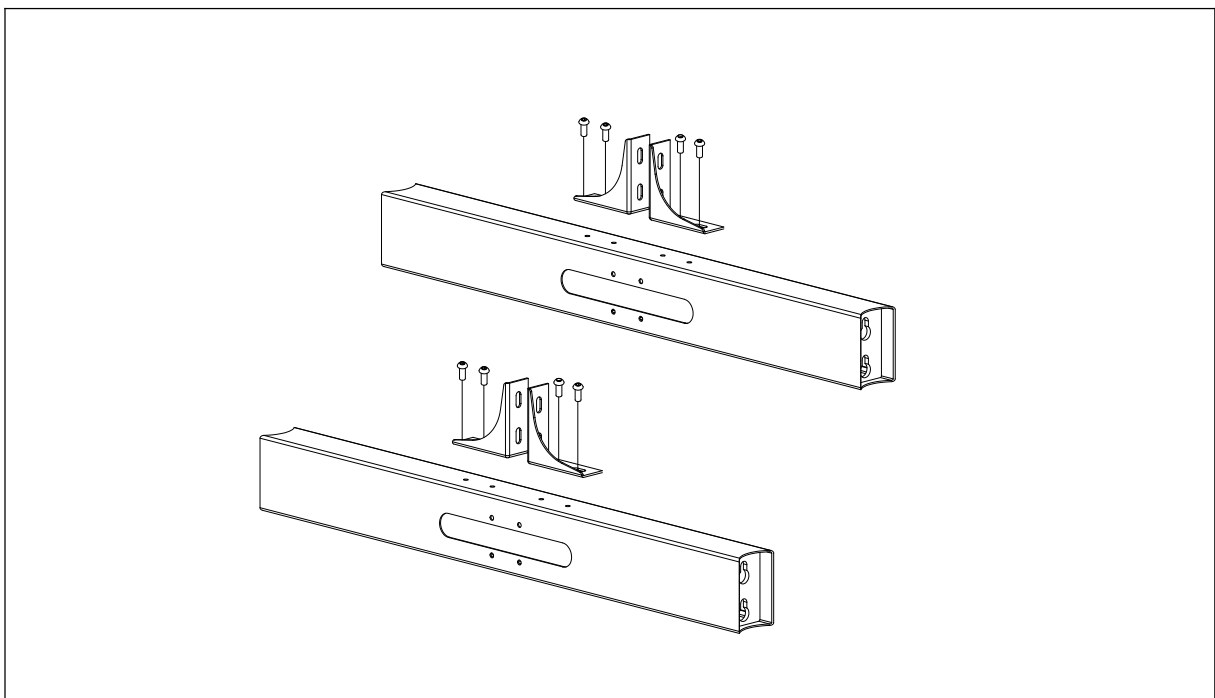

Step 5


Insert the connected beam and tighten the pre-installed bolts

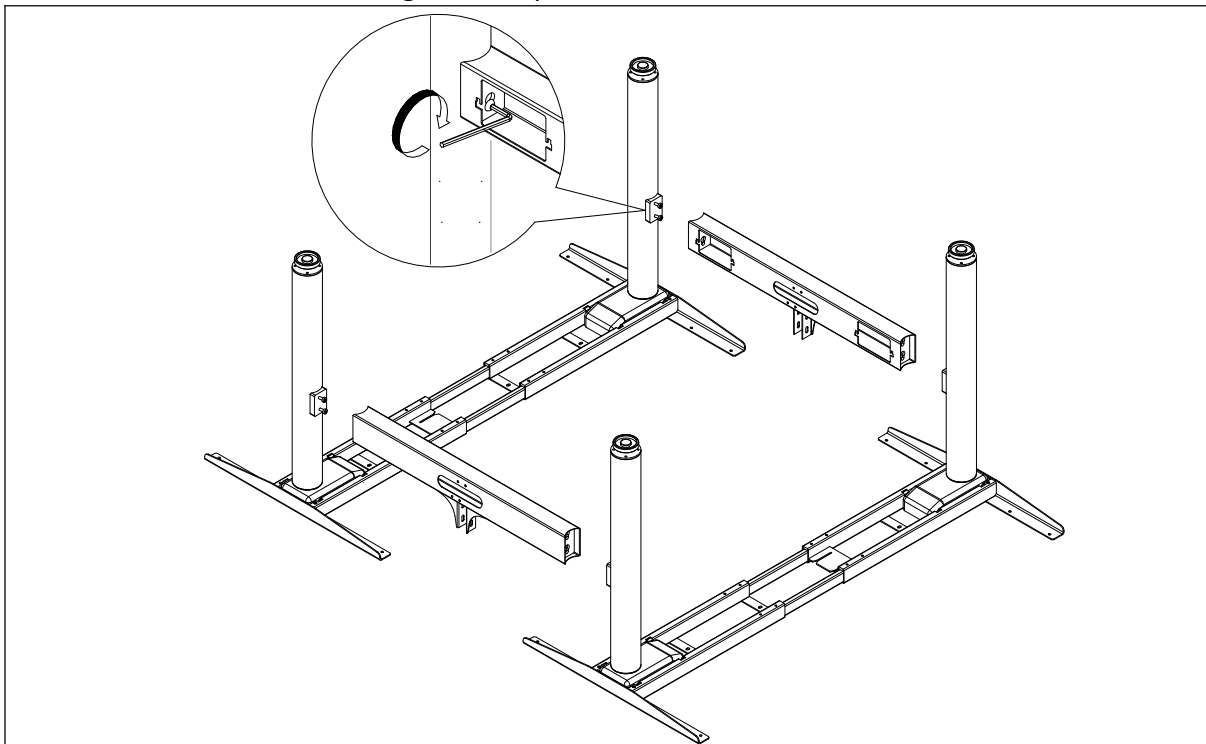

Step 6


Mount the tabletop and fix it with 26 pcs screws ST4x20;

Fix the centre bracket with 2 pcs screws M6x10

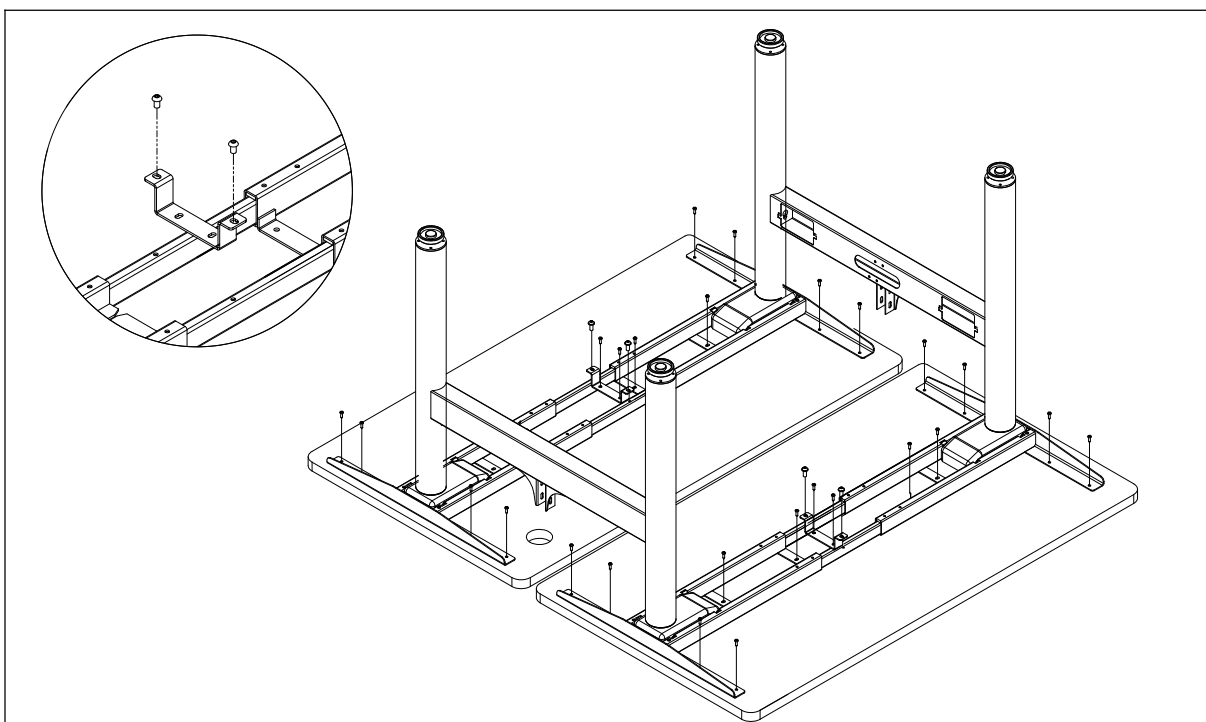

Cable tray installation


- Fix the cable tray(B2-B2BCT) to Back to back desk frame with 8 pcs M6x10 screws.

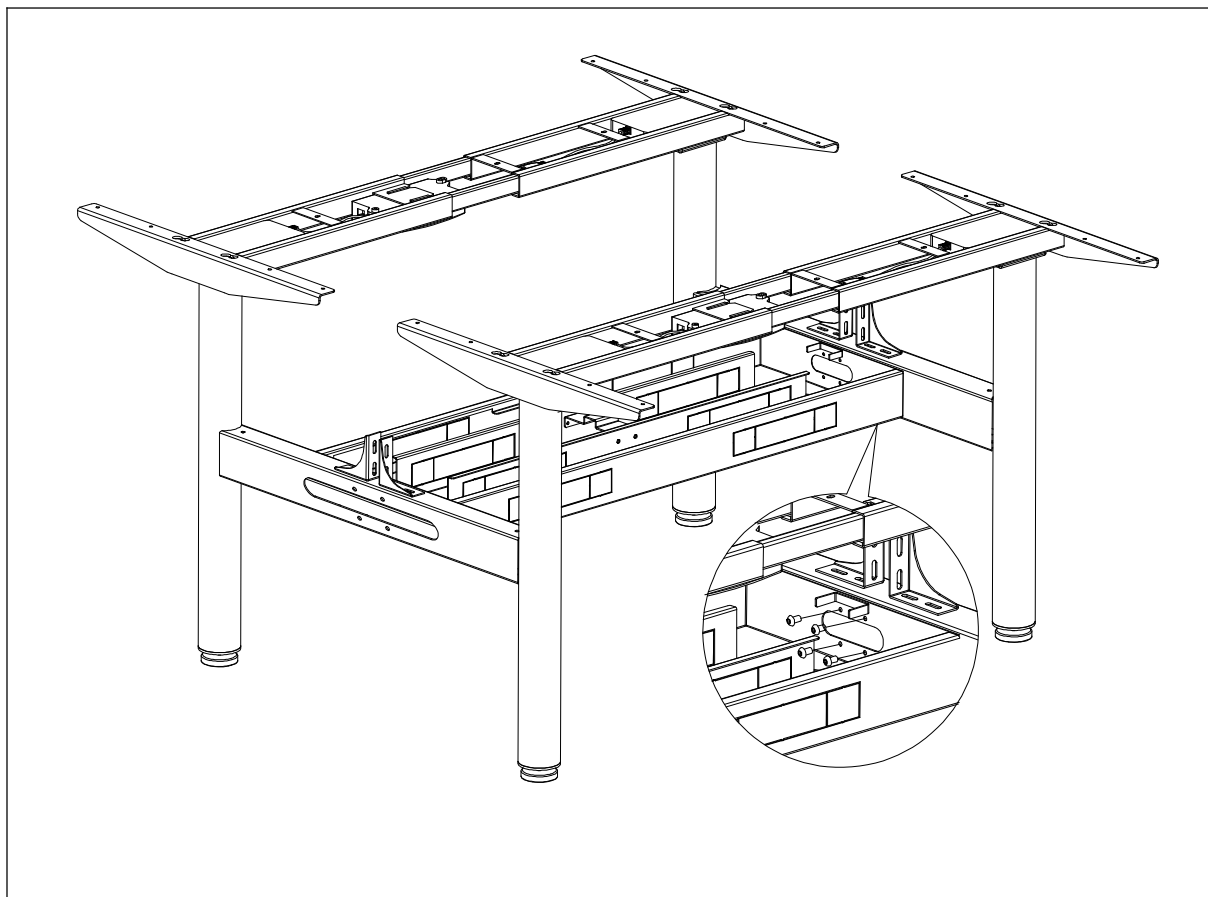

Screen panel installation (Shush30 Privacy Screen)


Step 1

- Insert the tapped plates to the screen panel (plates can be found in B2-BBRAC carton)

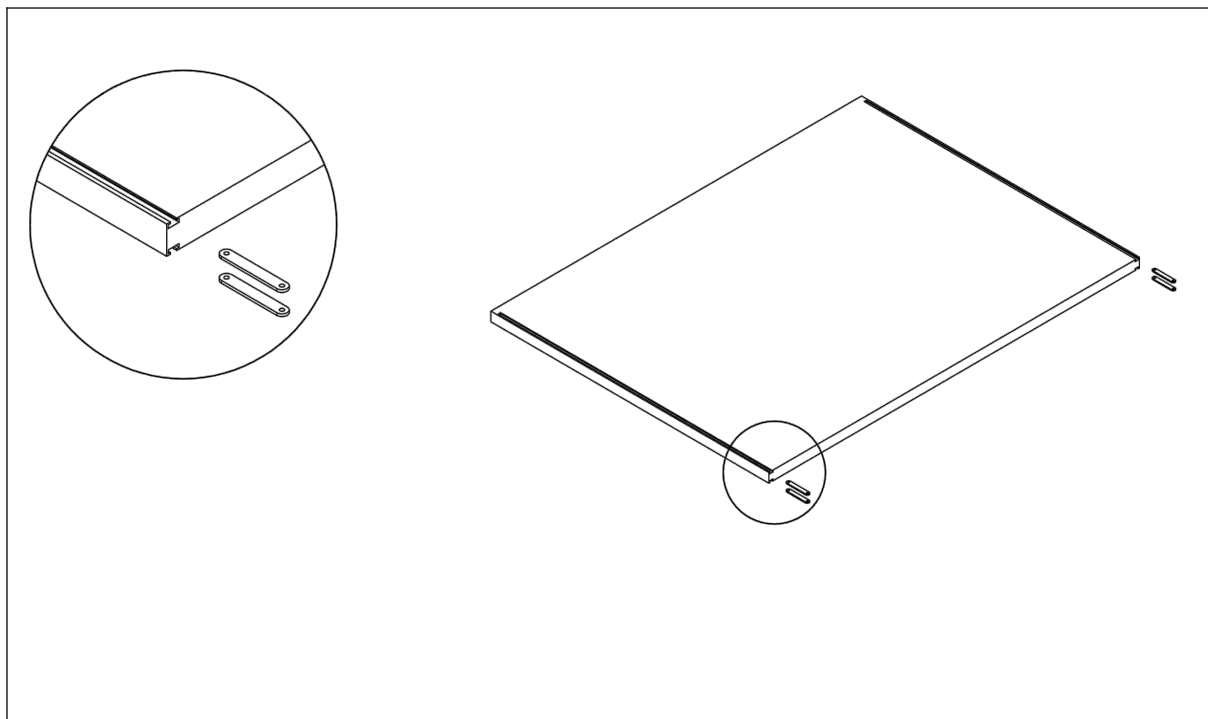


Step 2

- Install the screen brackets (B2-BBRAC) to the Shush30 Extrusion with 8 pcs M5x6 screws.

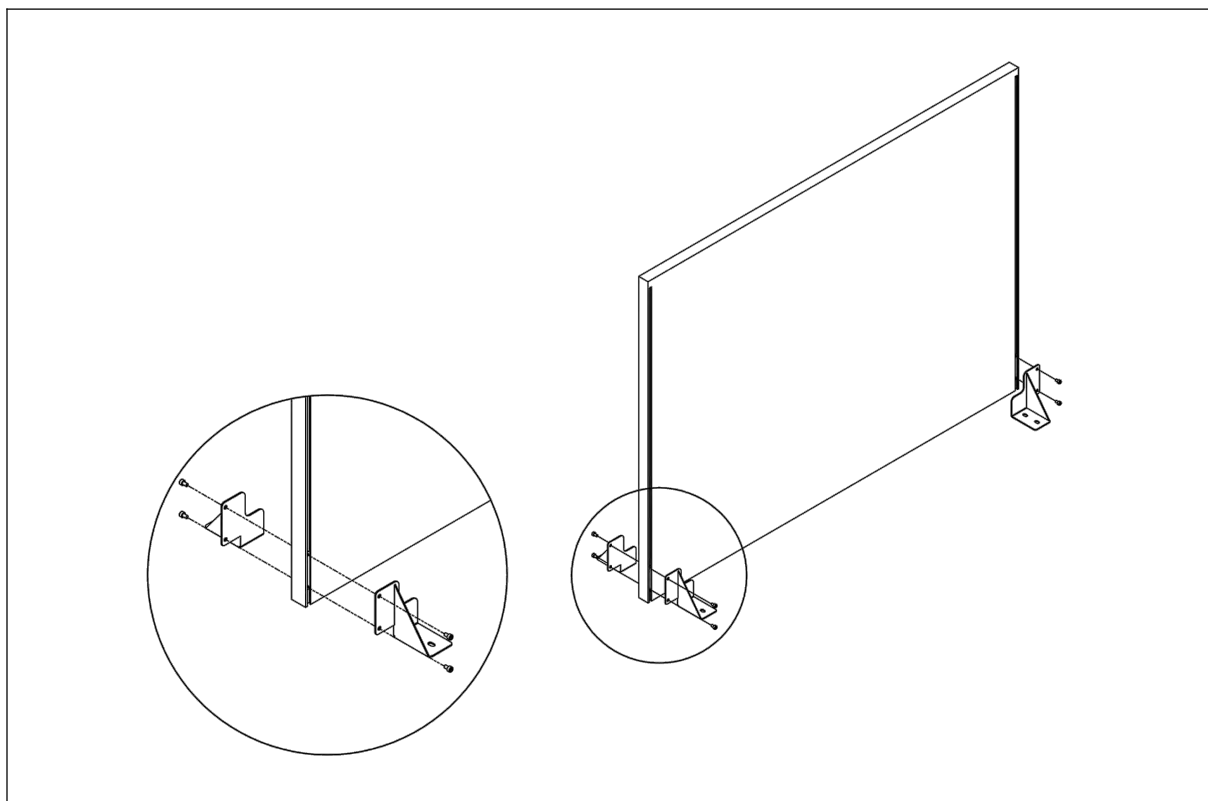

Step 3


- Fix the screen brackets (B2-BBRAC) to the desk frame with 8 pcs M6x10 screws.

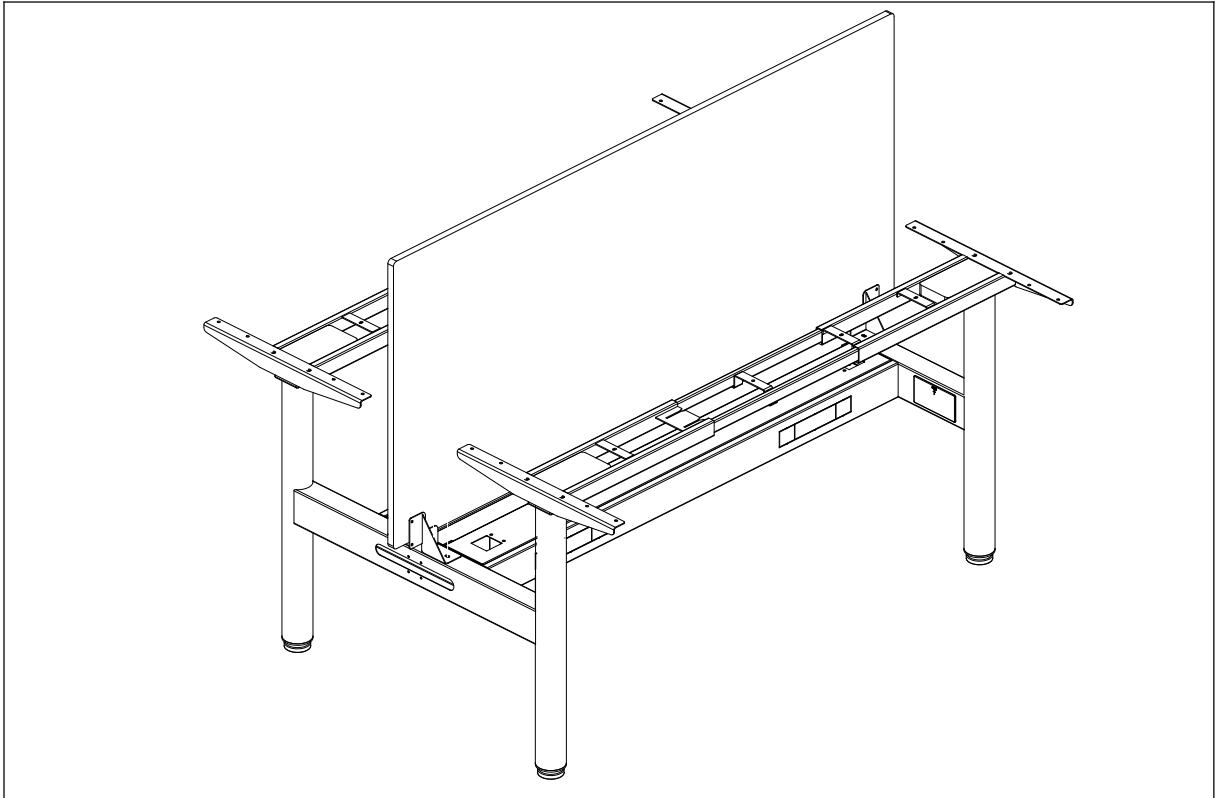

EPS (900mm H Eco Panel) Screen panel installation

Step 1

- Install the screen brackets (B2-BBRAC) with 8 PCS M6x10 Screws
The brackets direction as photos display.

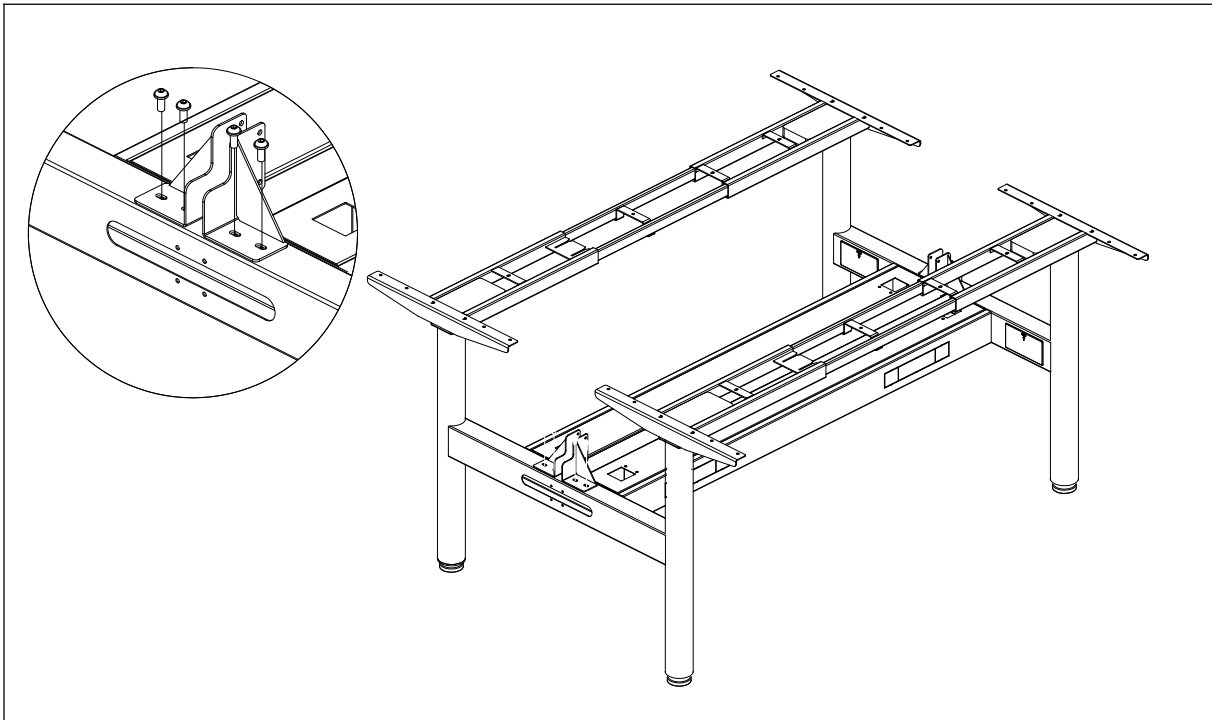

Step 2

- Place the EPS panel on the screen brackets
- Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)
- Place 8 x Double Ended Bolts M5* 32mm - 6mm through screen bracket (B2-BBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

