



Halo Static Single Sided Fixed Height Workstation Frame

Instruction Manual

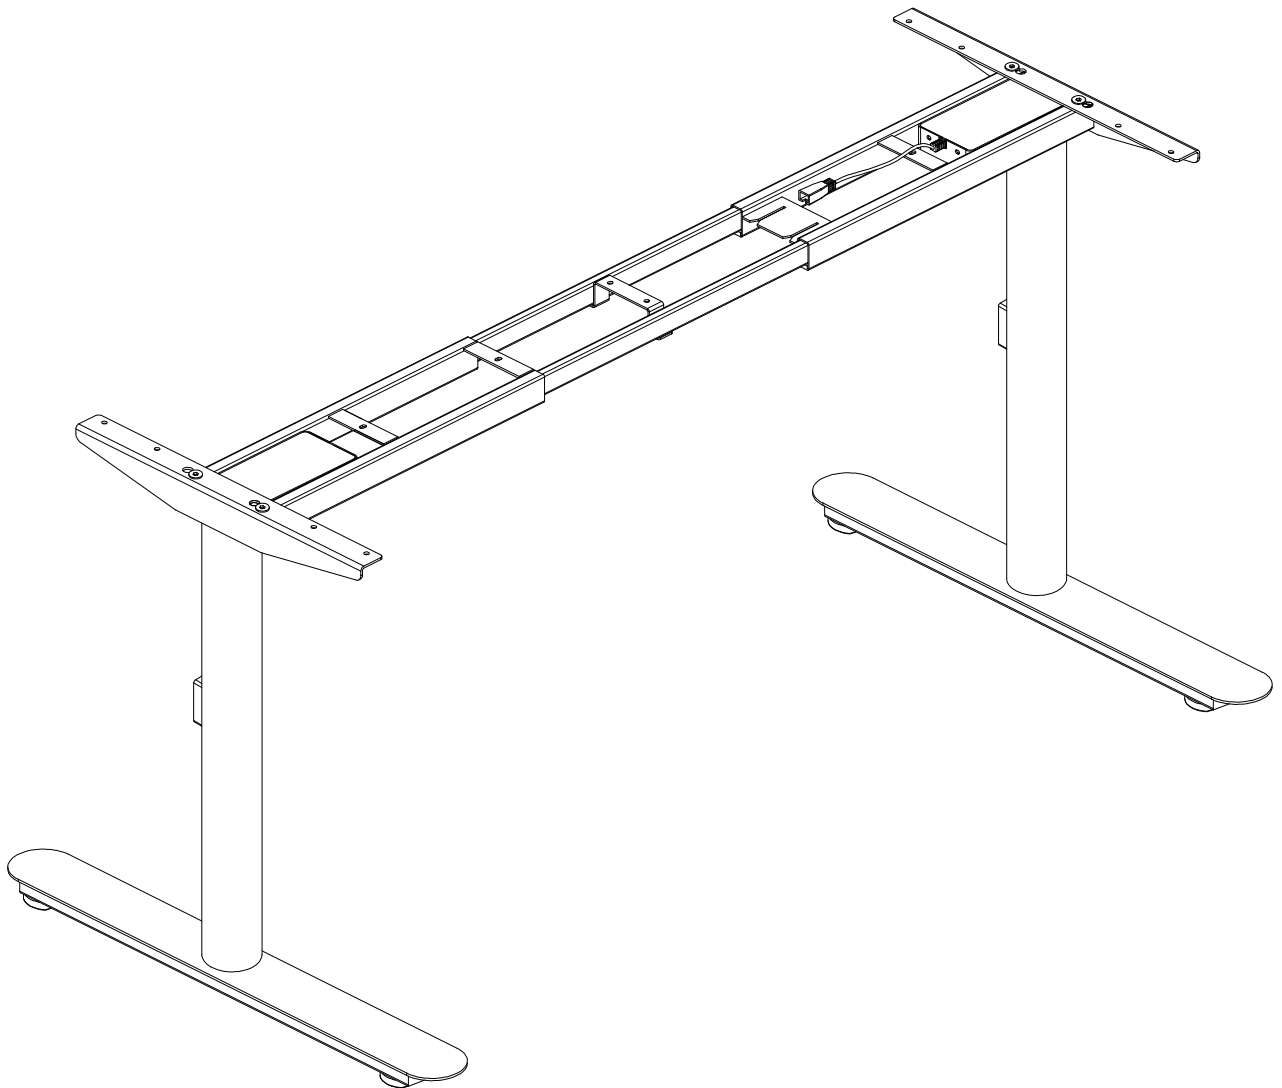

Component parts

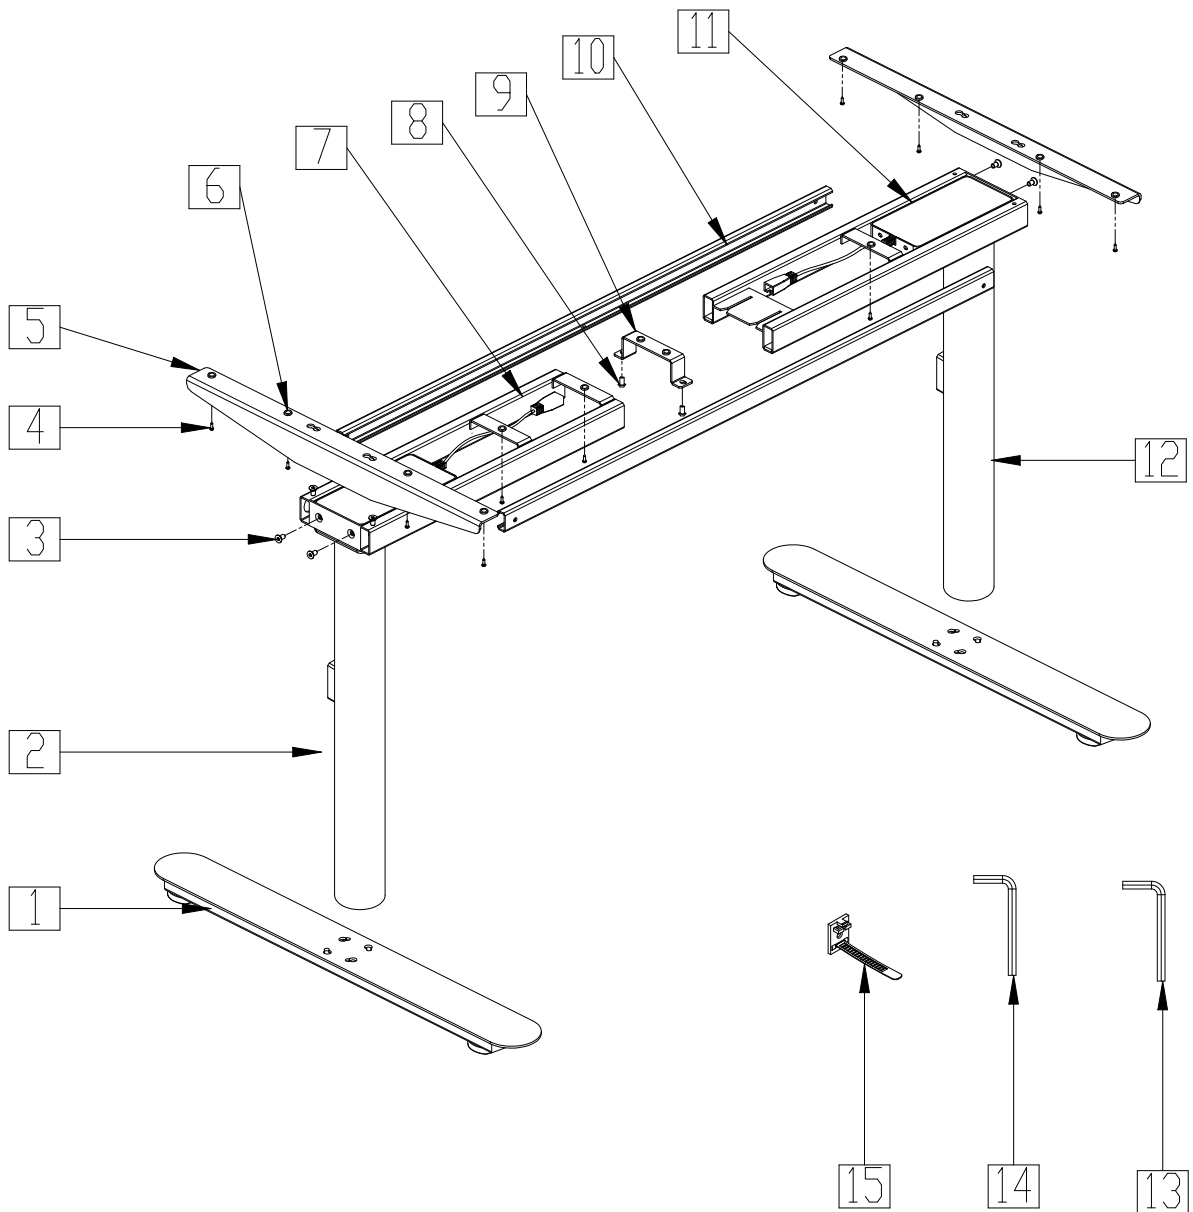


NO.	Component Name	PCS		NO.	Component Name	PCS
1	Table feet	2		9	Centre bracket	1
2	Column(right)	1		10	Center rails	2
3	Bolt: M6x12	5		11	Top frame-2	1
4	Screw:ST4x20	22		12	Column(left)	1
5	Side brackets	2		13	Allen Wrench(4mm)	1
6	Rubber pad	14		14	Allen Wrench(5mm)	1
7	Top frame-1	1		15	Cable Tie	5
8	Bolt: M6x10	3				

Assembly Instructions


Step 1

Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.

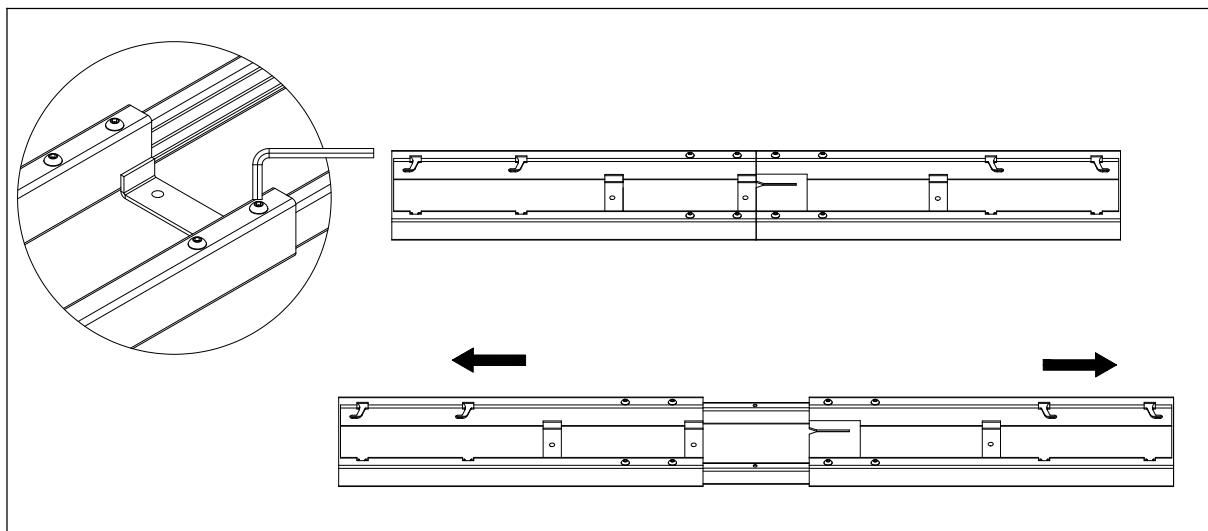


Step 2

Inset the Column to the top frame, fix lifting column with 4pcs screws M6x12 like.

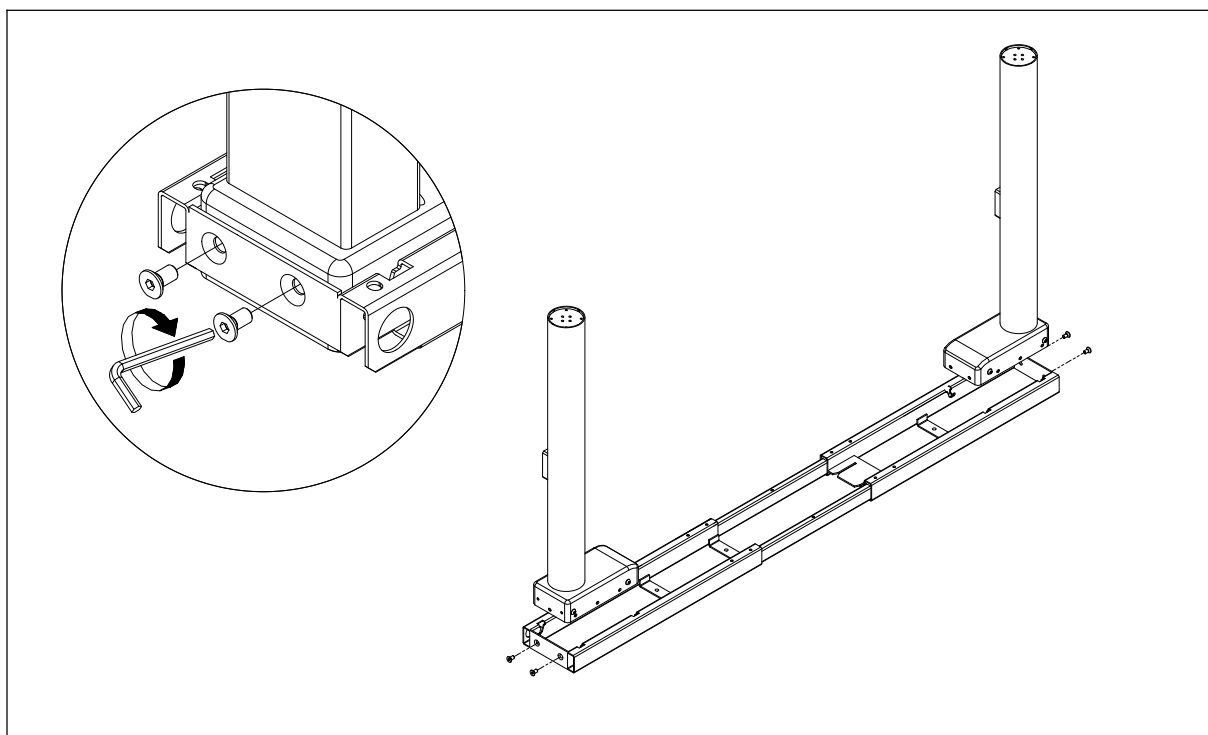


Step 3

Place the table feet on the Column and rotate it and make it align, then tighten the pre-installed bolt.

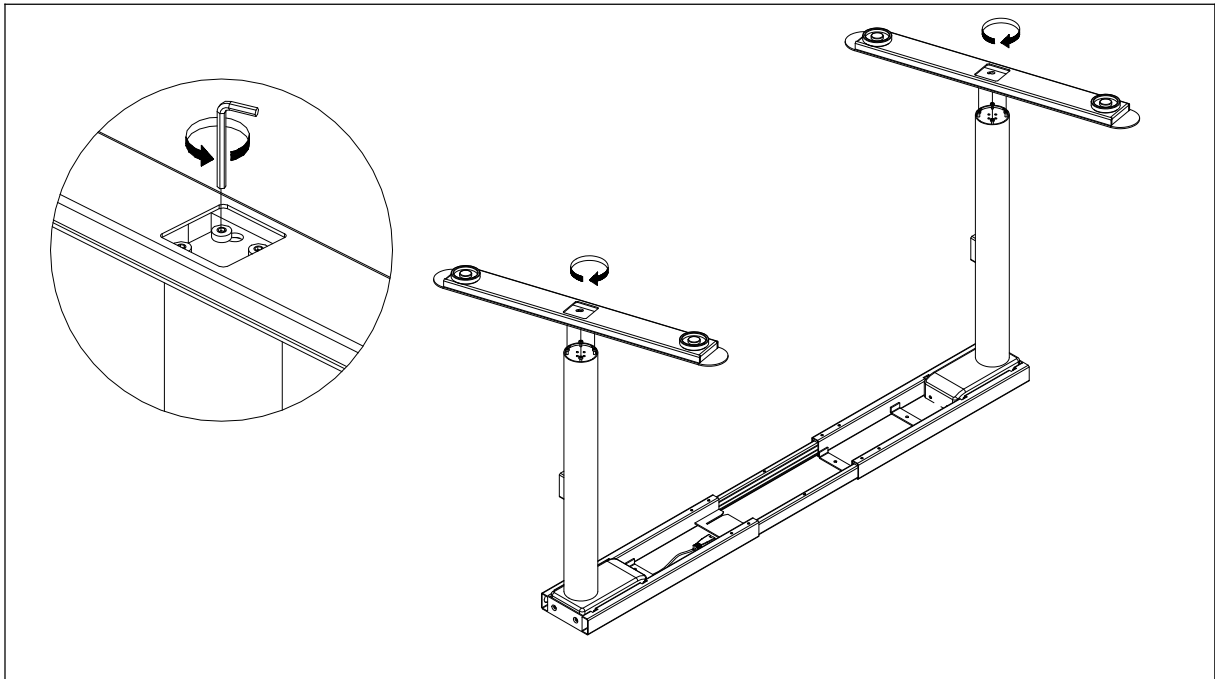

Step 4

Place the side bracket on the top frame and tighten the bolts.

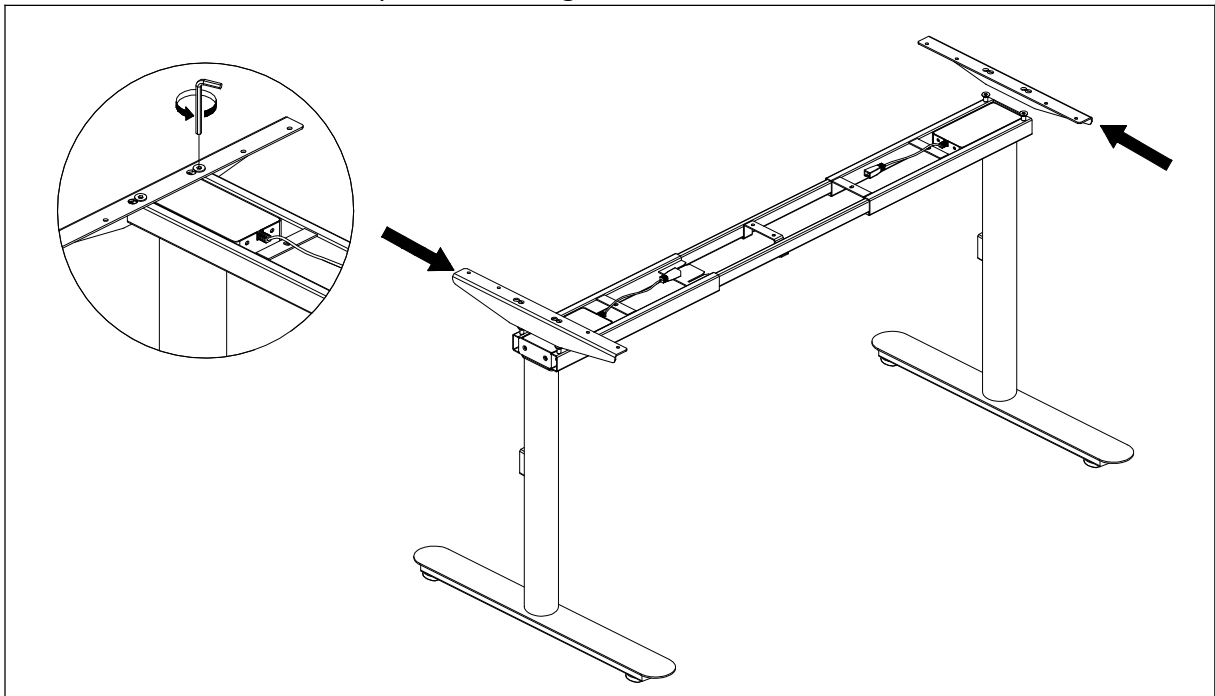


Step 5

Mount the tabletop and fix it with 14 pcs screws ST4x20;

Fix the centre bracket with 2 pcs screws M6x10


Tighten the pre-installed bolts on the top frame

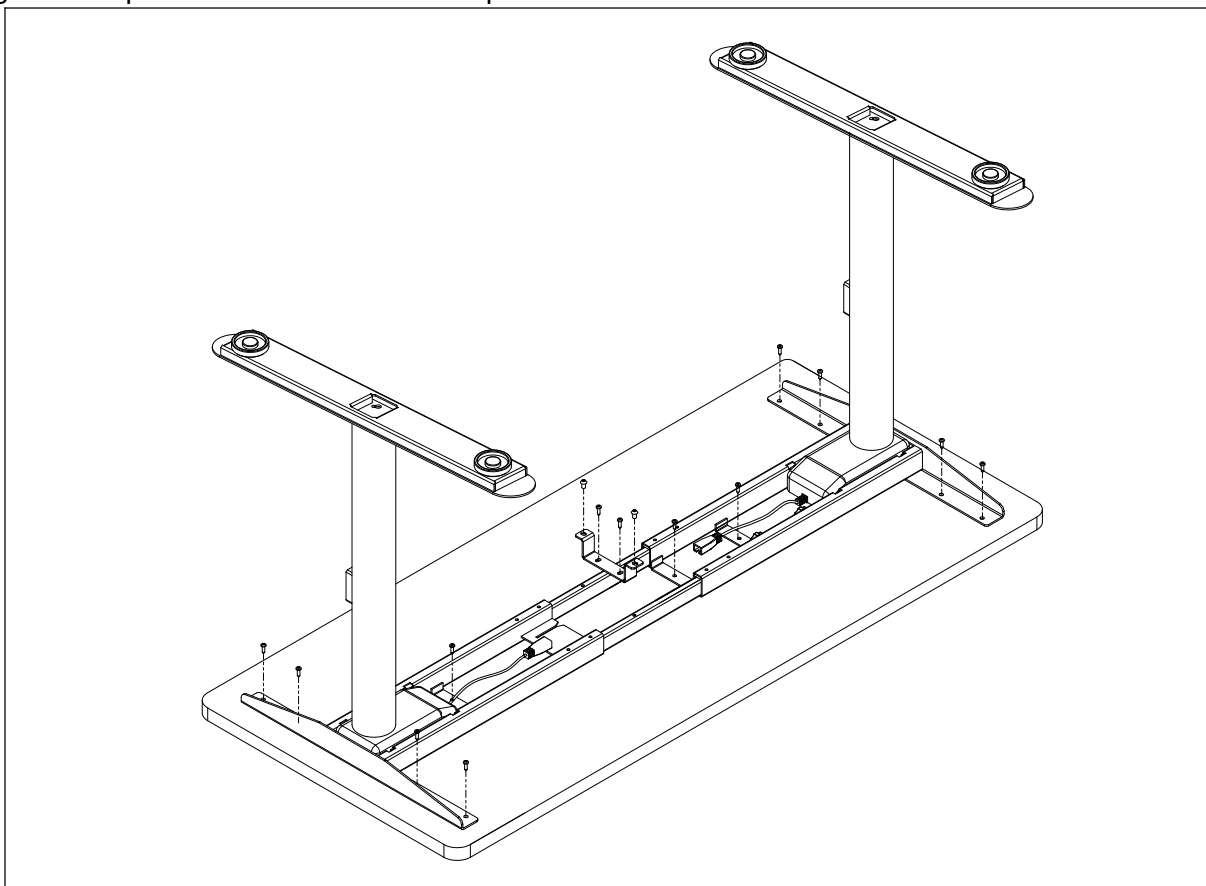

Cable tray installation


Step 1

- Fix the cable tray(B2-SSCT) to the cable tray arms(HP-SSARM) with 8 pcs M6x10 screws.

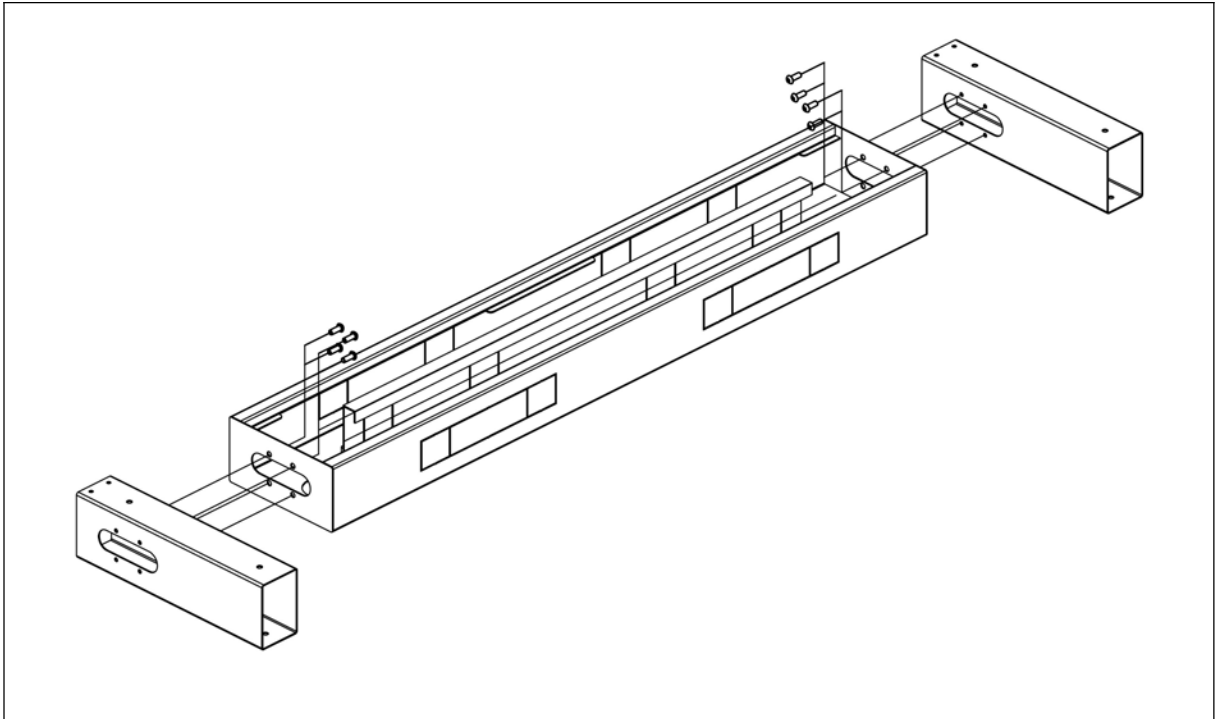

Step 2


- Install the U brackets to the desk frame with 4 pcs M8x10 screws.
- Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

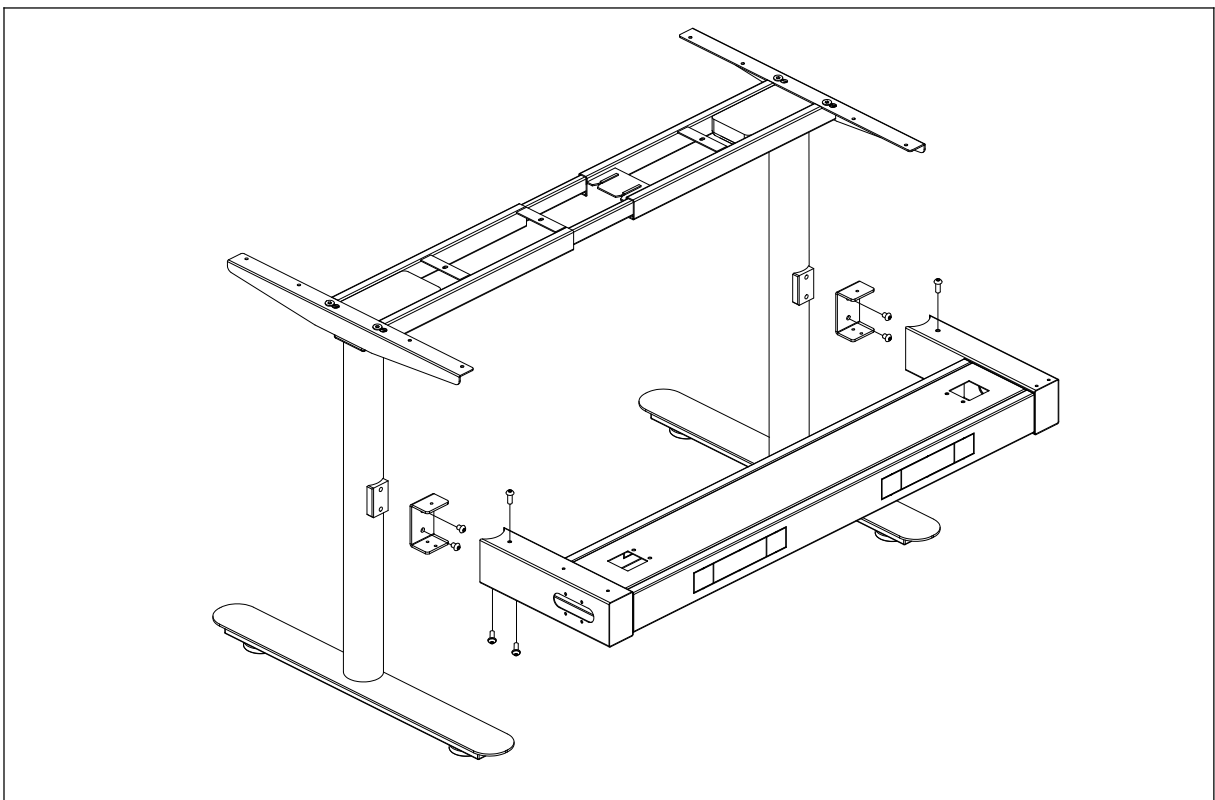

Screen panel installation (Shush30 Privacy Screen)


Step 1

- Insert the tapped plates to the screen panel (plates can be found in B2-SBRAC carton)

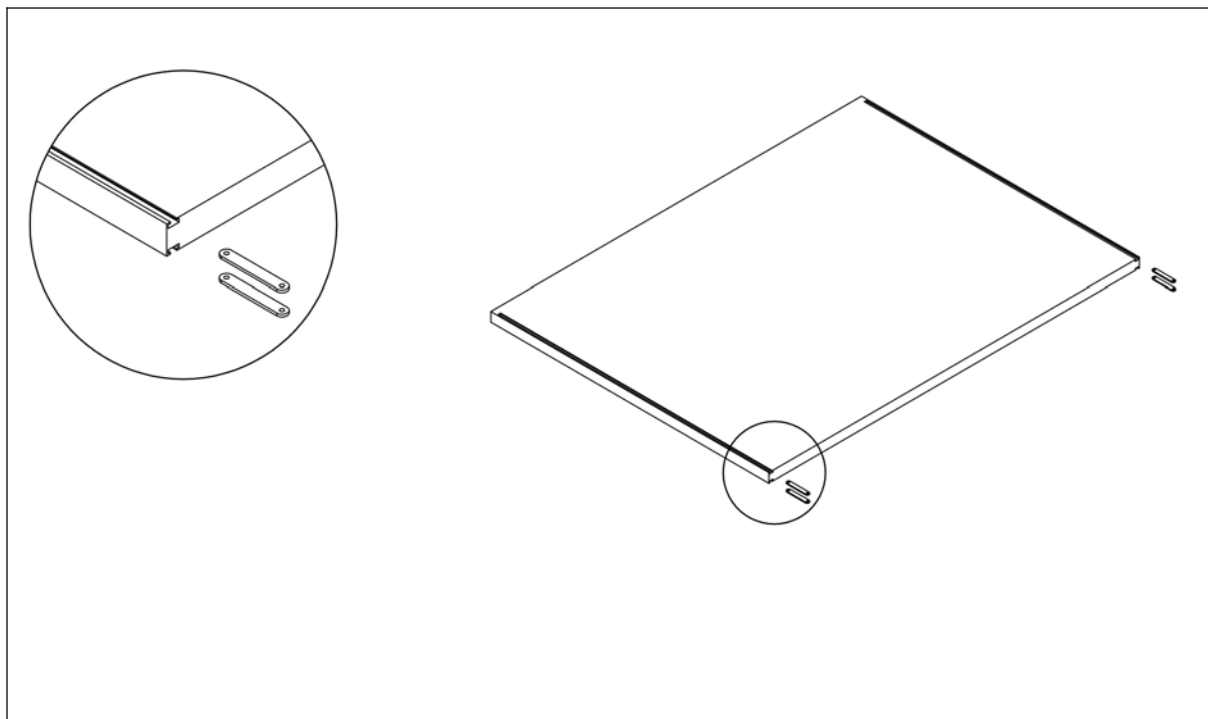


Step 2

- Install the screen brackets (B2-SBRAC)to the Shush30 Extrusion with 8 pcs M5x6 screws.

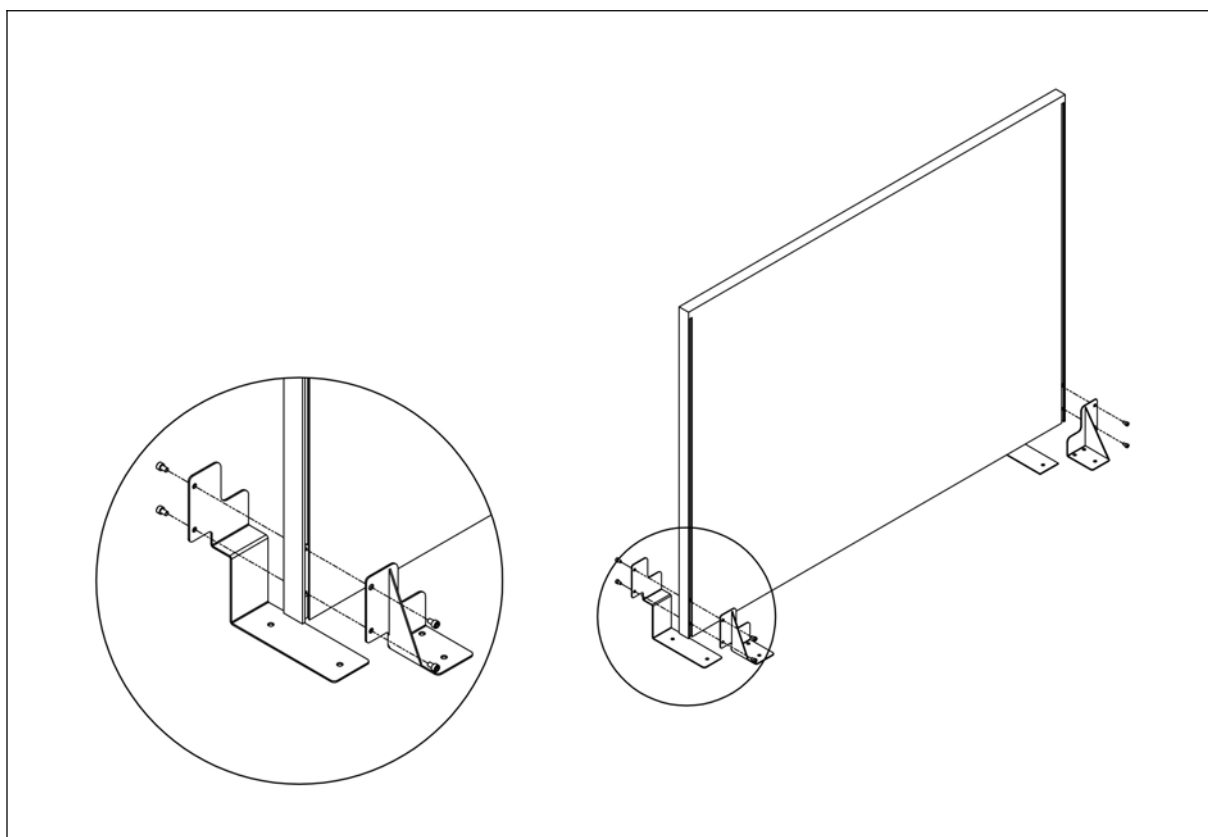

Step 3


- Fix the screen brackets (B2-SBRAC) to the desk frame with 10 pcs M6x10 screws.

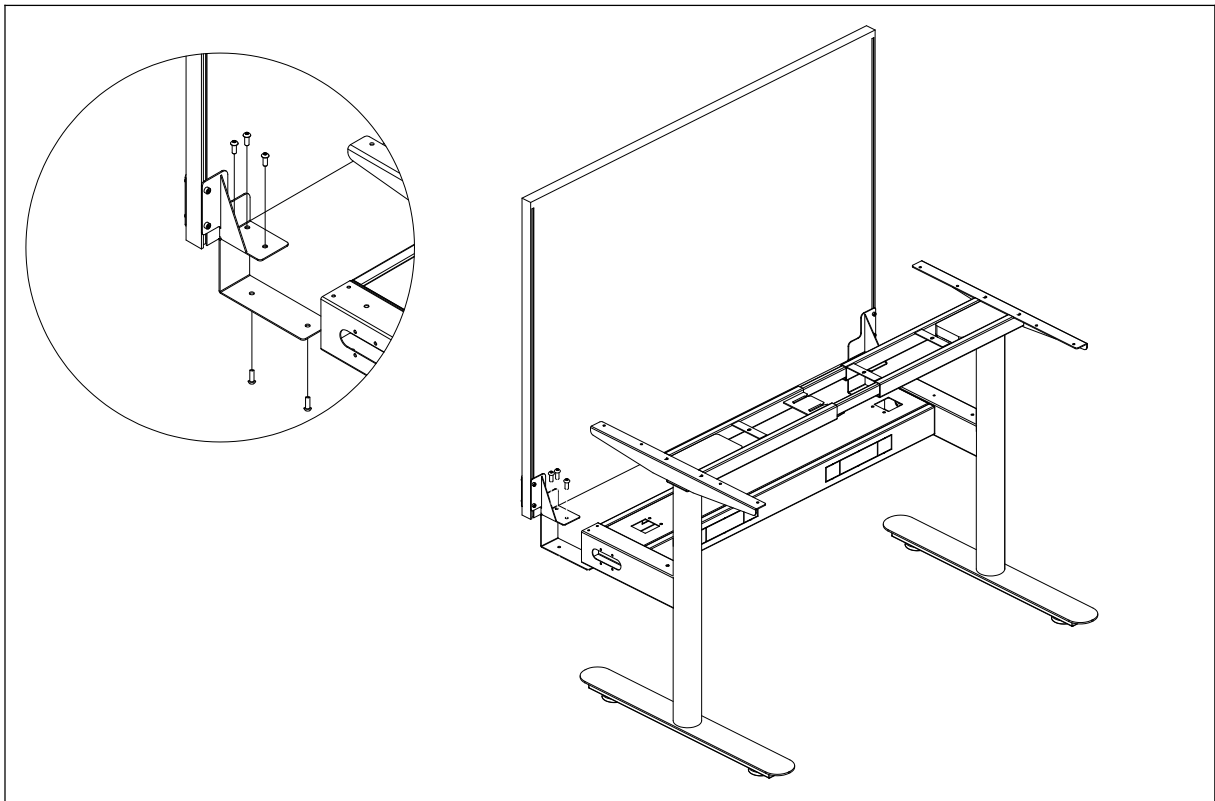

EPS (900mm H Eco Panel) Screen panel installation

Step 1

- Install the screen brackets(B2-SBRAC) on the cable tray arm (HP-SSARM)with 10 PCS M6x10 Screws
The brackets direction as photos display.

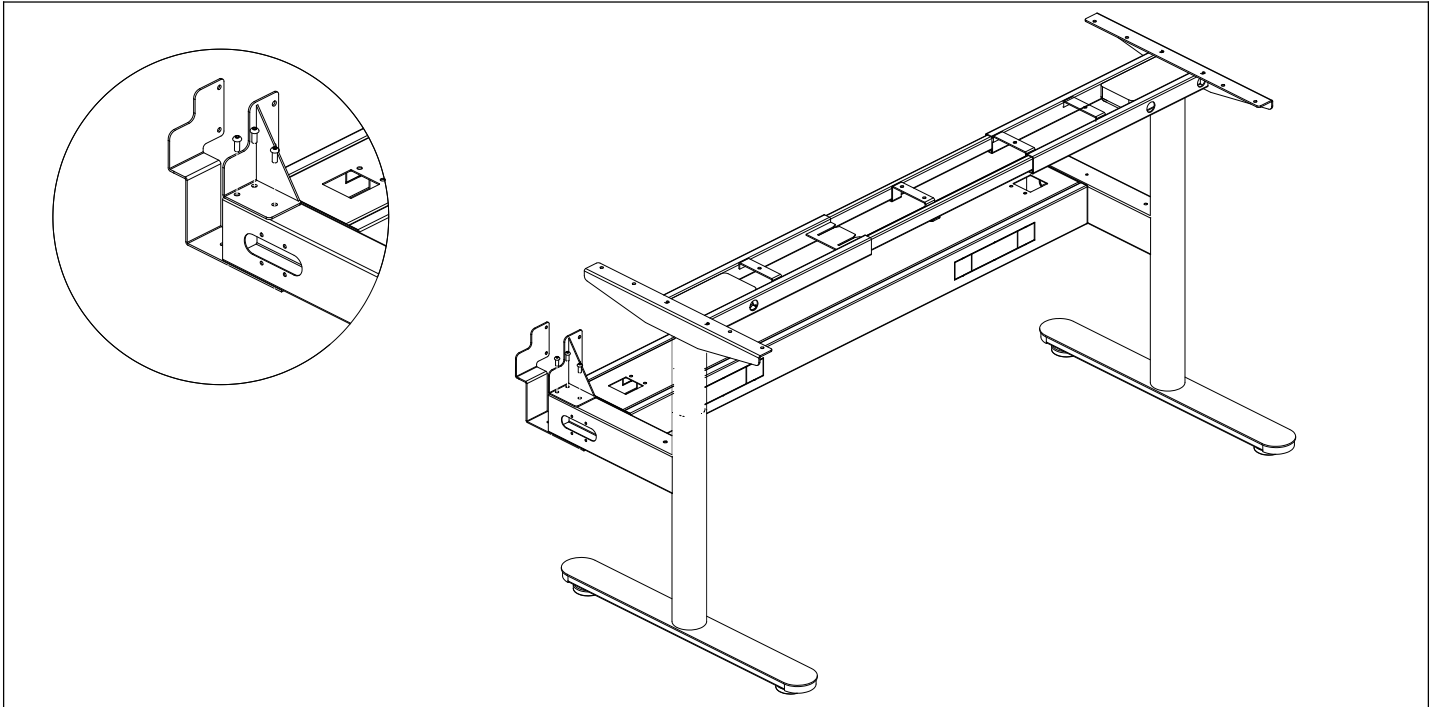

Step 2

- Place the EPS panel on the screen brackets
- Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)
- Place 8 x Double Ended Bolts M5* 32mm - 6mm through The screen bracket (B2-SBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

