


Assembly instructions

HP-BTBSLVE

Step 1

Insert the sleeve to the cable tray arm, please notice the direction of UP and DOWN

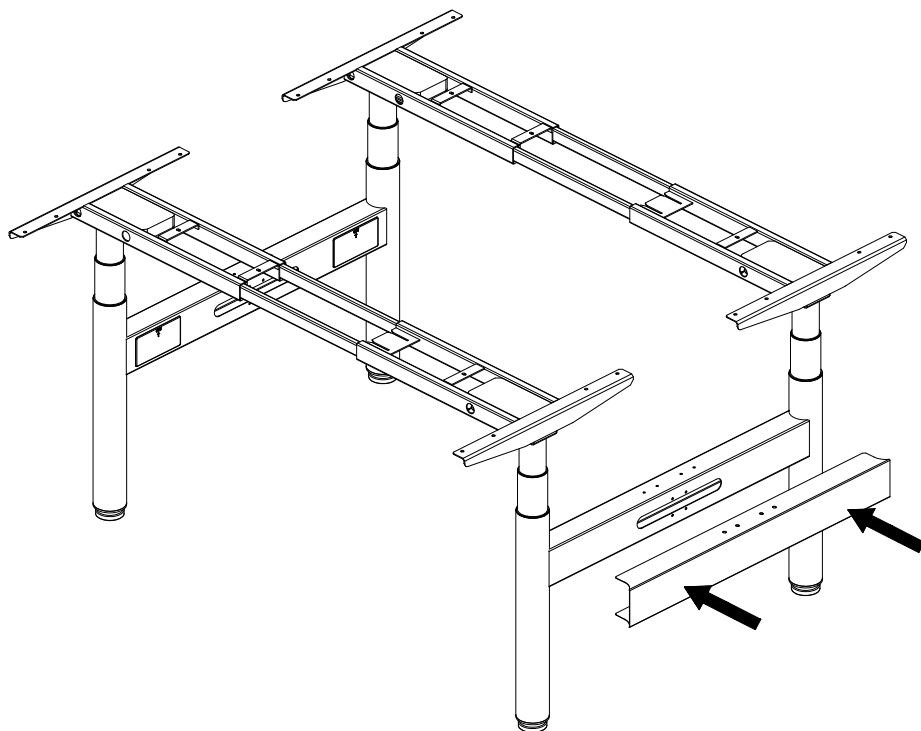

Step 2

Use the bolts M6x10 from the cartons of HAPEA2UF, fix it with the screen brackets together

