


Assembly instructions

Step 1

Insert the sleeve to the cable tray arm, please notice the direction of the left and right

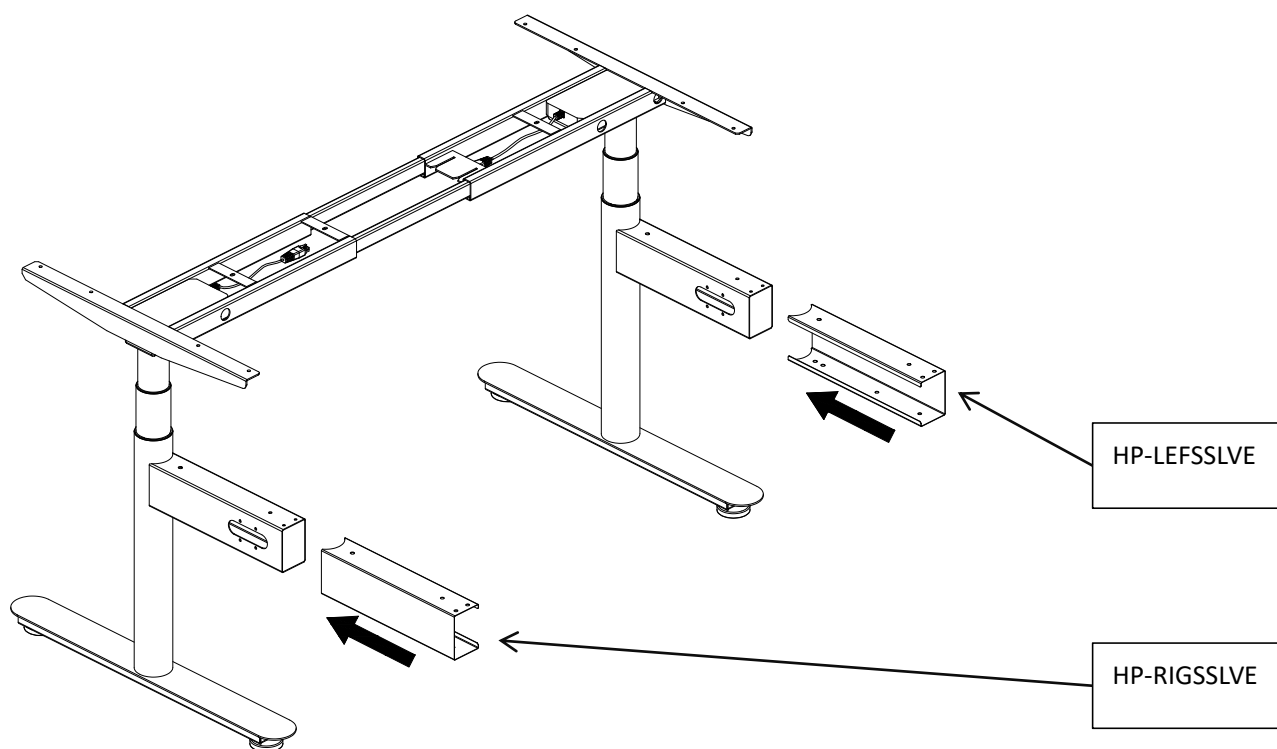

Step 2

Use the bolts M6x10 from the cartons of cable tray arm(HP-SSARM), fix it like the image showed.

