


Assembly instructions


Step 1

Insert the sleeve to the cable tray arm, please notice the direction of the left and right

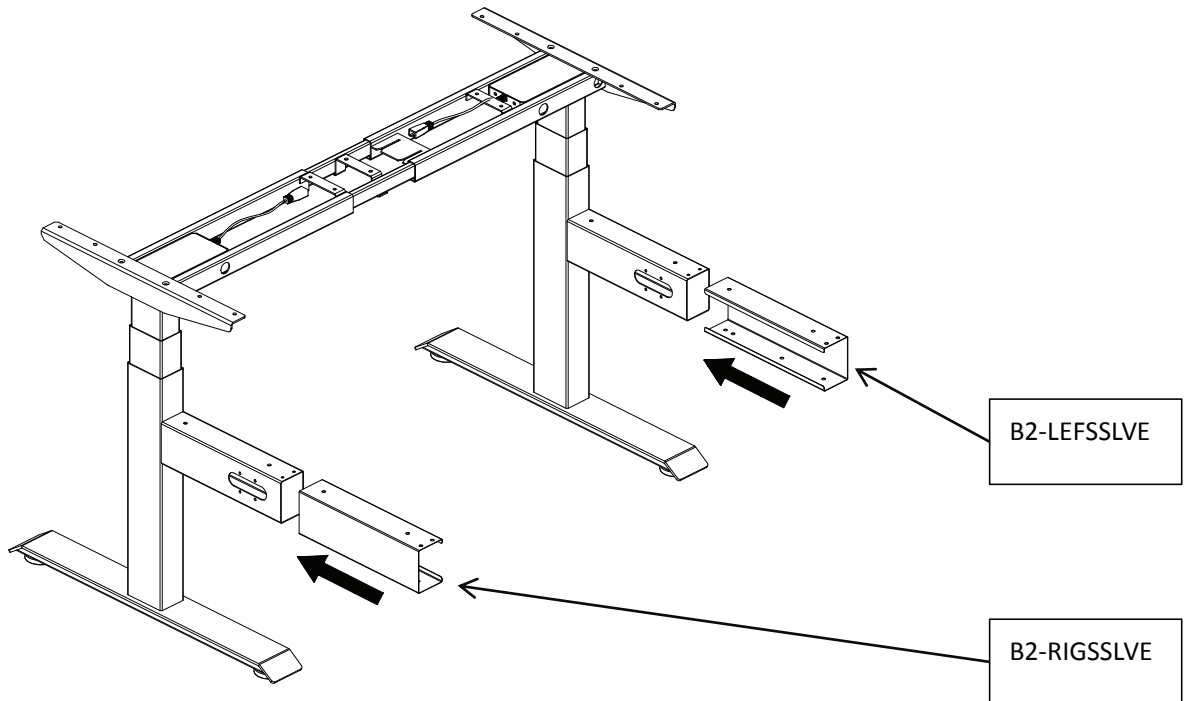

Step 2


Use the bolts M6x10 from the cartons of cable tray arm(B2-SSARM), fix it like the image showed.

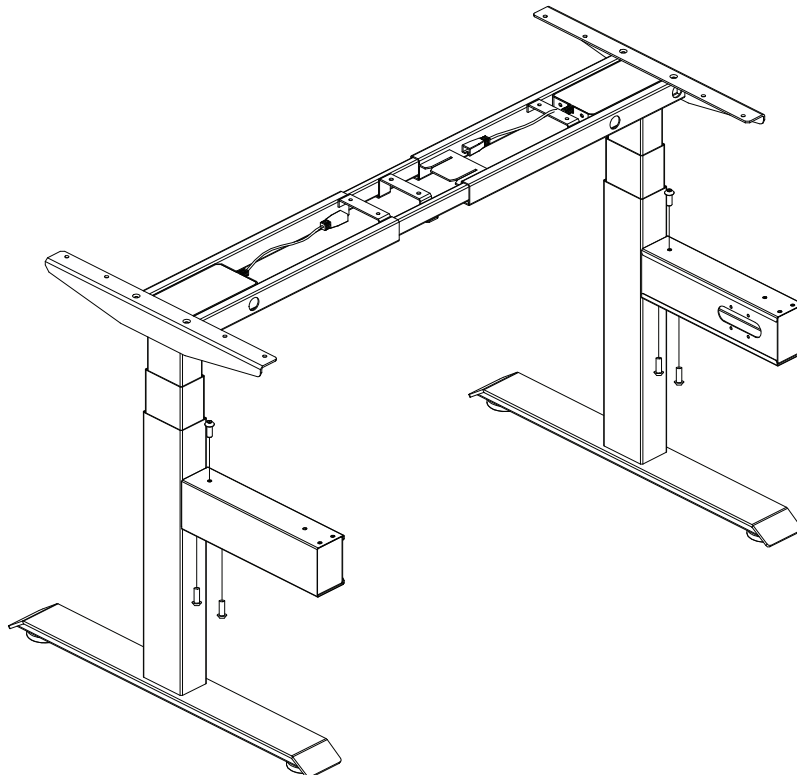

Assembly instructions


Step 1

Insert the sleeve to the cable tray arm, please notice the direction of UP and DOWN

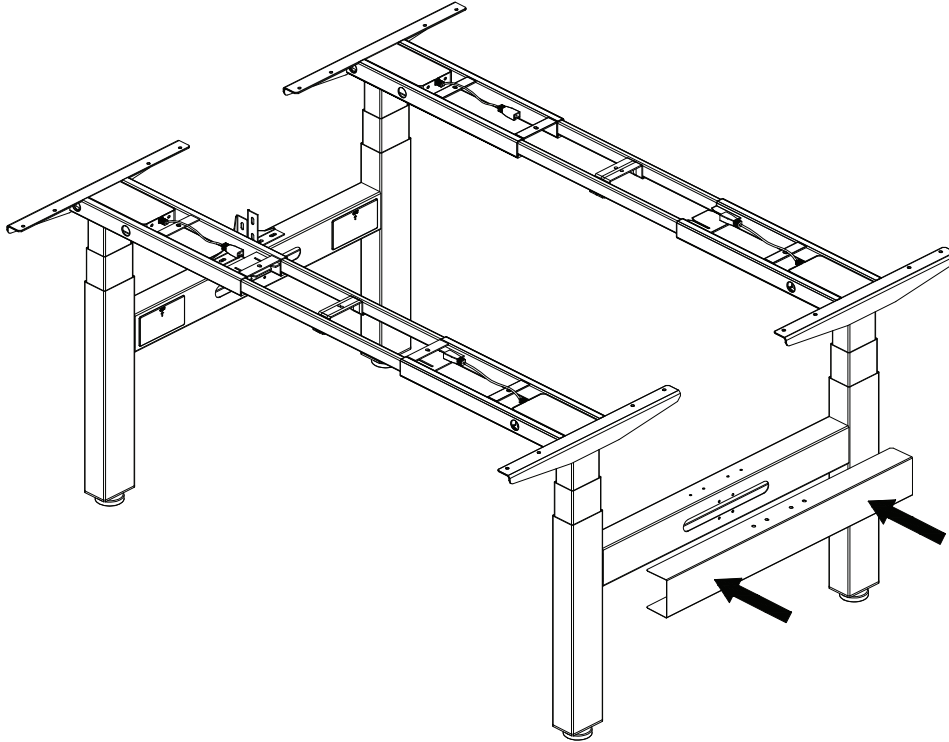

Step 2


Use the bolts M6x10 from the cartons of BPEA2UF, fix it with the screen brackets together

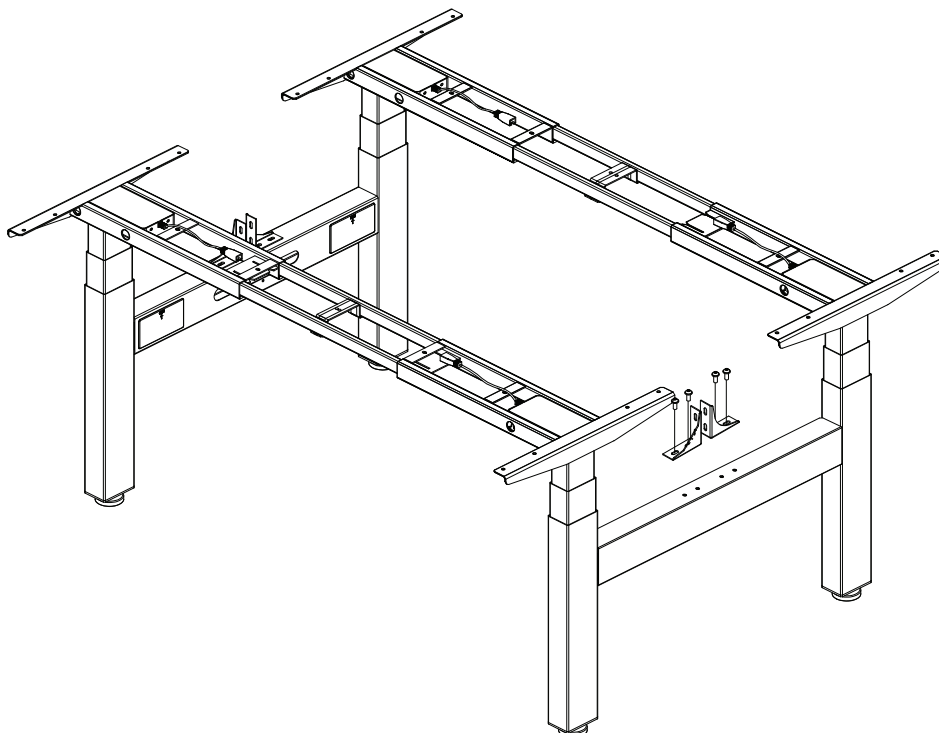

Assembly instructions


Step 1

Insert the sleeve to the cable tray arm, please notice the direction of the left and right

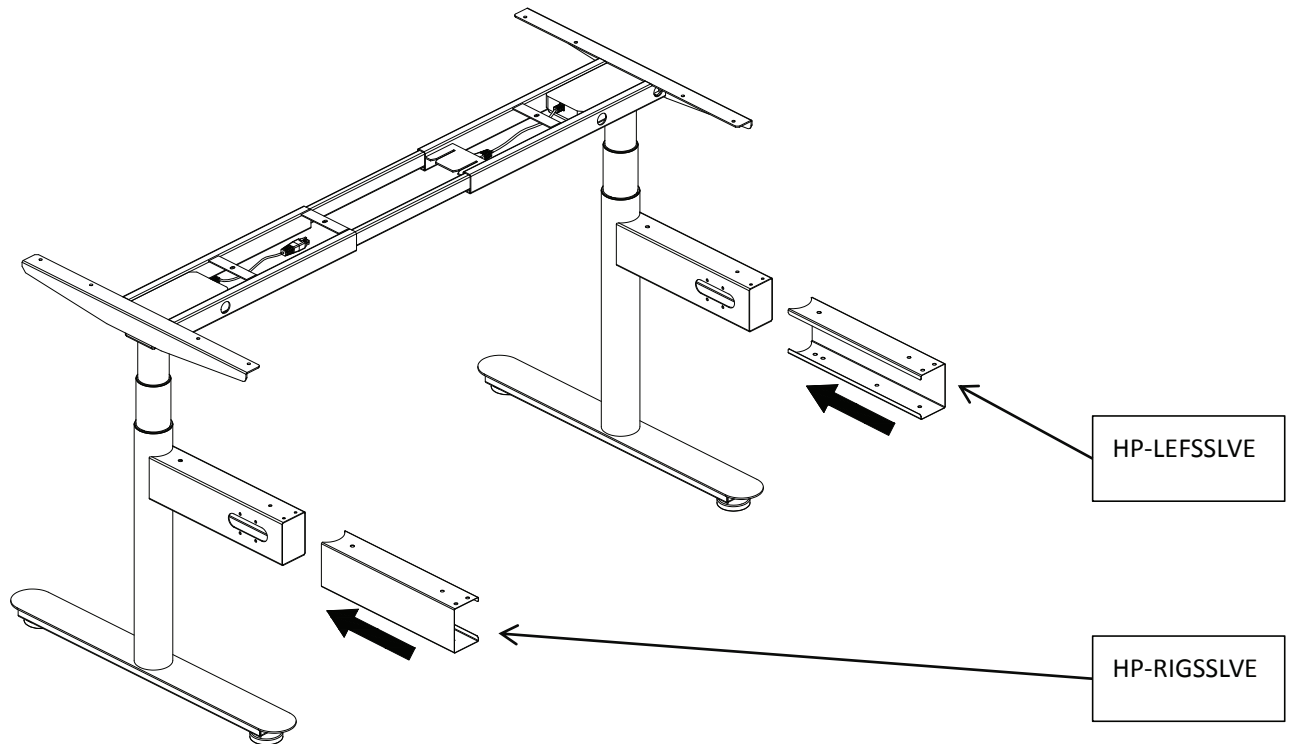

Step 2

Use the bolts M6x10 from the cartons of cable tray arm(HP-SSARM), fix it like the image showed.

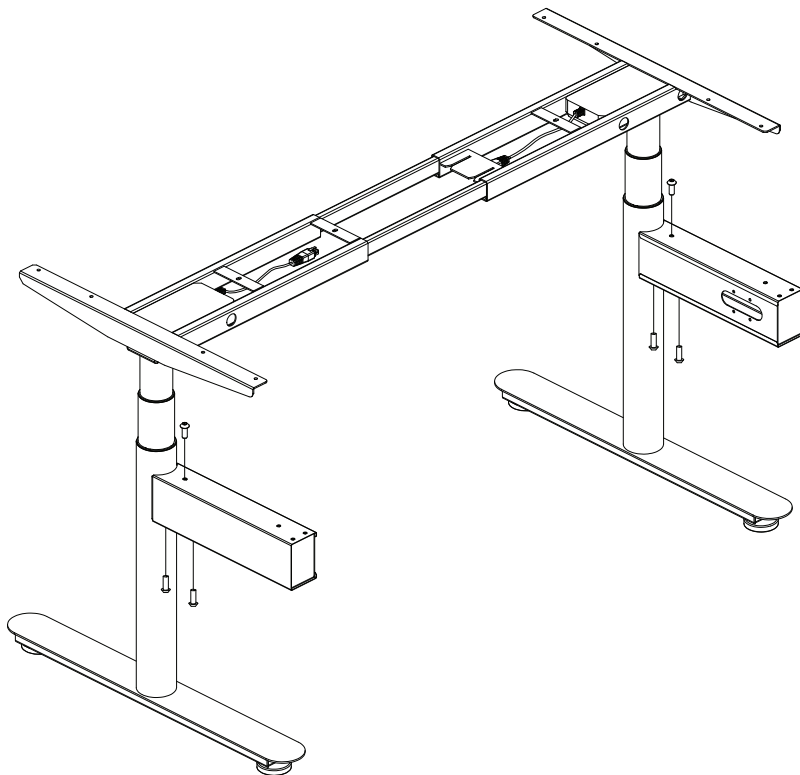


HP-BTBSLVE

Assembly instructions

Step 1

Insert the sleeve to the cable tray arm, please notice the direction of UP and DOWN

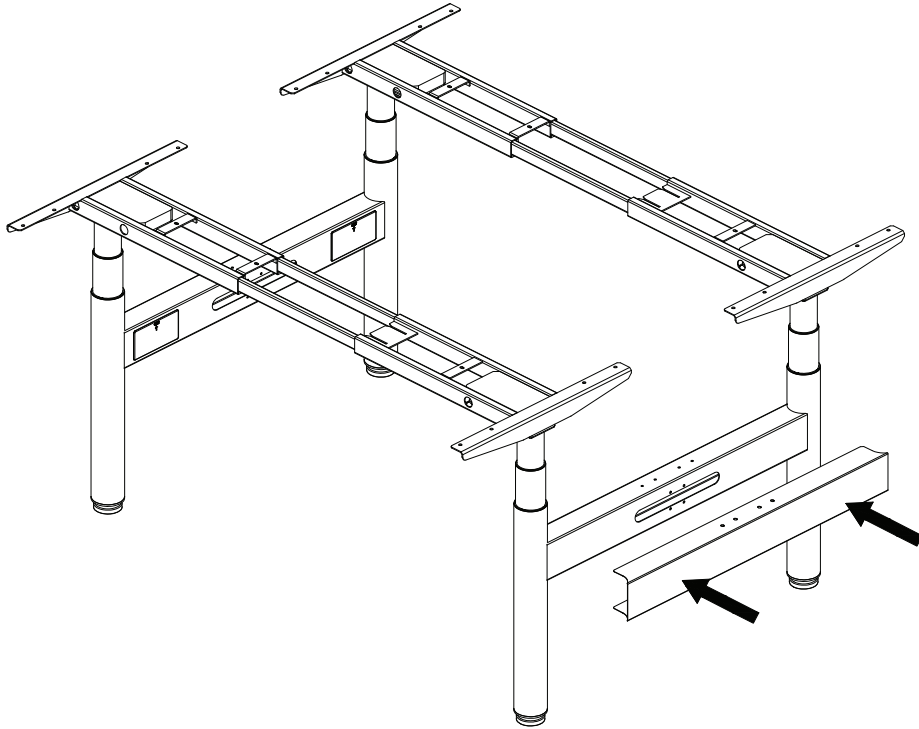

Step 2

Use the bolts M6x10 from the cartons of HAPEA2UF, fix it with the screen brackets together

