



# Assembly Instructions


MODEL NO: SP2FD-18

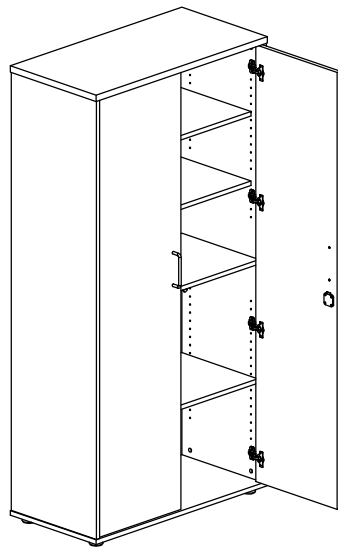

Pin 6×35 1 25PCS	Cam 2 25PCS
Cam Cover 3 25PCS	Shelf Pin 4 12PCS
Hinge(Inset) 5 8PCS	Handle AM-H08-128 6 2PCS
Wood Screw 4×16 7 50PCS	Handle Screw 4×25 8 4PCS
Lock Catcher 9 1PCS	ADJ. Feet ø42×25H 10 4PCS
Lock 11 1PCS	Wood Screw 3.5×13 12 18PCS
Wood Screw 4×20 13 4PCS	73×23×15 14 2PCS
ø6×40 15 2PCS	Wood Screw 4×40 16 2PCS

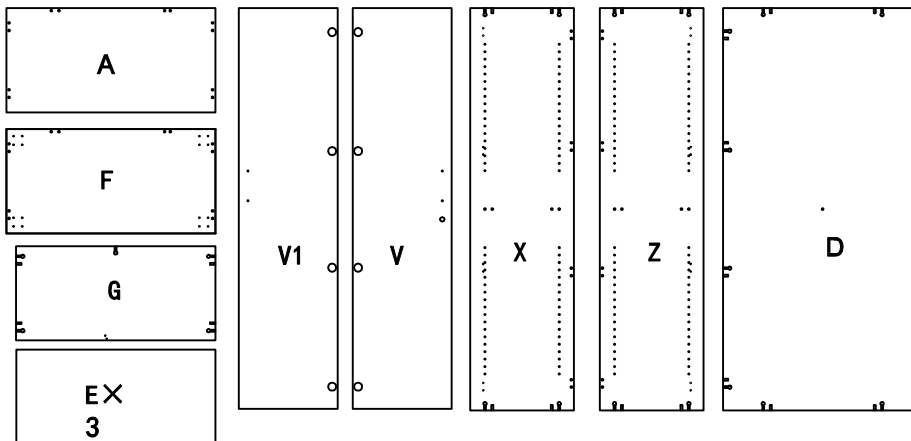


## STEP1

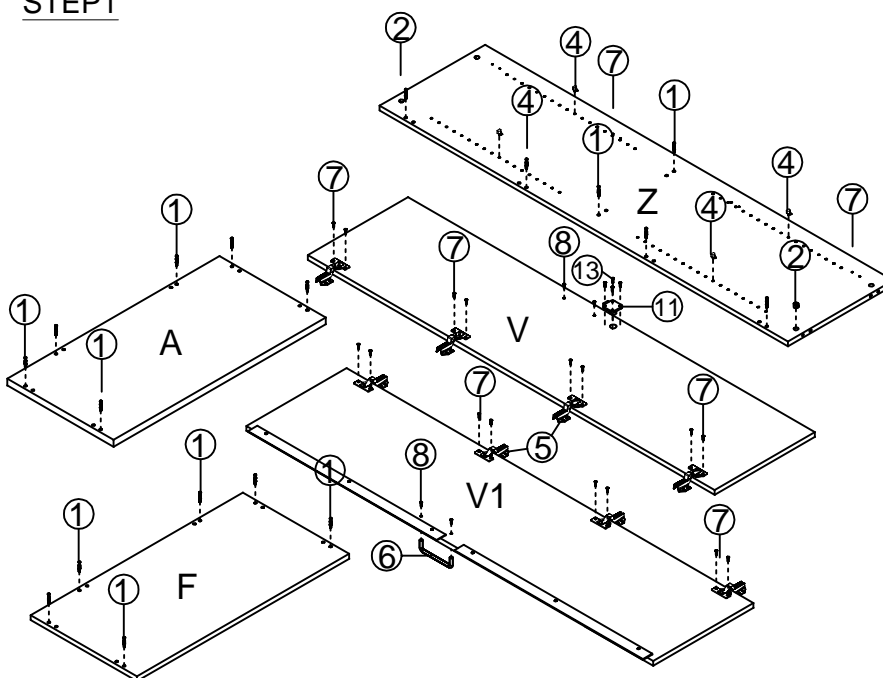


## STEP2

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

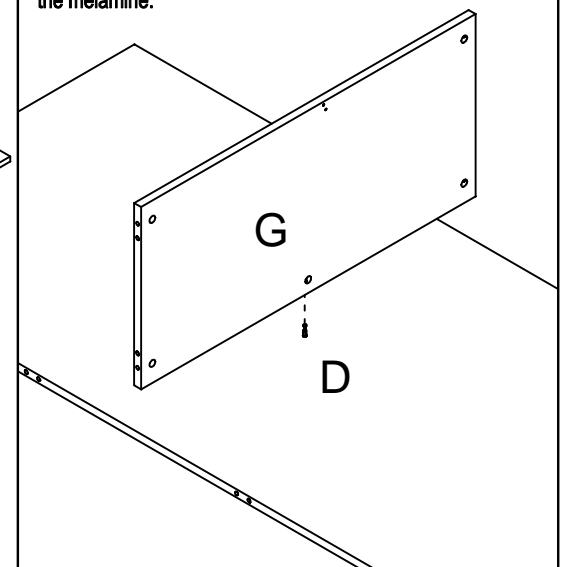

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



# Assembly Instructions


MODEL NO: SP2FD-18

## STEP3

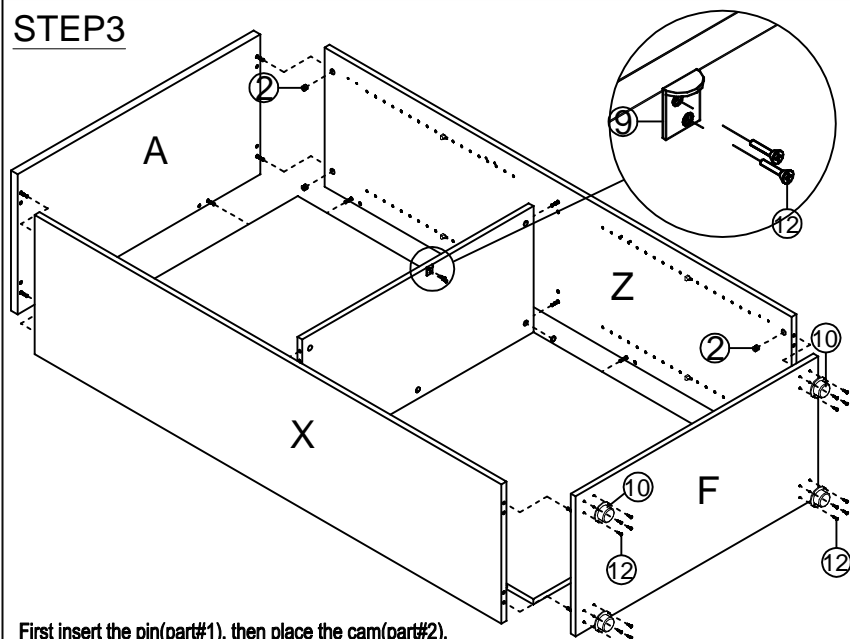


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.



## STEP4

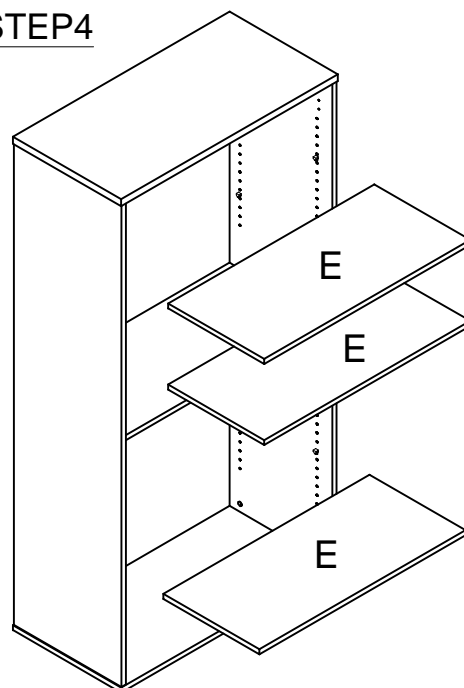


## STEP5

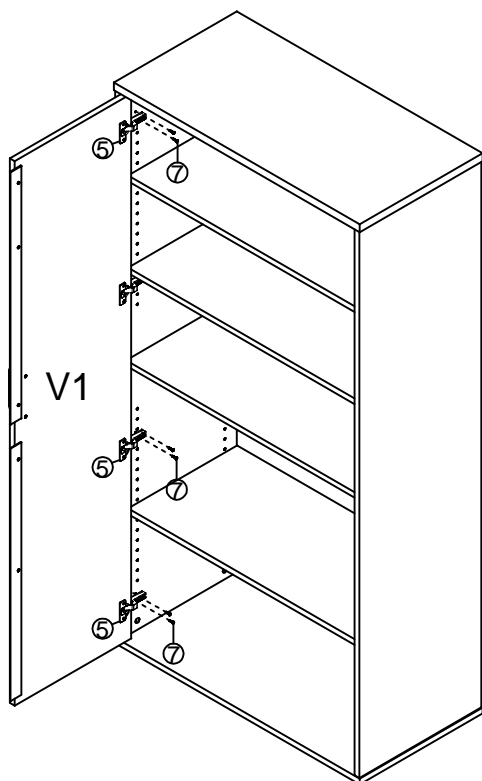


## STEP6

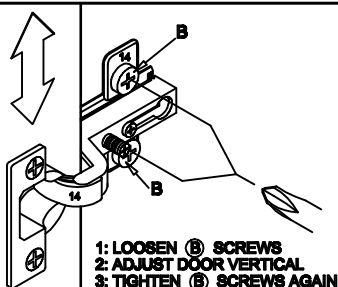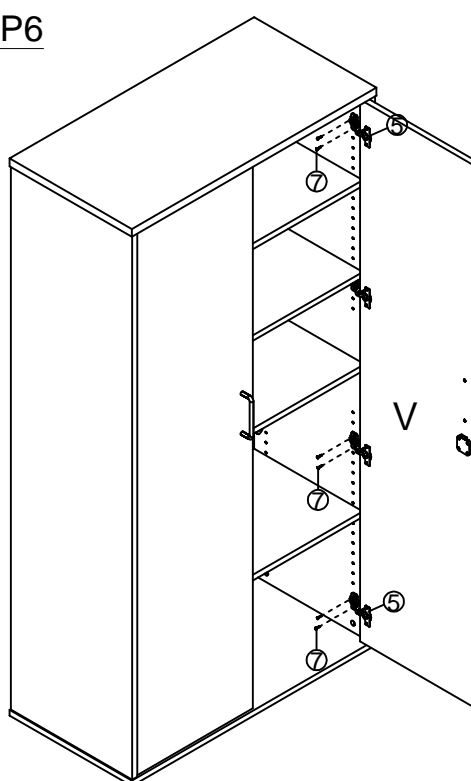

1: LOOSEN (B) SCREWS  
2: ADJUST DOOR VERTICAL  
3: TIGHTEN (B) SCREWS AGAIN

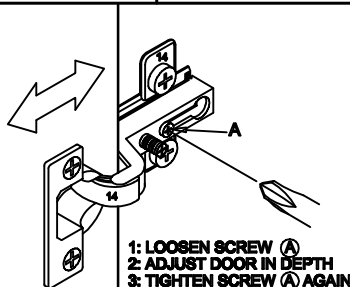


1: LOOSEN SCREW (A)  
2: ADJUST DOOR IN DEPTH  
3: TIGHTEN SCREW (A) AGAIN

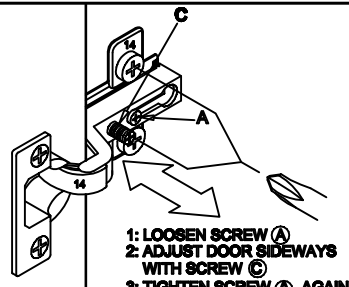

1: LOOSEN SCREW (A)  
2: ADJUST DOOR SIDWAYS  
WITH SCREW (C)  
3: TIGHTEN SCREW (A) AGAIN

### IMPORTANT NOTE:

Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start to assemble. Don't tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children



# Assembly Instructions

## MODEL NO:SP2FD-18

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

### STEP7

Make a mark with a pencil

WALL

WALL

14

### STEP8

WALL

Drill holes at the marks with an electric drill

### STEP9

WALL

15

### STEP10

WALL

16

### STEP11

WALL

17

### ⚠ WARNING



#### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture




This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>


#### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CSC2FD

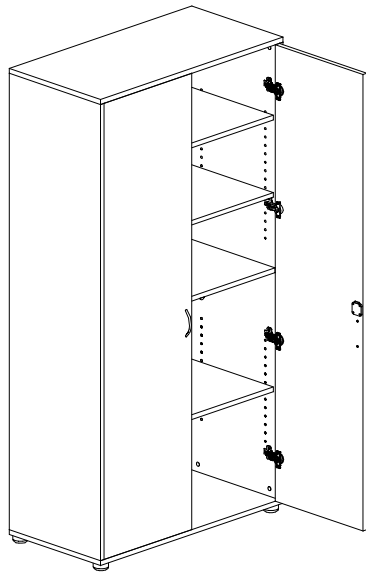


Pin 6x35 1 25PCS	Cam 2 25PCS	Lock 11 1PCS
Cam Cover 3 25PCS	Shelf Pin 4 12PCS	Wood Screw 4x20 12 4PCS
Hinge(Inset) 5 8PCS	T-Handle 6 2PCS	73x23x15 13 2PCS
Handle Screw 4x22 7 4PCS	Wood Screw 4x18 8 50PCS	ø6x40 14 2PCS
Wood Screw 3.5x13 9 18PCS	ADJ. Feet ø42x25H 10 4PCS	Wood Screw 4x40 15 2PCS


## STEP1

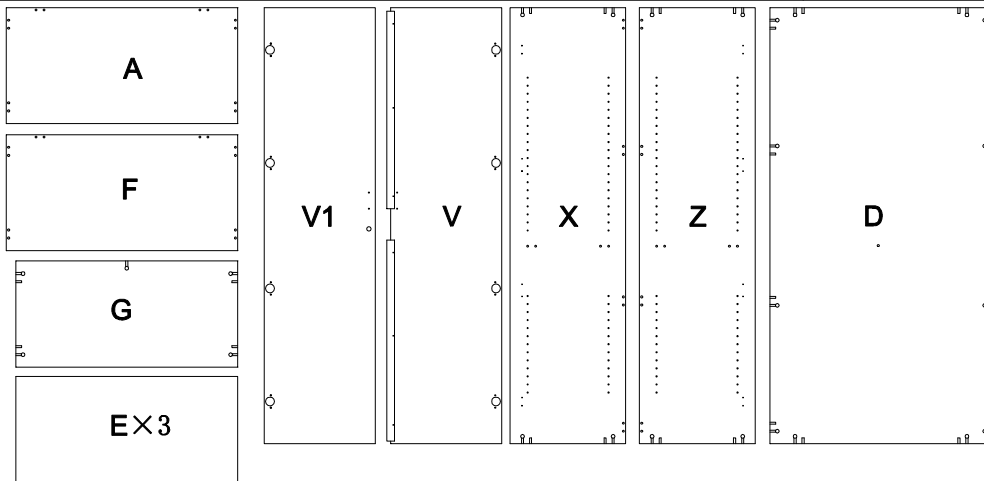

## STEP2

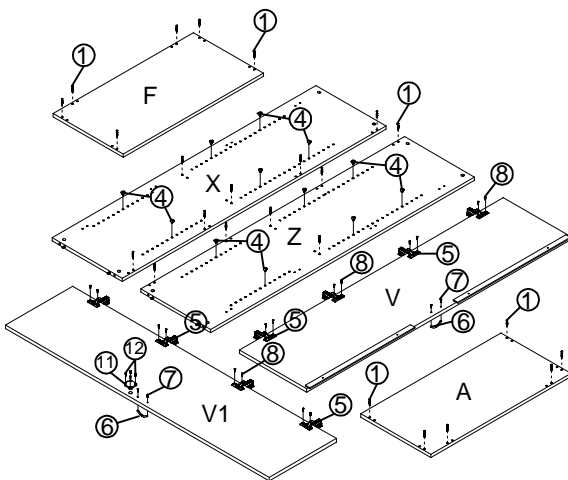


## STEP3

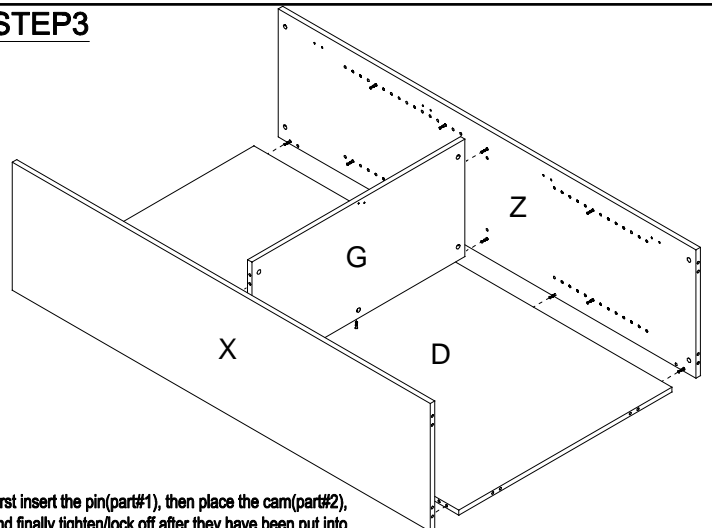

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO:CSC2FD


## STEP4

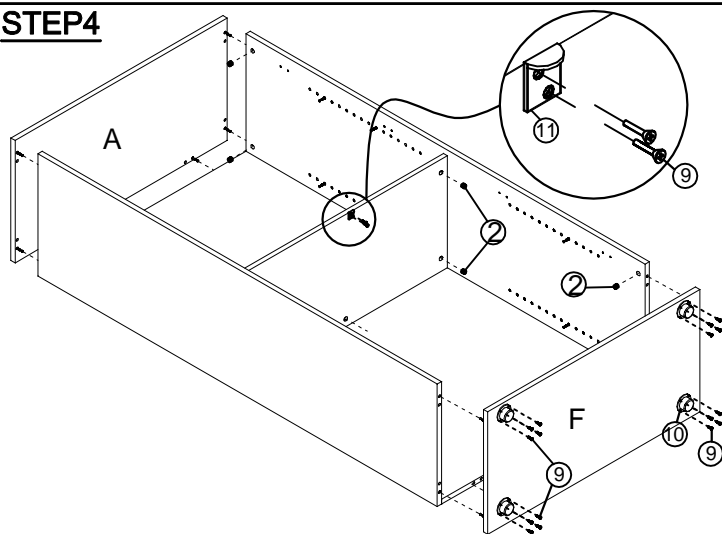





## STEP5

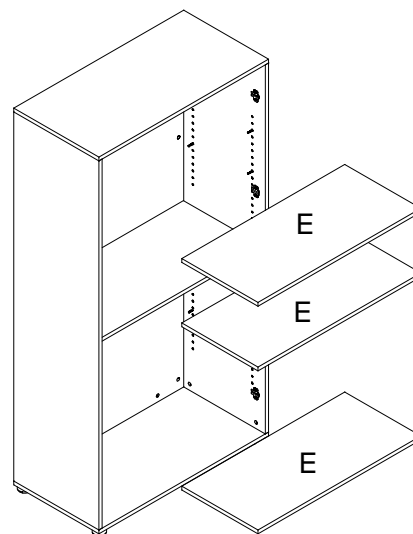

## STEP6

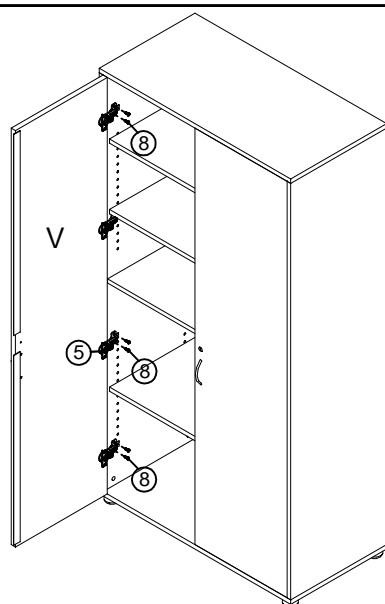


## STEP7

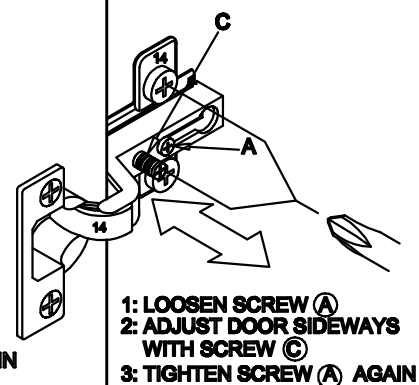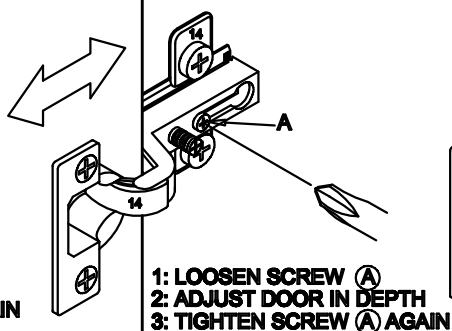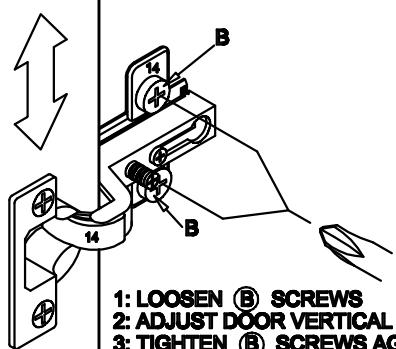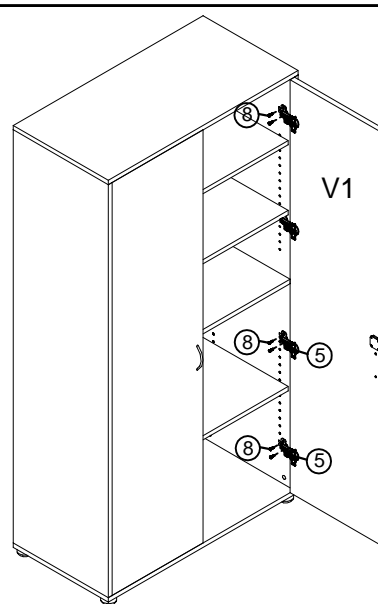

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO: CSC2FD


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

## STEP8

Make a mark with a pencil

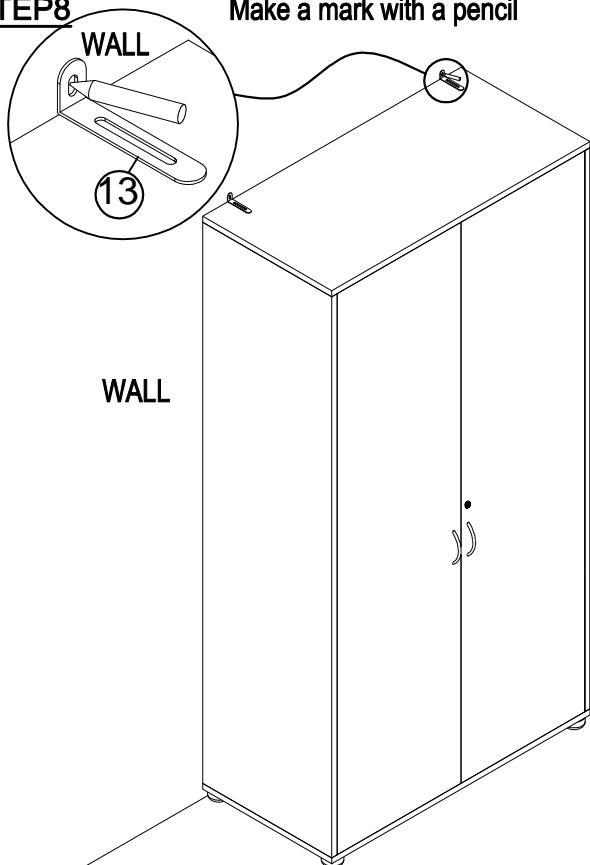


## STEP9

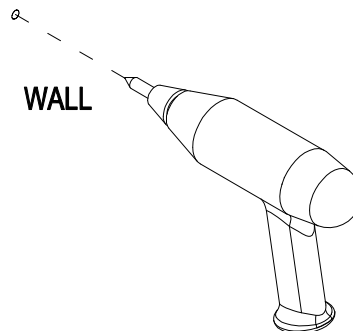


Drill holes at the marks with an electric drill

## STEP10

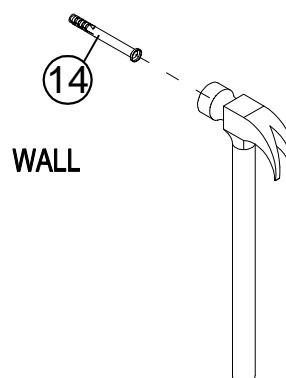


## STEP11

WALL

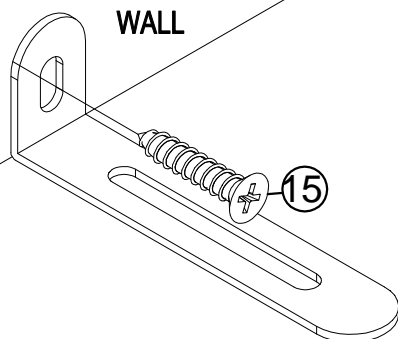

## STEP12

WALL

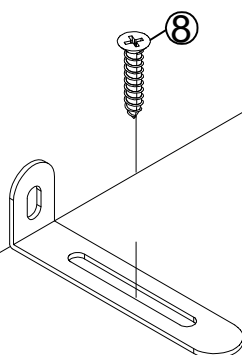

## ⚠ WARNING



### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

