
## Assembly Instructions MODEL NO: SPBC18 SPBC18-N

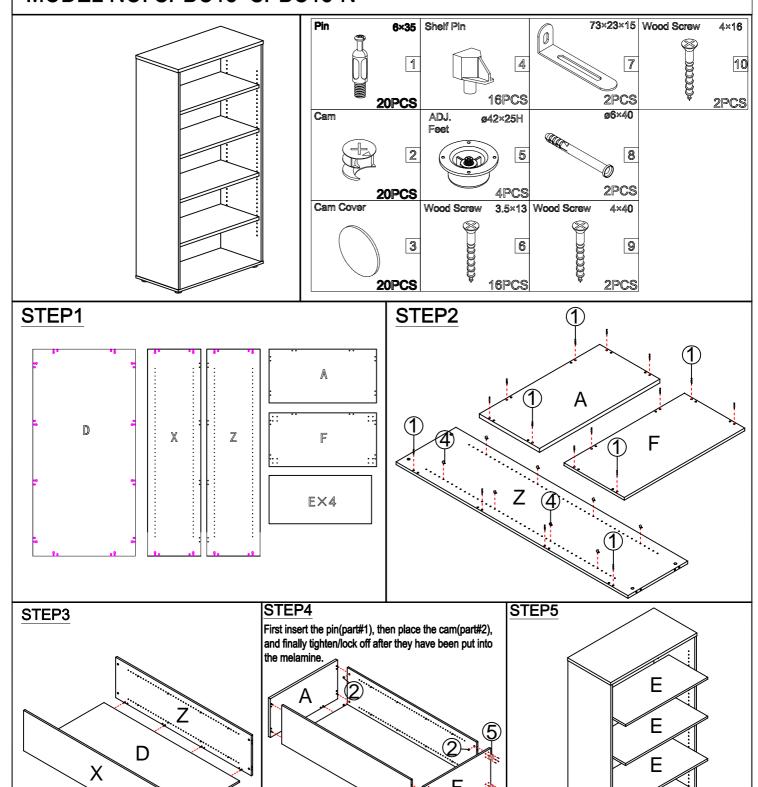

## **IMPORTANT NOTE:**

the melamine.


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



## Assembly Instructions MODEL NO: SPBC18 SPBC18-N

The warning sticker provided within this hardware kit MUST be attached to the piece furniture in a place that is 100% visible when the item is empty.

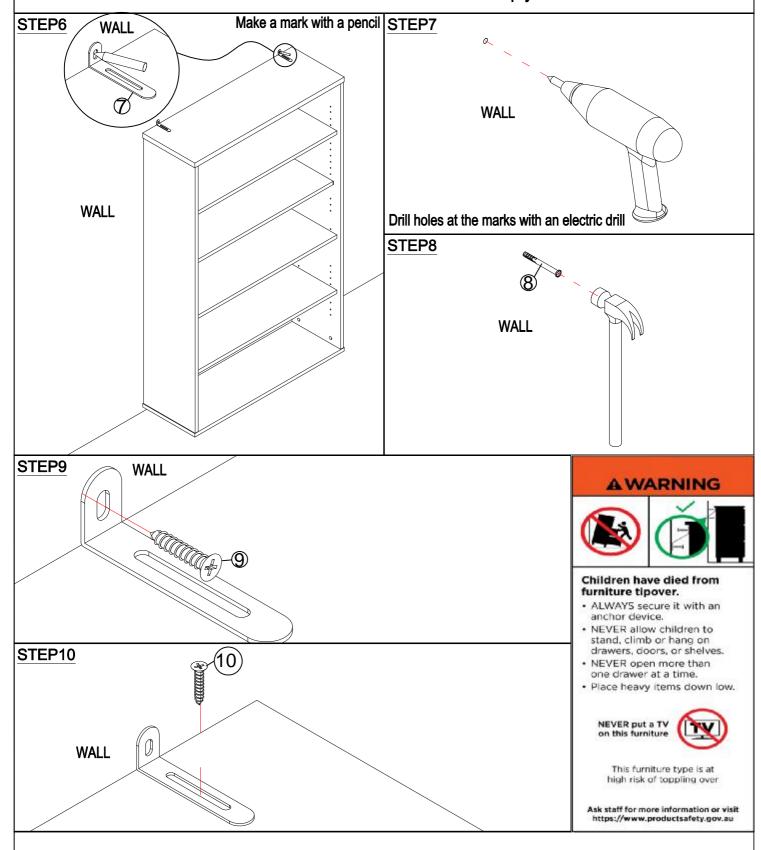

## **IMPORTANT NOTE:**

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

