








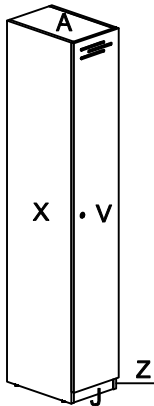








Assembly Instructions


MODEL NO:ML-1 WRML-305/1 WRML-380/1 WRML-305/1-S

	Pin 6×35  23PCS	Hinge (full-overlay)  4PCS	Lock  1PCS	Wood Screw 4×20  4PCS	 2PCS
	Cam  23PCS	Wood Screw 4×16  30PCS	Lock Catcher  1PCS	Cloth Rail 269W  1PCS	Wood Screw 4×40  2PCS
	Cam Cover  23PCS	ADJ. Feet ø18×5H  4PCS	Wood Screw 3.5×13  2PCS	 2PCS	


STEP1

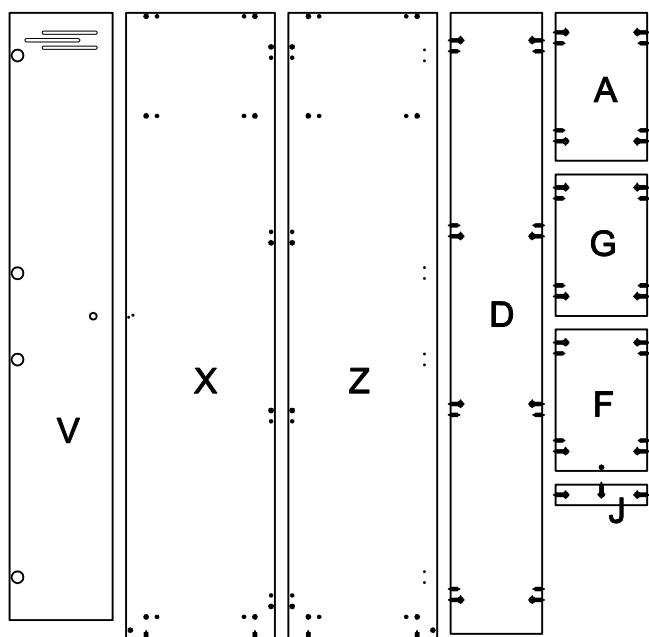

STEP2

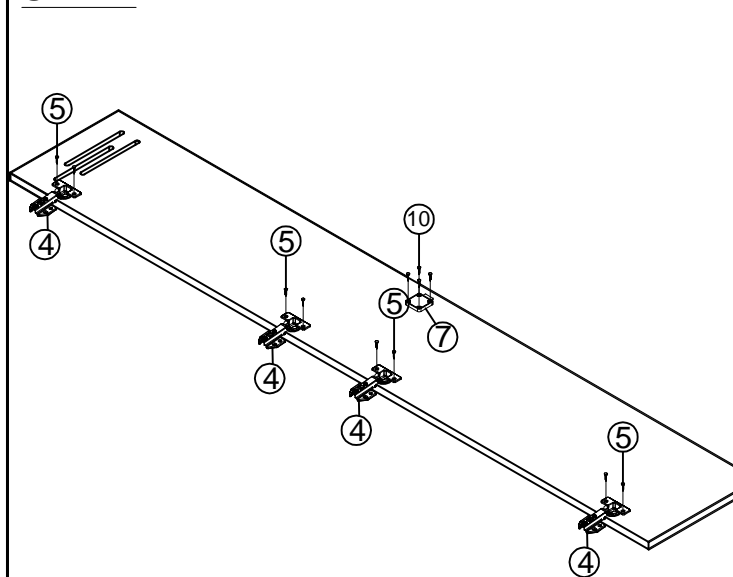


STEP3

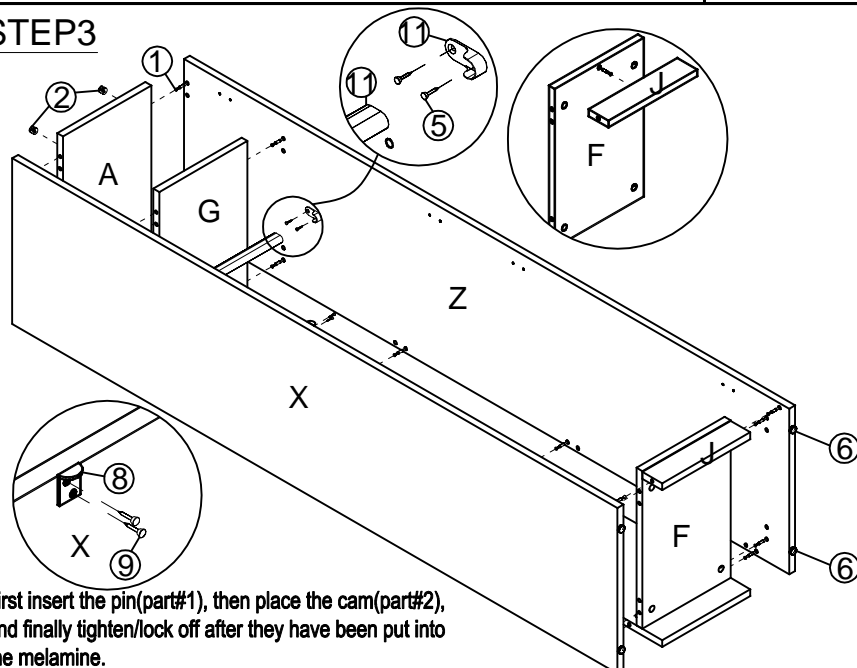


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

STEP4

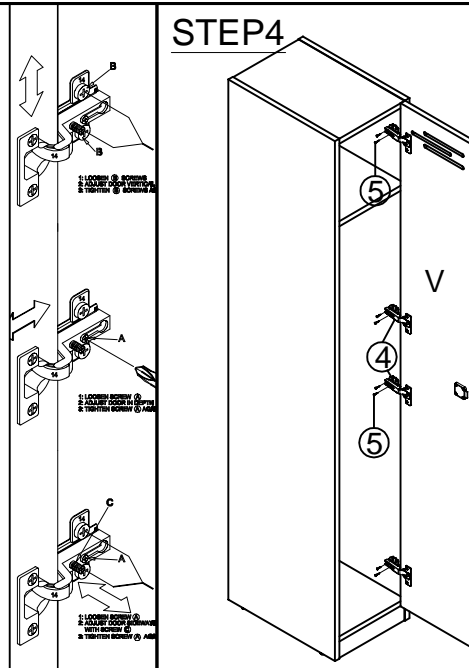

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO: ML-1 WRML-305/1 WRML-380/1
WRML-305/1-S


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

STEP5

Make a mark with a pencil

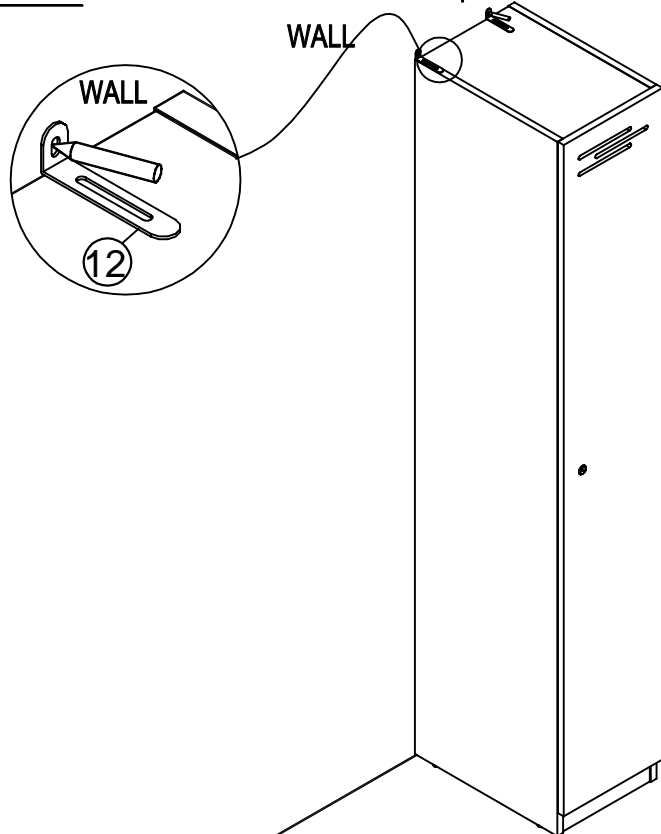


STEP6

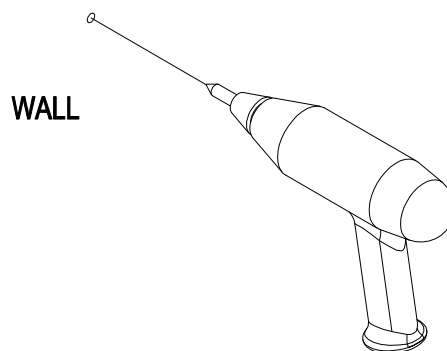


Drill holes at the marks with an electric drill

STEP7

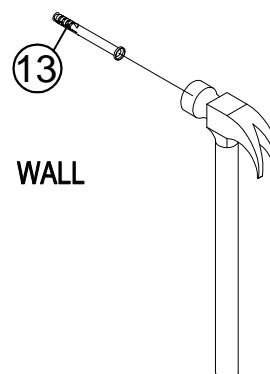


STEP8

WALL

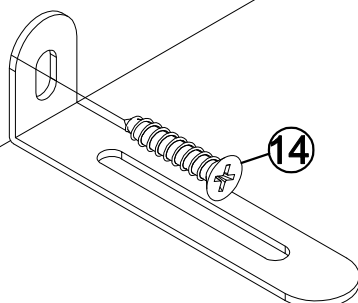

STEP9

WALL

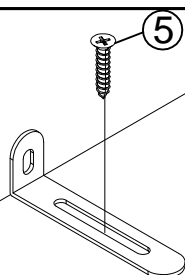

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

