



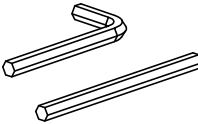





Assembly Instructions

MODEL NO:BS120 T/B

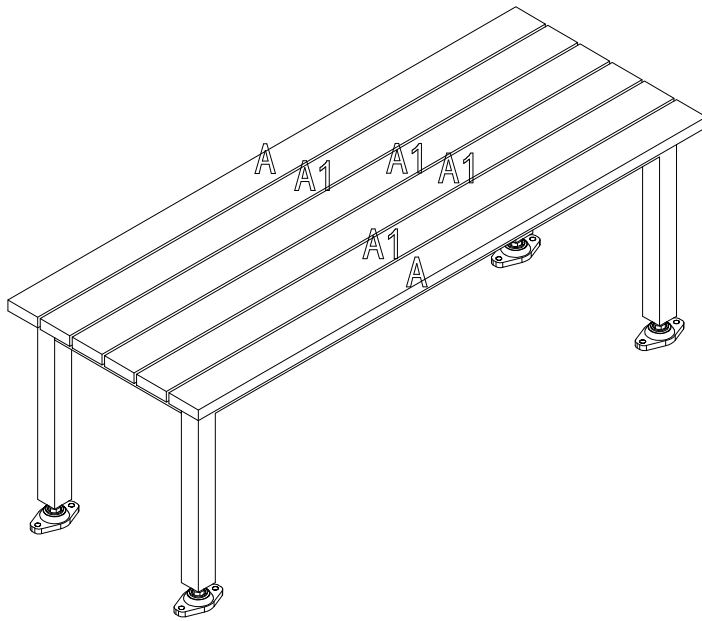


Bolt Screw 8×16	12PCS	Bolt Screw 6×12	12PCS
	1		4
Allen Wrench M5	1PCS		5
	2		8PCS
Bolt Screw 6×50	6PCS		
	3		


STEP1

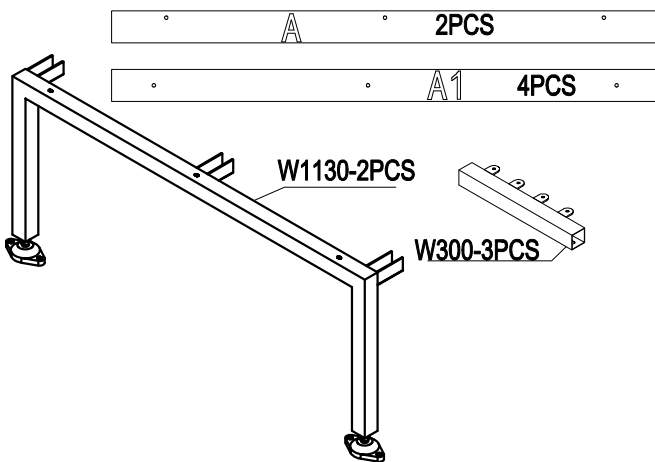


STEP2

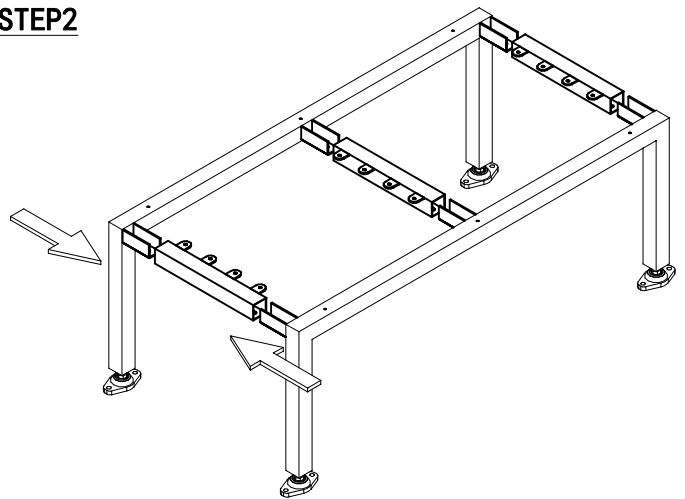

STEP4

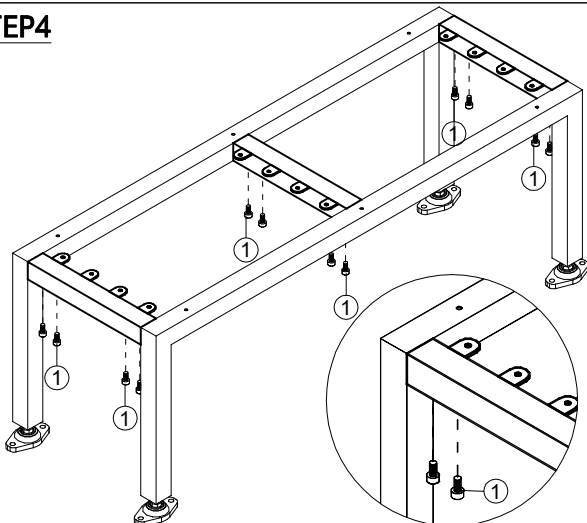

STEP6

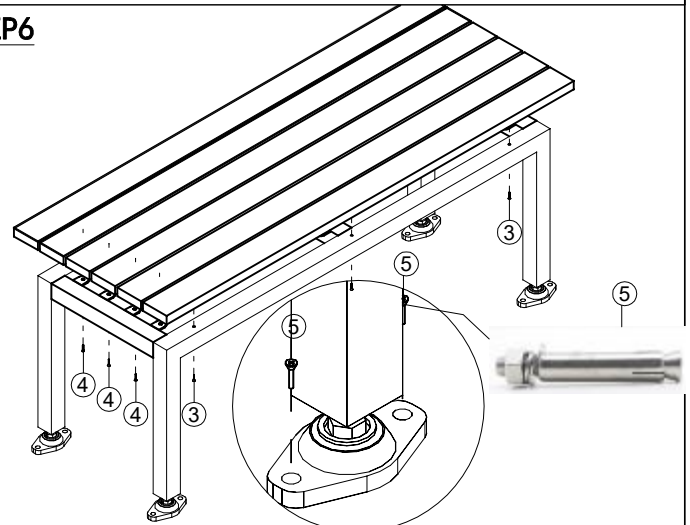

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
 - Check to be sure that you have all parts and hardware.
 - Remove all wrapping materials, including staples & packing straps before you start to assemble.
 - Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

