
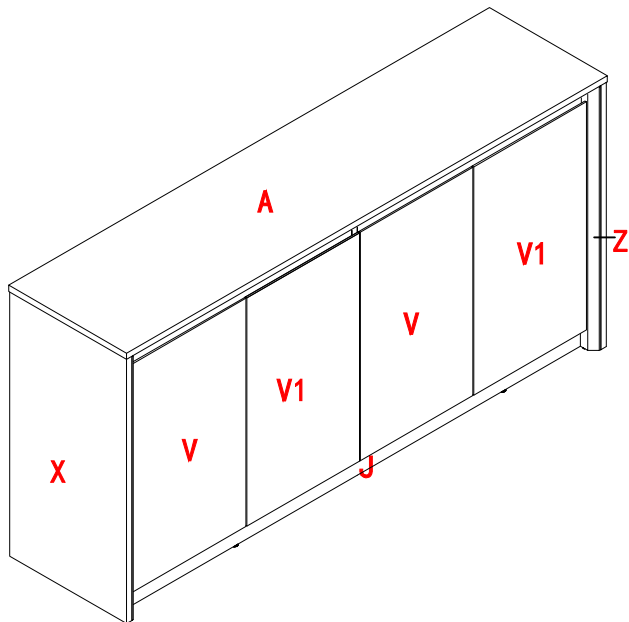



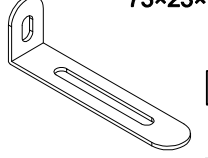






# Assembly Instructions

MODEL NO:M2-LC188

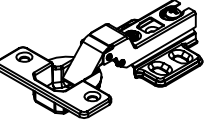


|                                                                                                                               |                                                                                                                                                        |                                                                                                                                          |
|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Pin</b><br><br>6×35<br><b>1</b><br>38PCS  | <b>Shelf Pin</b><br><br><b>5</b><br>8PCS                            | <b>Allen Wrench</b> <b>M4</b><br><br><b>9</b><br>1PCS |
| <b>Cam</b><br><br><b>2</b><br>38PCS          | <b>ADJ. Feet</b> $\varnothing 18 \times 5H$<br><br><b>6</b><br>8PCS | <br><b>10</b><br>73×23×15<br>2PCS                     |
| <b>Cam Cover</b><br><br><b>3</b><br>38PCS    | <b>Wood Screw</b> 4×16<br><br><b>7</b><br>50PCS                     | <br><b>11</b><br>$\varnothing 6 \times 40$<br>2PCS    |
| <b>Hinge(inset)</b><br><br><b>4</b><br>4PCS | <b>Hinge(half-overlay)</b><br><br><b>8</b><br>4PCS                 | <b>Wood Screw</b> 4×40<br><br><b>12</b><br>2PCS      |

## STEP1

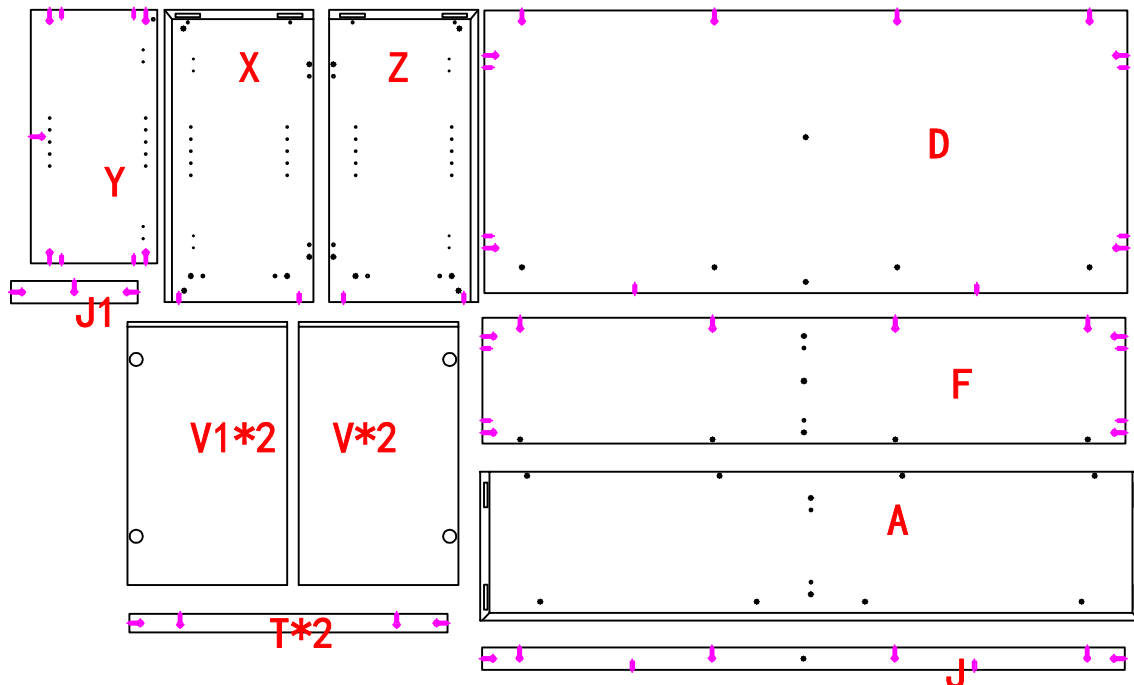

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO:M2-LC188

## STEP2

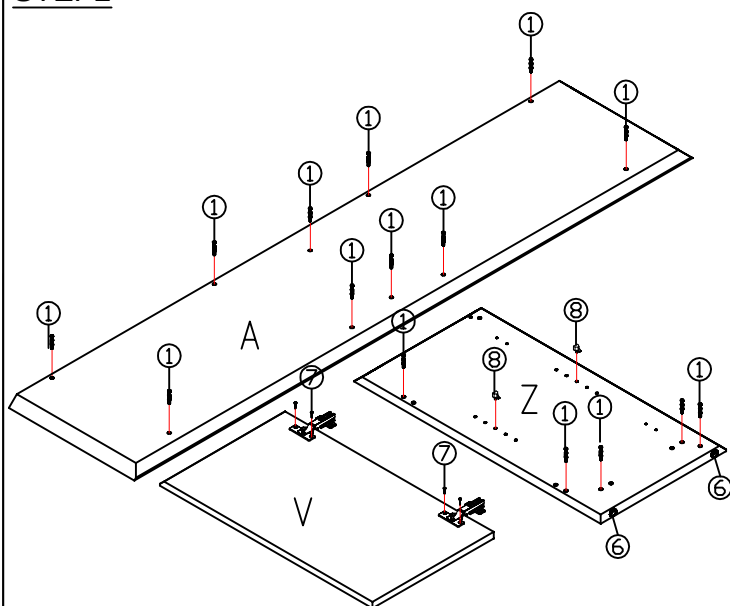


## STEP3

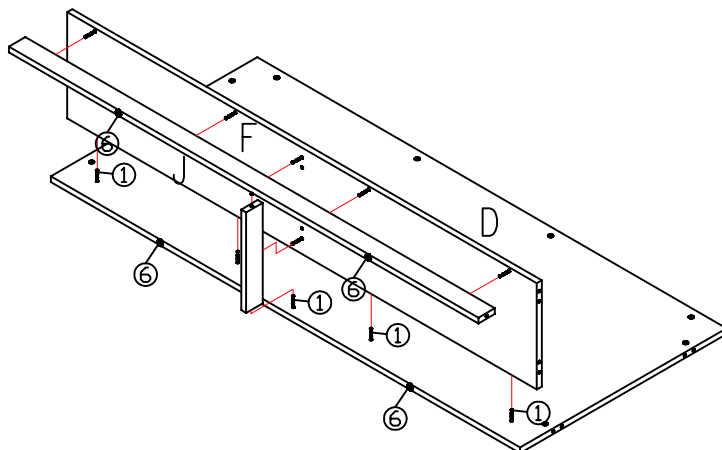


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

## STEP4

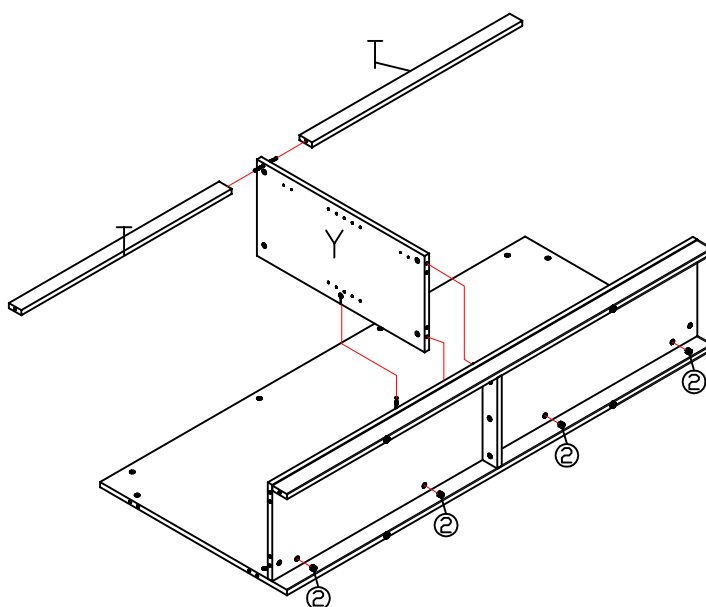

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.


## STEP5

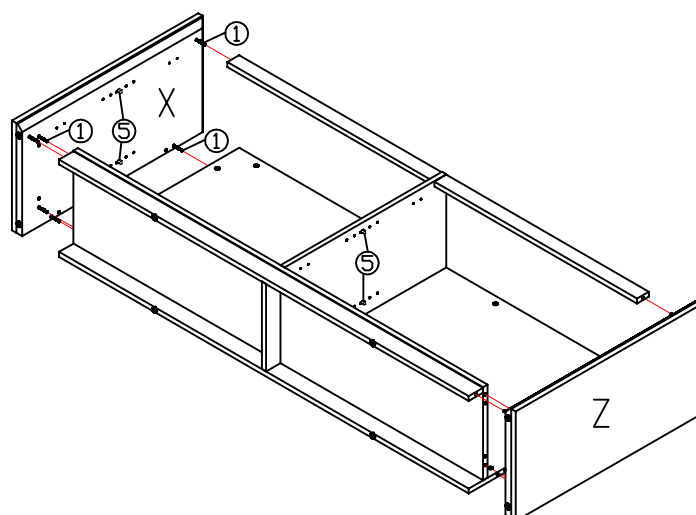

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



# Assembly Instructions


MODEL NO:M2-LC188

## STEP6

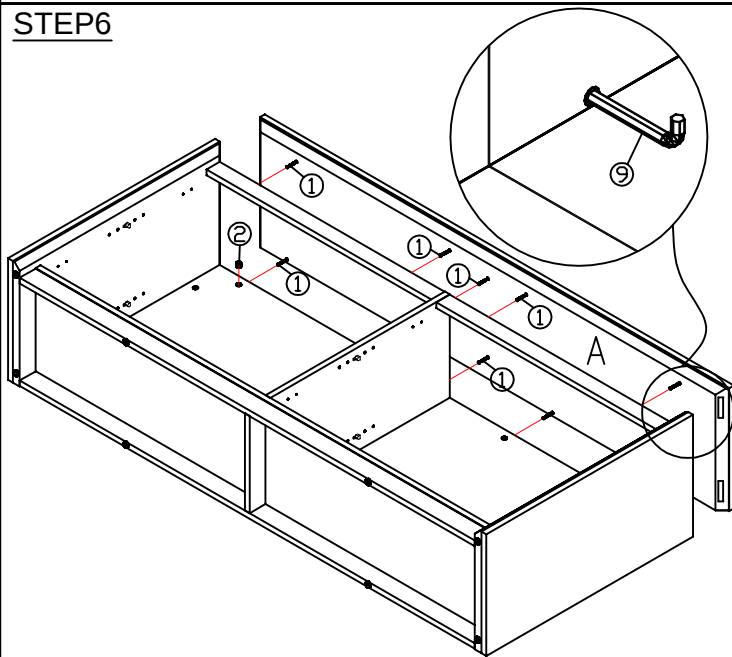


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.



## STEP7

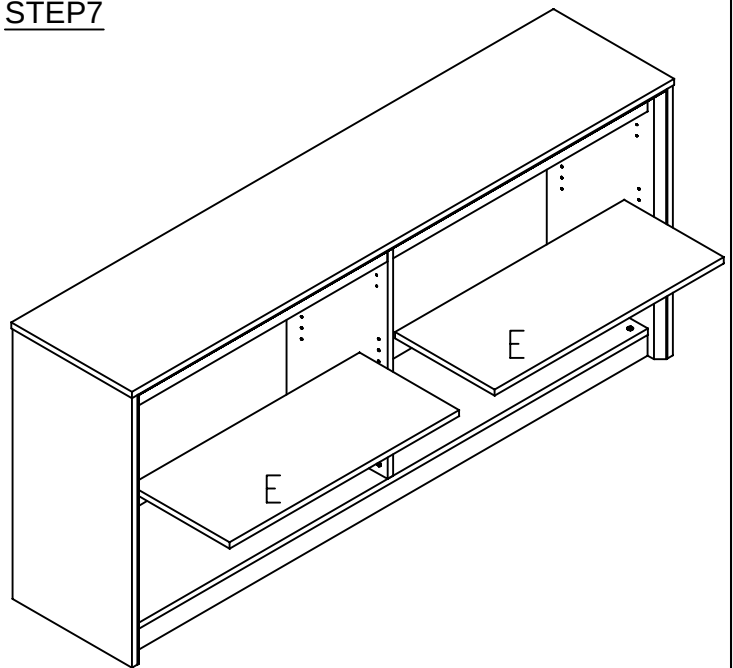

## STEP8

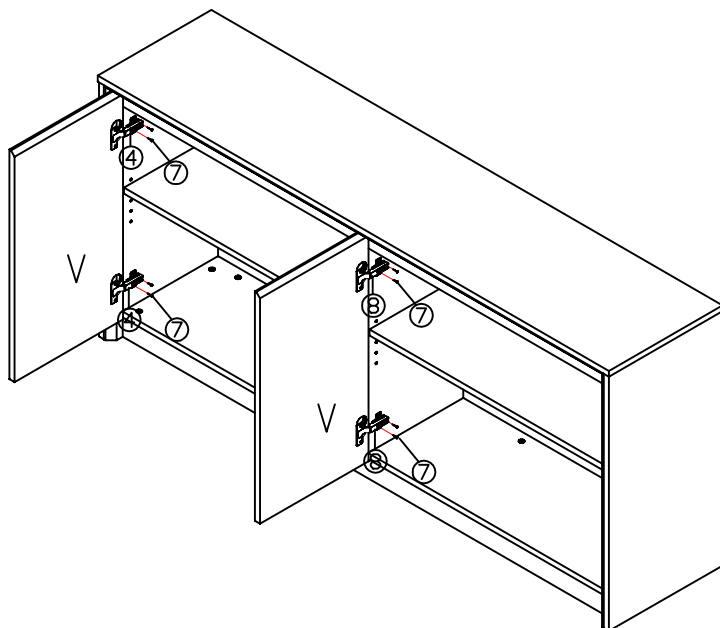

## STEP9

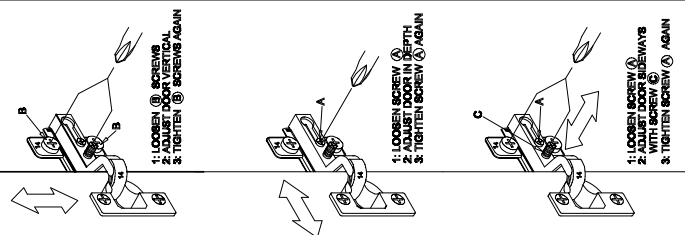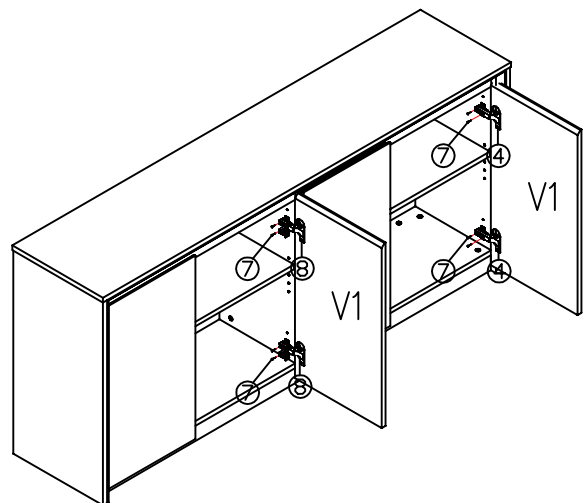

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




# Assembly Instructions

MODEL NO:M2-LC188


The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

## STEP10

Make a mark with a pencil

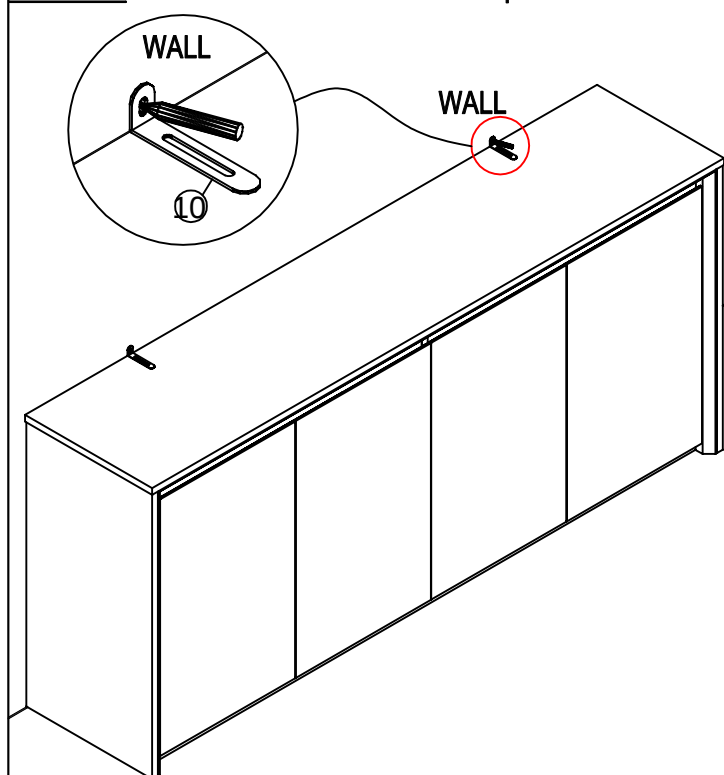


## STEP11

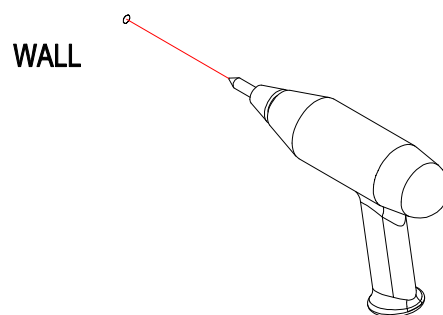


Drill holes at the marks with an electric drill


## STEP12

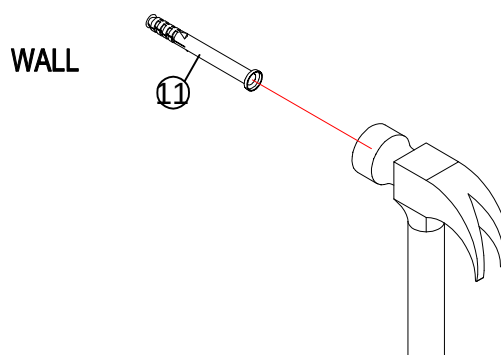

## STEP13

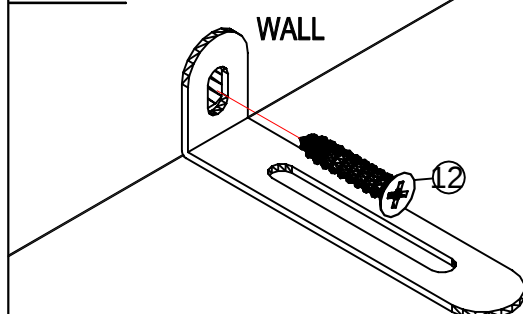

## STEP14

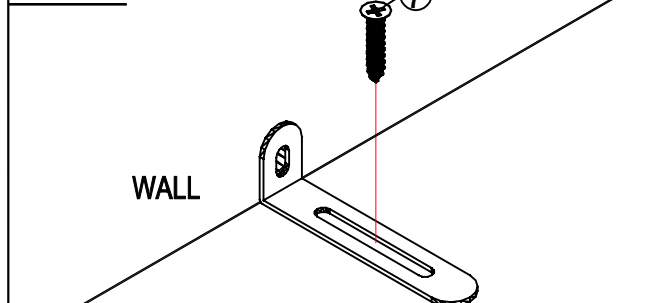

## WARNING



### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over

Ask staff for more information or visit <https://www.productsafety.gov.au>

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

